

LEDs

1. Power Indicator: Steady green when power on, blinking green when the call is ringing.

2. Line Keys

Steady green: during the conversation, or plan to dial a call.

Blinking red: the call is ringing.

Off: idle interface

Place a call

Three ways to make a call:

- 1) Handset:** Pick up the handset; enter the number, and then press the send soft key or press **#**.
- 2) Speaker:** Press **[Speaker]** or the line keys; enter the number, and then press the send soft key or press **#**.
- 3) Headset:** Press **[Headset]**; enter the number, and then press the send soft key or press **#**.

Note: You can also use **Contacts** or **call log** to dial the number you want, press place the call by the three ways mentioned. More, you can also alternate the mode during the call.

End a call

To end a call in three different modes:

- 1) Handset:** hang up the handset or press the cancel soft key.
- 2) Speaker:** press **[Speaker]**, or press the cancel soft key
- 3) Headset:** press the cancel soft key.

Answer a call

- 1) Handset:** pick up the handset;
- 2) Speaker:** press **[Speaker]**;
- 3) Headset:** press **[Headset]**.

Note: You can also reject the call by press the Reject soft key.

Hold

Press the hold soft key during a call to hold the call,

Resume the soft key to resume the call.

Call Transfer

Blind Transfer

- Press the transfer soft key during the conversation, the call is on hold now.
- Enter the number that transfers to.
- Press the transfer soft key, and now the blind transfer completed.

Attended Transfer (at least one line key set as Auto)

- Press the transfer soft key during the conversation, the call is on hold now.
- Enter the number that transfer to, and press the send soft key or **#**.
- Start the second conversation, press the transfer soft key, then, transfer completed.

Semi-Attended Transfer (at least one line key set as Auto)

- Press the transfer soft key during the conversation, the call is on hold now.
- Enter the number transfer to, and then press **#**, then you can hear the ring tone.
- Press the transfer soft key, and now the Semi-attended transfer completed.

Call Conference

Assuming that A and B are in conversation. A wants to bring C (or D & E) in a conference:

- 1) A press line 2, the call is placed on hold.
- 2) A enter the number of C and then press send soft key or **#**. C answers the call.
- 3) A press the conference soft key, then A, B and C are now in a conference.
- 4) If add D&E, press DSS key 1 (set DSS key as Line key), the current conference is on hold, dial D and press conference soft key, the four are in conference. Press DSS key 2, and dial E, press conference soft key, then A,B,C,D,E are in conference.


Note: 1) If C does not answer the call, A can back to continue the conversation with B;
2) Once A hangs up the call, the conference is ended, while if B or C drops the call, A&C or A&B conversation continues.

Call Mute

Press **[Mute]** to mute the microphone during the call

Press **[Mute]** again to un-mute the conversation.

Instruction

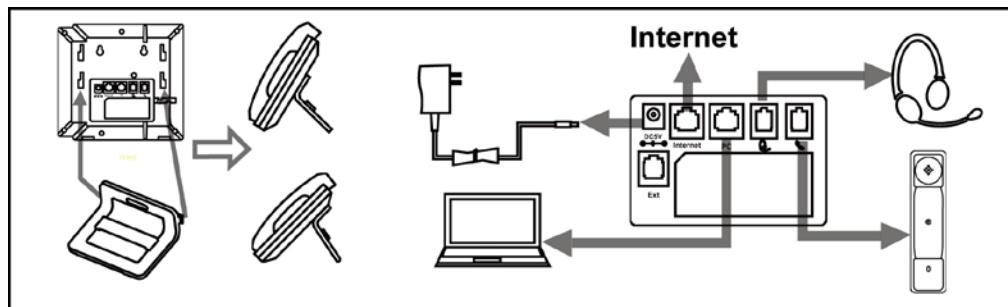

Configuration

1. Configuration via Phone

- Press Menu→Setting→Advanced Settings (Default password: admin)
- Select Network: To configure the Wan Port (DHCP/Static/PPPoE), PC Port...
- Select Accounts: To configure enable the account; fill the SIP SERVER, Outbound Proxy, ID...
- Save the configuration

2. Configuration via Web

- Get the IP address from the phone: Press Menu→Status.
- Login: input the IP address in the web browser. The PC and phone should be in the same segment) / Login name: admin password: admin (default)
- Configure: select network/Account...to fill the relevant content.
- Save the configuration, or if want to reboot, click the reboot button.

Support Contact

Nanjing Hanlong Technology Co., Ltd.

support@htek.com

Tel: 0086-25-84658050

Fax: 0086-25-84658319

www.htek.com

5th Floor, 1st Building

Huashen Tech Park

10 Huashen Temple

Yuhuatai Dis. Nanjing 210012

China

Enterprise IP Phone



Quick Reference

For

UC803P, UC803, UC802P, UC802