

UC923 Usermanual



Notices Information

Copyright

Copyright © 2005 - 2017 Nanjing Hanlong Technology CO., LTD. All rights reserved.

Nanjing Hanlong Technology Co., LTD. owns all the right to revise and change this document at any time. And all the illustrations and instructions in this paper are subject to the copyright protection of legal law. No parts of this document may be used or reproduced, transmitted by the third parties for any purposes without the express written permission of Nanjing Hanlong Technology Co., LTD.

When this document is made available on www.htek.com , Nanjing Hanlong Technology Co., LTD. gives its right to download and print copies of this content only for private use as a user manual. No parts shall have the right to alter, modify or use as commercial means without the express written permission of Nanjing Hanlong Technology Co., LTD.

Safety cautions

- To use the Phone follow the instructions in this manual.
- To use the power adapter that delivered with the phone. Other power adapters may damage the phone.
- The phone is only for indoor use. And also avoid in high humidity, water and some other liquids.
- Do not use the phone during thunderstorms.
- CE
- FCC

WEEE Warning



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Cleaning

To clean the device, use an anti-static cloth. Please avoid cleaning liquids as they might damage the surface or internal electronics of the phone.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Summary of changes

This section describes the changes to this user manual for each release and user manual version.

Change for Release x.0.4.2, Manual version x.0.4.2

Major updates have occurred to the following sections:

- [IPv6](#)
- [IPv4&IPv6](#)

Change for Release x.0.4.0.10, Manual version x.0.4.0.10

Major updates have occurred to the following sections:

- [Label Scroll](#)

Change for Release x.0.3.98.O, Manual version x.0.3.98.O

Major updates have occurred to the following sections:

- [Reboot in Talking](#)

Change for Release x.0.3.98.A, Manual version x.0.3.98.A

Major updates have occurred to the following sections:

- [Auto Logout Time](#)

Change for Release x.0.3.98, Manual version x.0.3.98

Major updates have occurred to the following sections:

- [Daylight Saving Time](#)

Change for Release x.0.3.93, Manual version x.0.3.93

Major updates have occurred to the following sections:

- [Check-Syn With Authenticate](#)
- [Call Back](#)

Change for Release x.0.3.88, Manual version x.0.3.88

Major updates have occurred to the following sections:

- [Visual Alert for BLF Pickup](#)
- [Detect IP Conflict](#)

Change for Release x.0.3.72, Manual version x.0.3.72

Major updates have occurred to the following sections:

- [Voice Mail Tone](#)
- [Backup NTP Server](#)
- [Intercom Barge](#)

Change for Release x.0.3.65, Manual version x.0.3.65

Major updates have occurred to the following sections:

- [Redial Mode](#)

Change for Release x.0.3.63, Manual version x.0.3.63

Major updates have occurred to the following sections:

- [Suppress DTMF Display](#)
- [Suppress DTMF Display Delay](#)

Change for Release x.0.3.62, Manual version x.0.3.62

Major updates have occurred to the following sections:

- [Auto Redial](#)

Table of Content

Notices Information.....	2
Copyright.....	2
Safety cautions.....	2
WEEE Warning.....	2
Cleaning.....	2
FCC Statement.....	3
Summary of changes.....	4
Change for Release x.0.4.2,Manual version x.0.4.2.....	4
Change for Release x.0.4.0.10,Manual version x.0.4.0.10.....	4
Change for Release x.0.3.98.O,Manual version x.0.3.98.O.....	4
Change for Release x.0.3.98.A,Manual version x.0.3.98.A.....	4
Change for Release x.0.3.98,Manual version x.0.3.98.....	4
Change for Release x.0.3.93,Manual version x.0.3.93.....	4
Change for Release x.0.3.88,Manual version x.0.3.88.....	4
Change for Release x.0.3.72,Manual version x.0.3.72.....	5
Change for Release x.0.3.65,Manual version x.0.3.65.....	5
Change for Release x.0.3.63,Manual version x.0.3.63.....	5
Change for Release x.0.3.62,Manual version x.0.3.62.....	5
Table of Content.....	6
Getting Started.....	10
Packing List.....	10
Phone Installation.....	12
1. Attach the Foot stand.....	12
2. Connect the Handset and optional Headset.....	13
3. Connect the Network and Power.....	13
Initialization.....	14
Status.....	15
Registration.....	18
Idle Screen.....	20
Getting Familiar with Your Phone.....	21
Hardware Components Preview.....	21
Icon Preview.....	24
LED Instruction.....	27
Power Indicator LED.....	27
Line LED:(Line or Line Key set as Line).....	27
BLF or BLF List Key LED :(Line/Line Key set as BLF).....	28
Shared Line LED:.....	28
Other Key Led.....	29
User Interface.....	29
Line Key Function Overview.....	31
Basic Setting Configuration.....	33
General Settings.....	33

Web Login.....	33
Administrator Password.....	34
Display Mode.....	35
Language.....	36
Wallpaper.....	38
Screen Saver.....	39
Backlight.....	42
Time and Date.....	43
LED Status Setting.....	49
Key as Send.....	50
Network Setting.....	51
IPv4.....	51
IPv6.....	54
IPv4&IPv6.....	57
PC Port.....	58
Contact Setting.....	60
Local Directory.....	61
Remote Phonebook.....	66
LDAP Phonebook.....	67
Search Contact.....	69
Call History Setting.....	71
Call History.....	71
Audio Settings.....	74
Volume.....	74
Ring Tone.....	76
Voice Mail Tone.....	79
Play Hold Tone.....	79
Play Hold Tone Delay.....	80
System Settings.....	80
Dial Plan.....	80
Dial-Now Timeout.....	81
No Key Entry Timeout.....	82
Emergency Call.....	82
Label Scroll.....	83
Show Missed Calls.....	84
Auto Logout Time.....	84
Reboot in Talking.....	84
Detect IP Conflict.....	85
Redial Mode.....	85
Keypad Lock.....	85
Suppress DTMF Display.....	87
Suppress DTMF Display Delay.....	87
Check-Syn With Authenticate.....	87
Other features settings.....	88
Action URL.....	88

Softkey Layout.....	88
Programmable Key.....	90
Exp Key.....	90
Basic Call Features.....	91
Place a Call.....	91
End a Call.....	93
Redial a Call.....	93
Receive a Call.....	93
Incoming Call Show Mode.....	94
Auto Answer.....	95
Call Hold.....	96
Call Transfer.....	97
Call Conference.....	100
Call Forward.....	102
Call Return.....	106
Call Back.....	107
Call Waiting Tone.....	108
Hide Caller ID.....	109
Reject Anonymous.....	110
Call Mute.....	111
DND.....	112
Hot Line.....	112
Auto Redial.....	114
Function Key Features Settings.....	115
Line.....	115
Speed Dial.....	116
BLF.....	117
Visual Alert for BLF Pickup.....	119
Audio Alert for BLF Pickup.....	120
BLF List.....	121
Voice Message.....	123
Direct Pickup.....	125
Group Pickup.....	126
Call Park.....	127
Intercom.....	128
Intercom Barge.....	129
DTMF.....	130
Prefix.....	131
Local Group.....	132
XML Group.....	133
LDAP.....	134
XML Browser.....	135
Broadsoft Group.....	136
Conference.....	137
Forward.....	137


Transfer.....	138
Hold.....	139
Group Listening.....	139
DND.....	140
Redial.....	141
SMS.....	141
Send SMS.....	141
Set SMS Line Key.....	142
Record.....	143
URL Record.....	144
Paging.....	145
Shared Line.....	145
Public Hold.....	147
Private Hold.....	148
Share line.....	149
Hot Desking.....	150
ACD.....	151
Zero Touch.....	152
Multicast Paging.....	153
Sending RTP Stream.....	153
Receiving RTP Stream.....	154
Upgrade.....	156
Factory Reset.....	156
Pcap Feature.....	157
System Log.....	157
Upgrade.....	158
Configuration File.....	160
Troubleshooting.....	161
Why is the phone LCD screen blank?.....	161
Why does the phone display “Network Unavailable”?.....	161
Why can’t I get a dial tone?.....	161
Where to set the tone?.....	162
How to download XML Configuration?.....	162
How to Import Trusted CA certificate?.....	162
How to Import Server CA certificate?.....	163
How to use Vlan?.....	163
How to use LLDP?.....	163
How to Set LCD and Web GUI?.....	164
How to Upgrade via FTP?.....	164
How to make Ringtone?.....	164
How to use Open VPN?.....	164
Provisioning Guide on Free PBX.....	164
Redundancy Server.....	164
How to Use Auto Provision Phonebook?.....	164
All Documents.....	165

Getting Started


Packing List

The package contains the following parts, please check if all the items are not missed:

1. The phone device

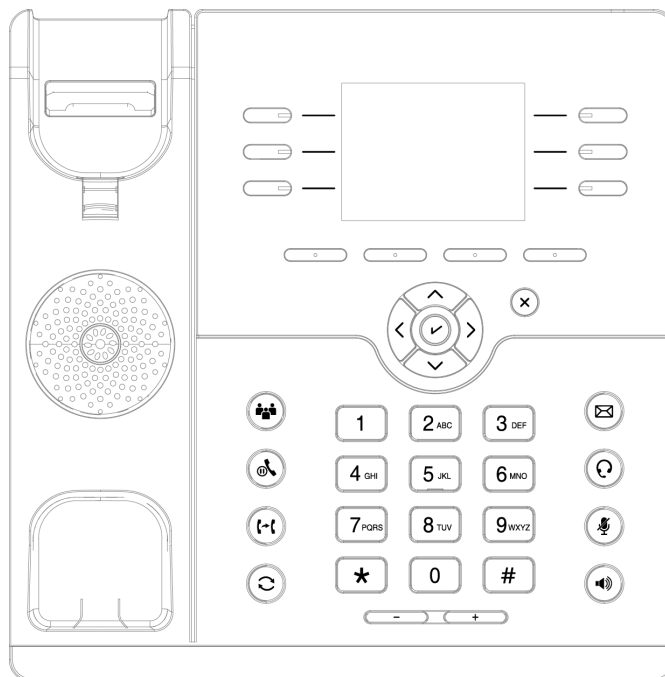


2. The footstand

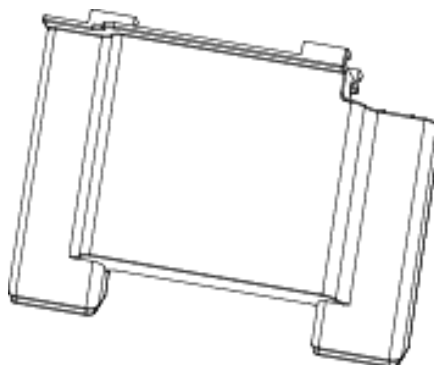


3. Handset




4. Headset cord

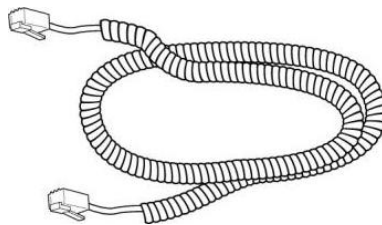

5. Power adapter

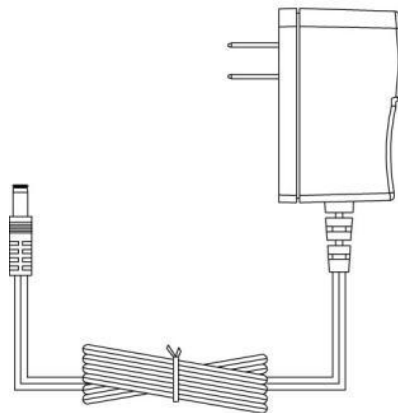

6. Ethernet cable

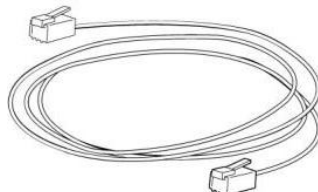


7. Quick installation reference




Phone Installation


1. Attach the Foot stand

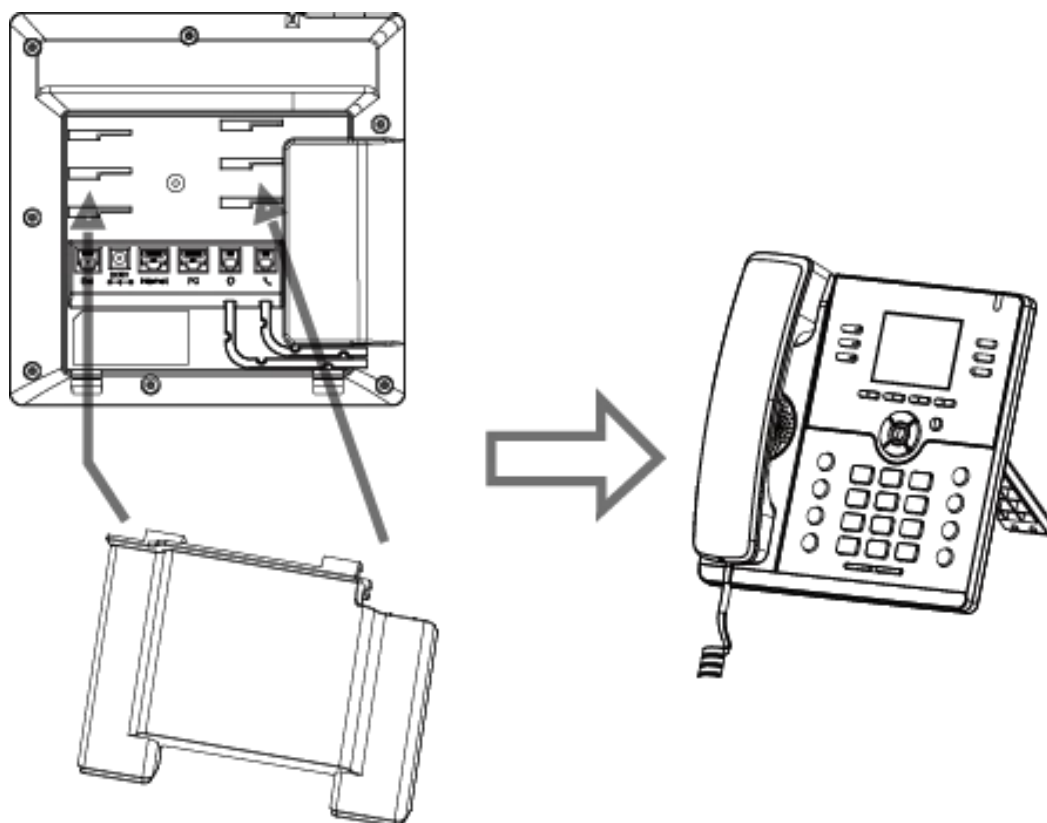

2. Connect the Handset and optional Headset

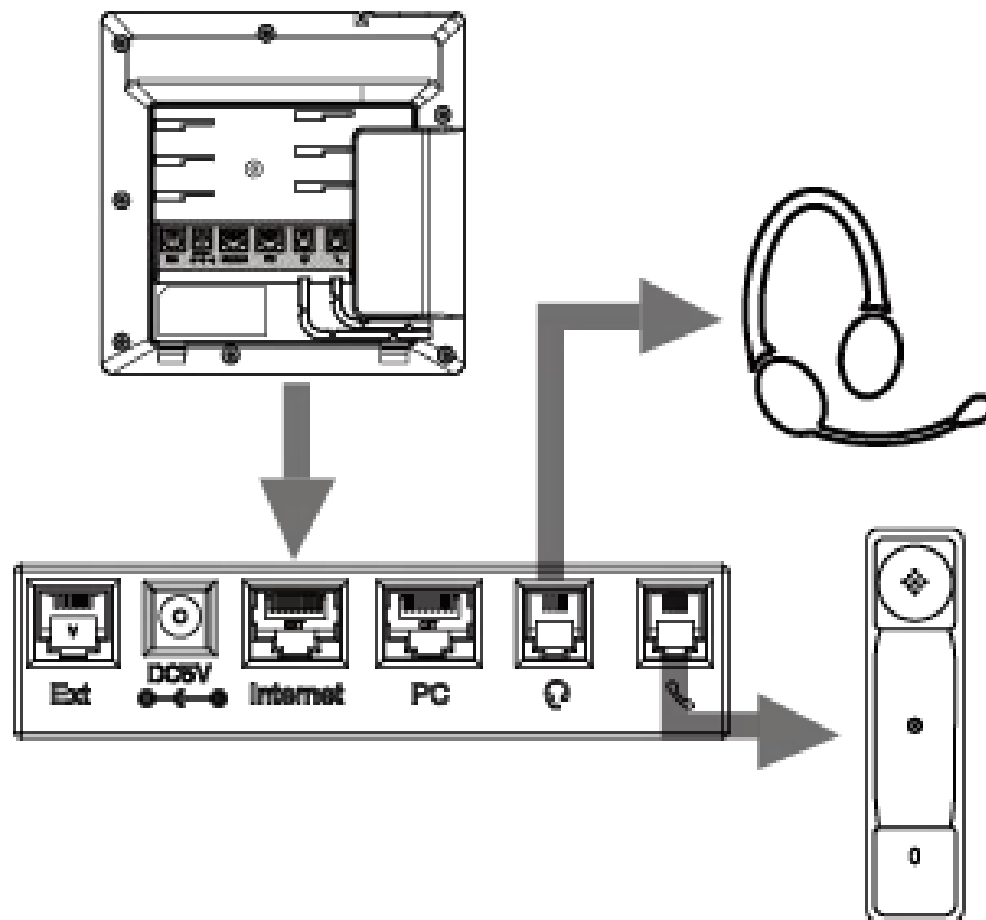

3. Connect the Network and Power

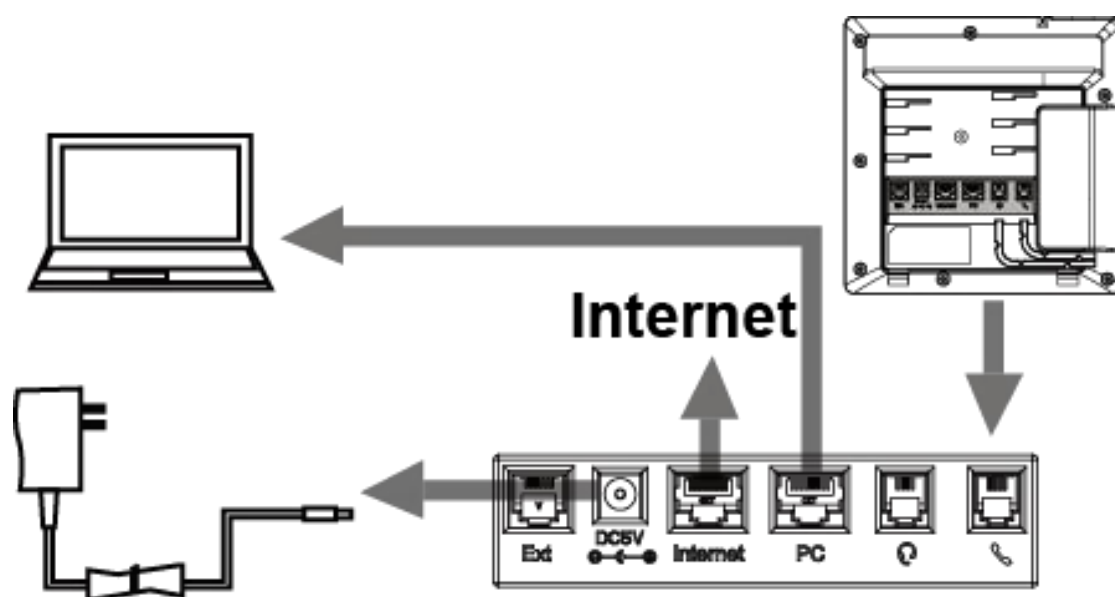

Initialization


After your phone has been powered up, the system boots up and performs the following steps:

Automatic Phone Initialization

The phone finishes the initialization process by loading the saved configuration. The phone LCD screen will display “Booting”



And then show “Initializing “during the initialization.

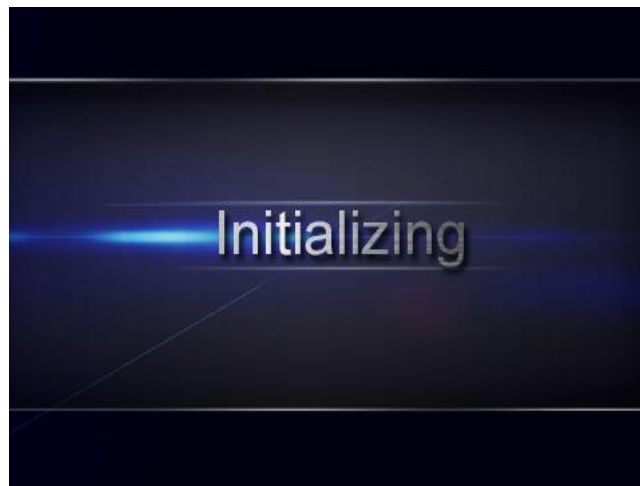

The IP Phone will upgrade the firmware if there is a new firmware on your server. And the IP Phone will show “Check firmware, please waitg...” after initialization.



Then IP Phone will show Reboot information:




By default the phone attempts to contact a DHCP server in your network in order to obtain its valid network settings, e.g. IP address, subnet mask, default gateway, DNS server.

Status


You can view the system status of your phone via phone user interface or web user interface. The information of phone status includes: Information (e.g., Model, IP, MAC, Firmware, Hardware), Network (e.g., WAN Type, IP, Mask, LAN Type, Gateway, DNS ...) Account (e.g., register status of accounts)

To view the phone status via phone interface:


1. Press Menu → Status → Information Network/ Account

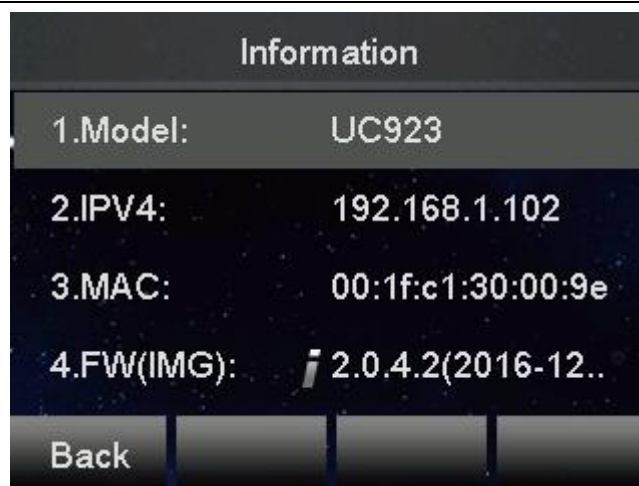


2. Press Menu → Status → Network

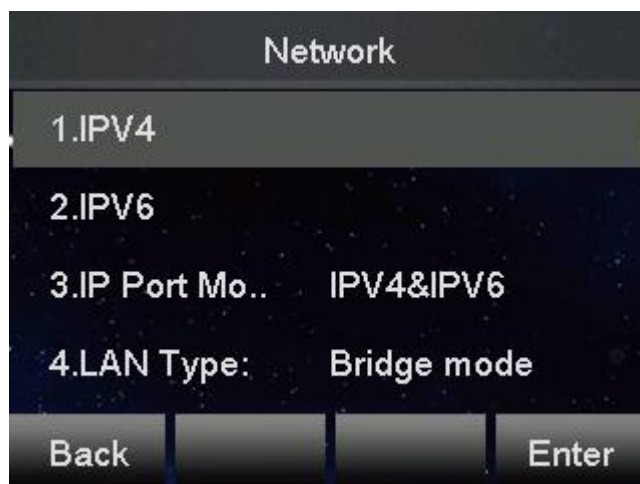


3. Press Menu → Status → Network→IPV4

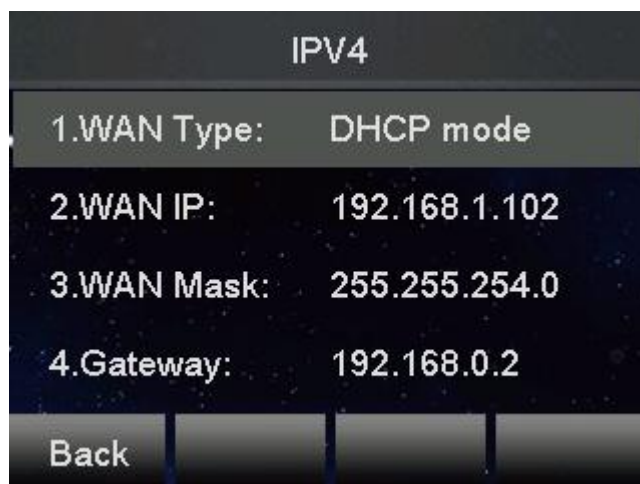

4. Press Menu → Status → Network→IPV6

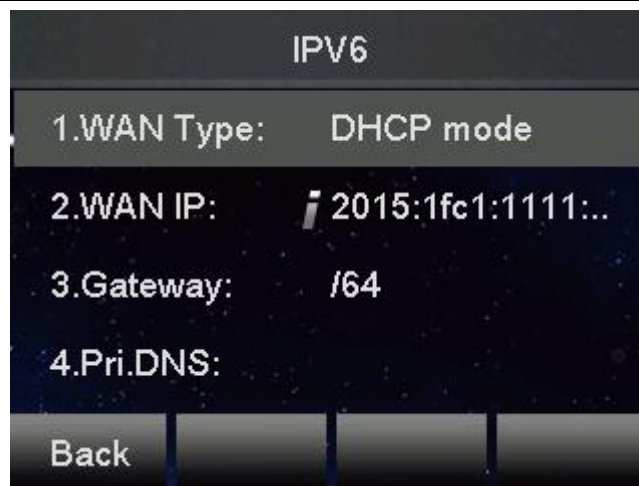


5. Press Menu → Status → Account(UC923 support three accounts)

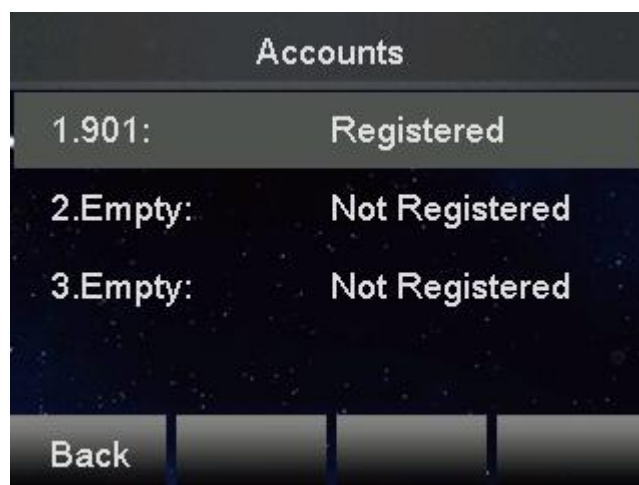

To view the phone status via Web interface:

Login webpage (For How to login, please refer to [Web Login](#))

View the information of Version, Account and Network.


[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

[logout](#)

Status

- Version**

Product Model	UC923
Firmware Version	BOOT--2.0.3.39(2016-10-12 15:09:00) IMG--2.0.4.2(2016-12-28 15:35:00) ROM--2.0.4.2(2016-12-28 15:35:00) DSP--9.0.3(Patch 1.0.16)
- Account Status**

Account1	Registered
Account2	Disabled
Account3	Disabled
- Network**

IP Mode (IPv4/IPv6)	IPv4 & IPv6
Device Type	Bridge
MAC Address	00:1f:c1:30:00:9e
- IPv4 Setting**

WAN Port Type	DHCP
WAN IP Address	192.168.1.102
Subnet Mask	255.255.254.0
Gateway	192.168.0.2

NOTE

Version:
Shows product type and the version of firmware.

Account Status:
Shows the registered status of accounts.

Network:
Shows the detail information of WAN port and LAN port.


System Up Time:
Shows the running time after device power up.

Restart:
Restart the voip application

Registration

To register via phone interface:

1. Press Menu → Setting → Advanced setting (default password: admin) → Accounts
2. Select the desired account
3. Select Enable for Account active
4. Filled the SIP Server
5. Filled the Failover SIP server if need (Optional)
6. Filled the Outbound Proxy (Optional)
7. Filled the SIP User ID, Authenticate ID
8. Filled the password, Name (shown on LCD) and Ringtone.
9. Press Save to save the configuration.

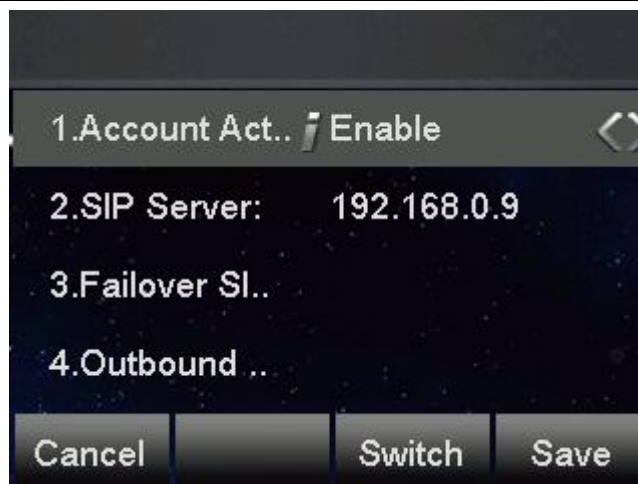
Note:

If there is a port of sip server, you need to press “1” on the keypad, then you will find the “:”.

Additional Information:

When the current input method is ABC/abc/2ab,


Pressing “1”, you will find “, . ?;”

Pressing “0”, you will find “< >(){}[]”

Pressing “*”, you will find “*/’!@\$”

Pressing “#”, you will find “#’%&*|”

To register via web interface:

1. Login webpage and Click Account→Basic
2. Select the desired Account
3. Select Yes for Account Active
4. Filled the Primary SIP SERVER and other account information
5. Click  to save the configuration.

[logout](#)

Htek

[Home](#) |
 Account |
 [Network](#) |
 [Function Keys](#) |
 [Setting](#) |
 [Directory](#) |
 [Management](#)

Basic
Codec
Advanced

Account

Account 1 ▼

Account Status: Registered

* Account Active: ☐ No ☒ Yes

* Primary SIP Server: 192.168.0.9 ?

Failover SIP Server: ?

Second Failover SipServer: ?

Prefer Primary SIP Server: ☒ No ☐ Yes ?

Outbound Proxy: ?

Backup Outbound Proxy: ?

* SIP Transport: ☒ UDP ☐ TCP ☐ TLS ?

NAT Traversal: ☐ No ☒ No, but send keep alive ☐ STUN

Label: ?

* SIP User ID: 512 ?

* Authenticate ID: 512 ?

* Authenticate Password: ?

Name: ?

NOTE

The * fields must be filled (requires a phone restart)

Basic:
The Basic parameters configured by the administrator.


Codecs:
Select the codec you want to use.

Advanced:
The advanced parameters configured by the administrator.

Note:

1. All fields with * must be filled. If changed, it requires a phone restart.
2. Account Status says the account registered successfully or not.


Idle Screen

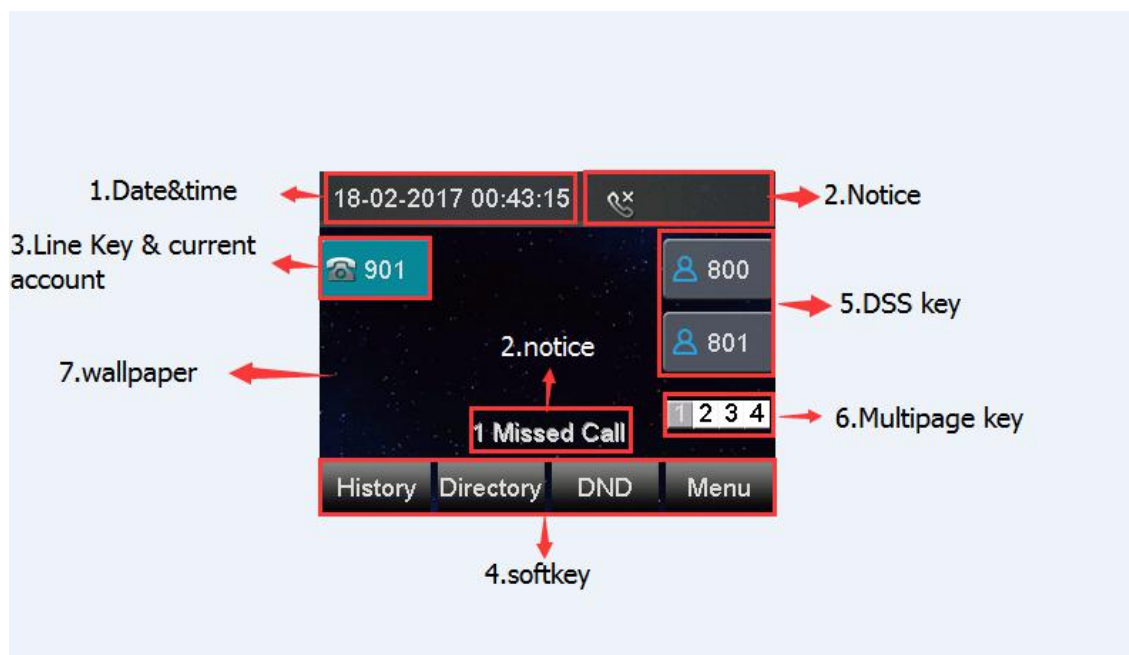







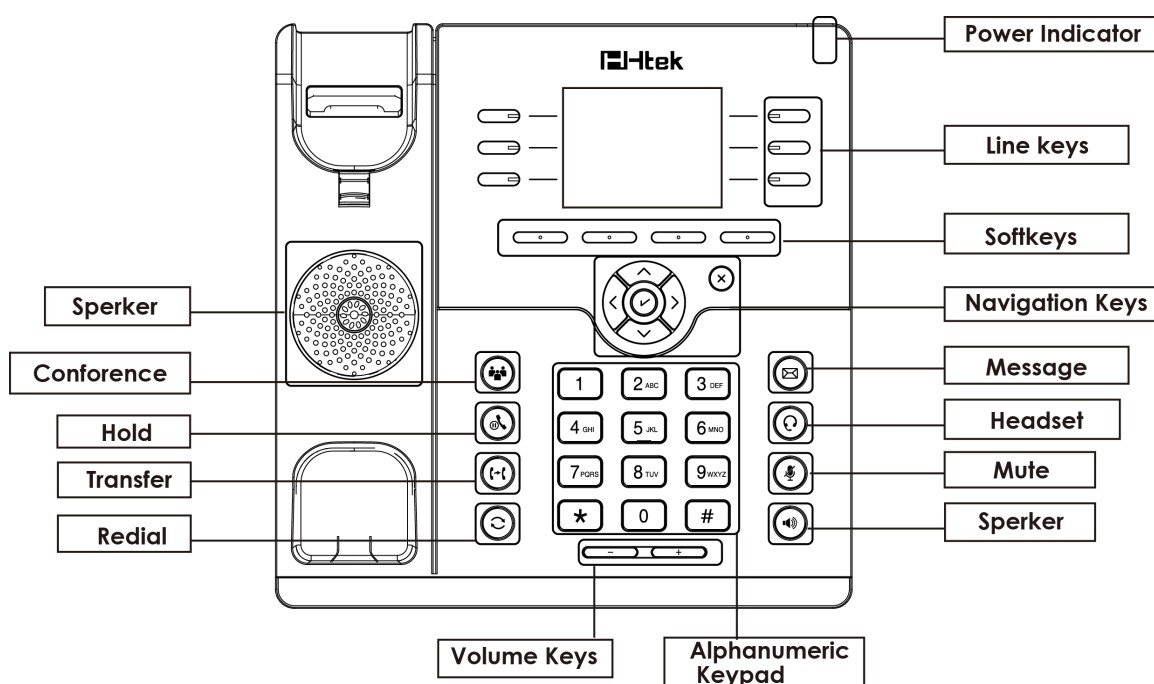









Name	Description
1. Date&Time	It shows the phone's time & date. For Date&time setting, see Time&Date
2. Notice	It shows the phone features status and detail status, More see Icon Preview
3. Line Keys	This area shows the line key labels. The current account is highlighted. you can switch the account by pressing right or left navigation key. The Line keys are also can be used as other function keys. For more information you can refer to Line Keys
4. Soft Key	This area shows the soft key labels. The default soft key labels are “History”, “Directory”, “DND” and “Menu”. More to see Programmable Key
5. DSS key	The Line keys are can be used as other function keys(e.g.: BLF)
6.Multipage key	UC923 support 20 keys,you can configure different type.you can view and use these keys by pressing the multipage key.
7. Wallpaper	This shows the backgrounds picture. You can also change it. For more information you can refer to Wallpaper .

Getting Familiar with Your Phone













Hardware Components Preview




















Item	Description
LCD screen	To Presentation all information about the date& time, accounts, soft keys, messages, calls and other some information.
Power Indicator LED	To indicate the power status
Line keys	The phone supported up to 4 accounts 1. Steady green: idle interface, during a call.. 2. Blink red: a call incoming
Soft keys	Labels automatically to identity their context-sensitive features.
Navigation keys	 1. OK.  Up arrow key: To move up of the selection shows on the screen.  Right arrow key: To move right of the selection shows on the screen.  Left arrow key: To move left of the selection shows on the screen.  Down arrow key: To move down of the selection shows on the screen.  1. To return to idle screen. 2. To cancel the information or call on the screen.
Mute key	 1. To mute the voice during the call (Red light). 2. To un-mute the call.
Conference	 To place a conference call
Line Keys	To be configured as different function as: <ol style="list-style-type: none"> Line Speed Dial BLF BLF List Voice mail Direct Pickup Group Pickup Call Park Intercom DTMF Prefix Hold Conference DND Redial



	<p>16. Transfer</p> <p>17. SMS</p> <p>18. Hot -desking</p> <p>19. Call Return</p> <p>20. Paging</p> <p>21. Record</p> <p>22. Shared Line</p> <p>The LED lights status when set as Shared line:</p> <p>Stay green: Idle</p> <p>Stay red: Busy</p> <p>Blinked green: Ring Back</p> <p>Blinked red: A call incoming</p> <p>Steady orange: During a call</p> <p>Blinked orange: Public Hold</p> <p>Blinked green: Private Hold</p> <p>Light Drown: Unregistered</p> <p>23. Hot desking</p> <p>24. ACD</p> <p>25. Zero Touch</p> <p>26. Multicast paging</p>
Speaker	 Press this button to place a call in hands-free mode.
Redial	 <p>To dial the previous dialed number.</p> <p>To act as send key.</p>
Volume	 <p>To decrease the volume.</p>  <p>To increase the volume.</p>
Hold	 To hold or to resume a call during a conversation.
Transfer	 <p>To transfer a call to a third party.</p> <p>To enable or disable Forward feature during the idle page.</p>
Alphanumeric keypad	To enter the phone numbers, letters and so on.
Message	 To indicator the New message, and press to read.
Headset	 To indicate that the phone is or not in Headset mode.





Icon Preview

Icon	Description
	Network down
	Line(Registered succeed)
	Line (Unregistered)
	Line(Ringing)
	Speed Dial
	BLF
	BLF(Ringing)
	BLF(Talking)
	Speakerphone mode
	Handset mode
	Headset mode
	Voice messages

	Text message
	Mute
	Do Not Disturb
	Volume is 0
	SRTP
	Hold
	Dialed calls
	Received calls
	Missed calls
	Forward calls
	Conference
	Keypad locked
	Keypad unlocked
	Pick up

	Call Park
	Intercom/Paging
	DTMF
	Prefix
	XML Group
	Local Group
	XML Browser
	LDAP
	Broadsoft Group
	Conference
	Forward
	Transfer
	Hold
	Line on Hold
	DND
	Redial
	Call Return

	SMS
	Record

	Recording
	Group Listening
	Shared Line
	Other Functions

LED Instruction

This part mainly instructs the LED status. The Power LED Status describe on the premise that the LED setting all set as Yes. For LED status setting, please refer to: [LED Status Setting](#)

Power Indicator LED

LED Status	Description
Blinked green	Ringling or have missed call
Steady Green	Idle status(Power on)
Off	Powered off.

Line LED:(Line or Line Key set as Line)

LED Status	Description
Steady Green	Hold
Steady Green	Off hook or during a conversation.

Blinked red	Ringing.
Off	Idle status

BLF or BLF List Key LED :(Line/Line Key set as BLF)

LED Status	Description
Steady Green	Idle status for the monitored line
Steady Red	The monitored line is calling or during a call
Blinked red	The monitored line is ringing.
Off	All other unknown status

Shared Line LED:

LED Status	Description
off	Idle status
Stay green	a member of the SCA group in off-hook status
Stay red	Other member of the SCA group's led status when a member of the SCA group in off-hook status
Blinked green every 500ms	a member of the SCA group in Private hold status.
Stay red	Other member of the SCA group's led status when a member of the SCA group in Private hold status.
Blinked green every 500ms	a member of the SCA group in public hold status.
Blinked red every 500ms	Other member of the SCA group's led status when a member of the SCA group in public hold status.
Blinked green every 500ms	a member of the SCA group in progressing status
Stay red	Other member of the SCA group's led status when a member of the SCA group in progressing status.

Blinked red every 100ms	Alerting
Stay green	a member of the SCA group in active status when there is an incoming call designated for the SCA group
Stay red	Other member of the SCA group's led status when a member of the SCA group in active status

Other Key Led

Key	Description
Headset Key	When use in headset mode, the led is steady green or the LED is off.
Message Key	Blinked green when there is a new message or the LED is off.
Mute Key	Red when the mute the call, or the LED is off.

User Interface

There are two ways to customize specific configurations on your IP phone:

- The user interface on the IP phone
- The user interface in a web browser on your PC

The hardware components keypad and LCD screen constitute the phone user interface, which allows the user to execute all call operation tasks and basic configuration changes directly on the phone. In addition, you can use the web user interface to access all configuration settings. In many instances, it is possible to use both the phone user interface and the web user interface to operate the phone and change settings. However, in some instances, it is only possible to use the phone or the web user interface.

Phone Interface Overview

Option	
Status	Model
	IP
	MAC
	Firmware(IMG,BOOT,ROM)

	Device Cert
	Language
	Expansion Module
	EHS Version
	Network
	Account
Features	Call Forward
	Function Key(Line and Line Key setting)
	More Key see Line Key Overview
	Key as Send
	Hot Line
	Anonymous Call
	DND Code
	History Setting
Directory	All Contacts
	Local Contacts
	Blacklist Contacts
History	Local History
	Network CallLog
Message	Voice Mail set and View.
	Text Message view and set.
Basic Settings	Language
	Time & Date
	Time & Date Format
	DHCP Time
	Ring tone
	Headset
Advanced Settings	Account
	Network
	Phone Setting
	Auto provision
Display	Display Mode
	Wallpaper
	Screensaver
Others	Factory Function
	System Restart
	Device Reboot
	Pcap Feature

Line Key Function Overview

<u>Line</u>
<u>Speed Dial</u>
<u>BLF</u>
<u>BLF List</u>
<u>Voice Mail</u>
<u>Direct Pick Up</u>
<u>Group Pick Up</u>
<u>Call Park</u>
<u>Intercom</u>
<u>DTMF</u>
<u>Prefix</u>
<u>Local Group</u>
<u>XML group</u>
<u>LDAP</u>
<u>XML Browser</u>
<u>Broadsoft group</u>
<u>Conference</u>
<u>Forward</u>

Transfer
Hold
Group Listening
DND
Redial
Call Return
SMS
Record
URL Record
Paging
Shared Line
Public Hold
Private Hold
Hot Desking
ACD
Zero Touch
Multicast Paging


Basic Setting Configuration

This part will mainly introduce the basic configuration as the Time, Language, and Volume...


General Settings

Web Login

1. Get the IP address: Press Menu → Status → Information.

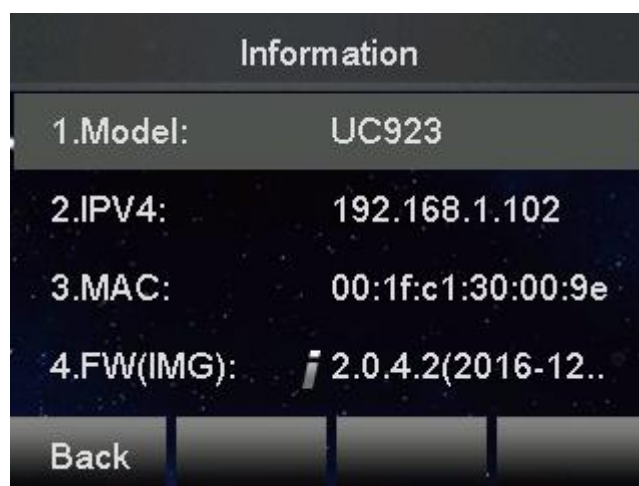

2. Input the IP Address in the web browser.
3. Input the user name (default is admin), password (default is admin).
4. Login successfully.



[Home](#)
[Account](#)
[Network](#)
[Function Keys](#)
[Setting](#)
[Directory](#)
[Management](#)

[logout](#)

Status

- Version**
 - Product Model: UC923
 - Firmware Version:
 - BOOT--2.0.3.39(2016-10-12 15:09:00)
 - IMG--2.0.4.2(2016-12-28 15:35:00)
 - ROM--2.0.4.2(2016-12-28 15:35:00)
 - DSP--9.0.3(Patch 1.0.16)
- Account Status**
 - Account1: Registered
 - Account2: Disabled
 - Account3: Disabled
- Network**
 - IP Mode (IPv4/IPv6): IPv4 & IPv6
 - Device Type: Bridge
 - MAC Address: 00:1f:c1:30:00:9e
- IPv4 Setting**
 - WAN Port Type: DHCP
 - WAN IP Address: 192.168.1.102
 - Subnet Mask: 255.255.254.0
 - Gateway: 192.168.0.2

NOTE

Version:
Shows product type and the version of firmware.

Account Status:
Shows the registered status of accounts.

Network:
Shows the detail information of WAN port and LAN port.

System Up Time:
Shows the running time after device power up.

Restart:
Restart the voip application

Note:


The PC and phone should be in the same segment.

When register the accounts in web and the server port is not “5060”, then “SIP Server” should be set as “SIP Server’s IP address: server port.”, for example, “192.168.0.122: 5090”.

Administrator Password

The password is mainly used for login the web interface or set the advanced settings through phone interface. And the default password of the administrator is: **admin**

To change to password via Phone Interface

- Press Menu → setting → Advanced settings → password (default admin) → Phone Setting → Set Password
- Enter the current PWD (password), new password and confirm the new password.
- Press save soft key or  to save the new password.



Set Password


1.Current P.. |


2.New PWD:

3.Confirm:

Cancel 2aB Delete Save

 To change to password via Web Interface

1. Management → Password
2. Fill the value
3. Click  to save the configuration.

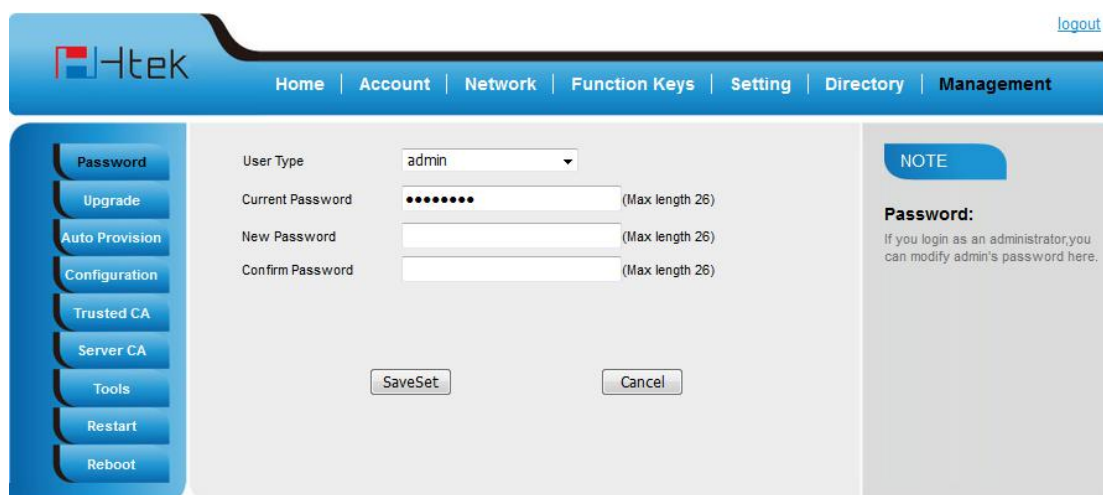

logout

Htek

Home | Account | Network | Function Keys | Setting | Directory | Management

Password

Upgrade

Auto Provision

Configuration

Trusted CA

Server CA

Tools

Restart

Reboot

User Type: admin

Current Password: (Max length 26)

New Password: (Max length 26)

Confirm Password: (Max length 26)

SaveSet Cancel

NOTE

Password:

If you login as an administrator, you can modify admin's password here.

Note:

When you use the web interface: user name: admin password: admin(default)

Display Mode

This phone support two Display mode: Text and Icon.

Icon Mode: all Items are shown same as the main with Icon.

Text Mode: Only the 8 main items will be shown as icon, and others all text description.


To Configure Display mode via phone interface:

1. Press Menu→ Display→Display Mode
2. Select Text or Icon
3. Press Save soft key to save the configuration.

To Configure Display mode via web interface:

1. Login web interface, and click Setting→ Preference




2. Select Icon Mode or Text Mode for the Display mode
3. Click  to save the configuration.

Language

The default Phone interface language is English.

To change the language via Phone interface

1. Press Menu → Setting → Basic Settings → Language.

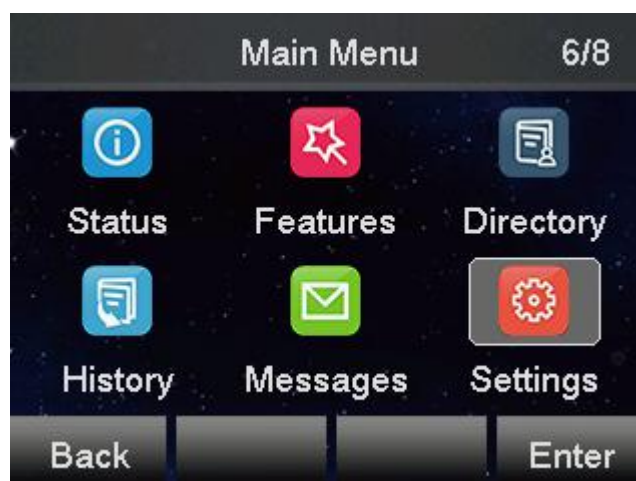




2. Press  or Save soft key to save the configuration.



To change the language via Web Interface

1. Setting → Preference → Web Language
2. Select the necessary one.
3. Press  to save the configuration.






Note:


All languages may not be available for selection. The available languages depend on the language packs currently loaded to the IP phone.


Wallpaper

To change the preferred one picture for you by the following steps:

To change the wallpaper via phone interface:


1. To press Menu → Display → wallpaper
2. Press  and  or press Switch soft key to display the different pictures.
3. Press  or Save soft key to save the selected picture as the wallpaper.

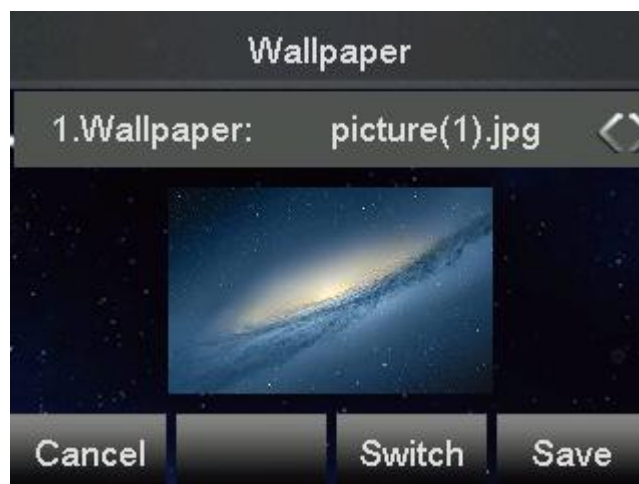
**To change the wallpaper via web interface:**

1. Click Setting→Preference
2. Select the desired wallpaper picture to upload.
3. Click  to save the setting.



To delete the wallpaper via web interface:

1. Click Setting→Preference
2. Select the desired wallpaper to delete.
3. Click  to save the setting.

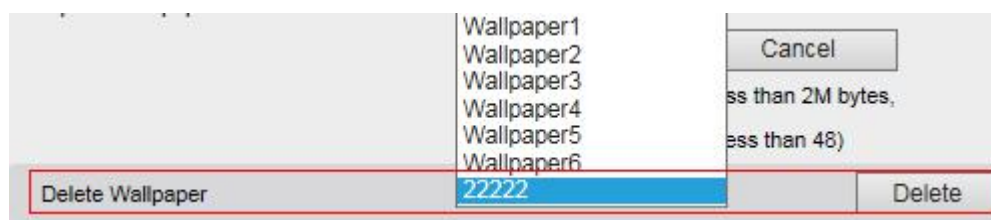

Note:

System wallpaper (Wallpaper1-Wallpaper6) cannot be deleted and only color IP Phone support upload wallpaper.

Screen Saver

There are three types of screen saver: Time & Logo, Photo Switch and Photo.




Time & Logo: when the screensaver works, it will show Time and logo in turns.


Photo Switch: all screensaver pictures display one by one.

Phone: Only the select phone display as screensaver.




Text logo: It works with the **Time & Logo**, when enter the value, it will display the time and the entered value in turns.


To enable screen saver via Phone interface:

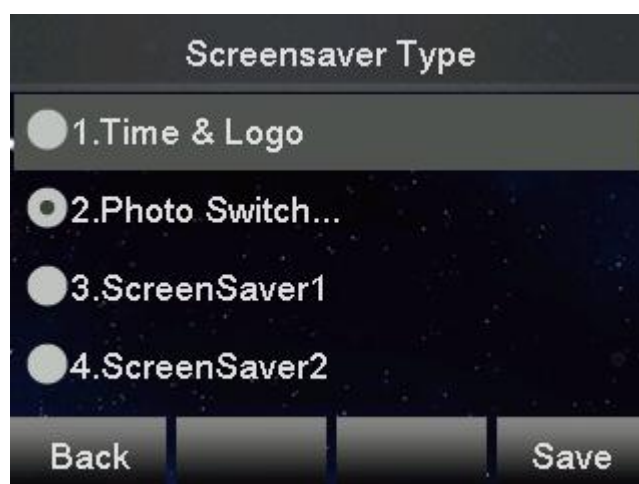1. To press Menu → Display → Screensaver...
2. Press  and  or press Switch soft key to Choose the Time-out as 1 min or 2/5/10/30 minute.
3. Enter the Screensaver Type to choose one of the type: Backlight off, Time & Logo and Photo
4. Press  or Save soft key to save the selected configuration.




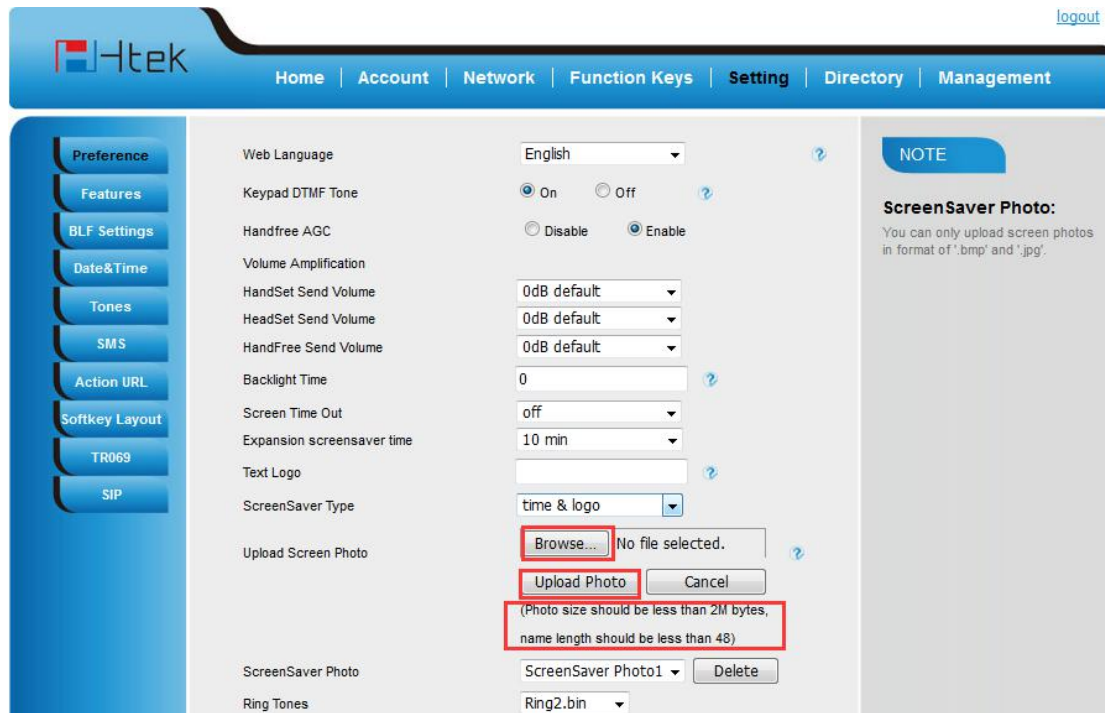
To disable screen saver via Phone interface

1. To press Menu → Display → Screensaver...
2. Press  and  or press Switch soft key to Choose the Time-out as off.
3. Press  or Save soft key to save the selected configuration.

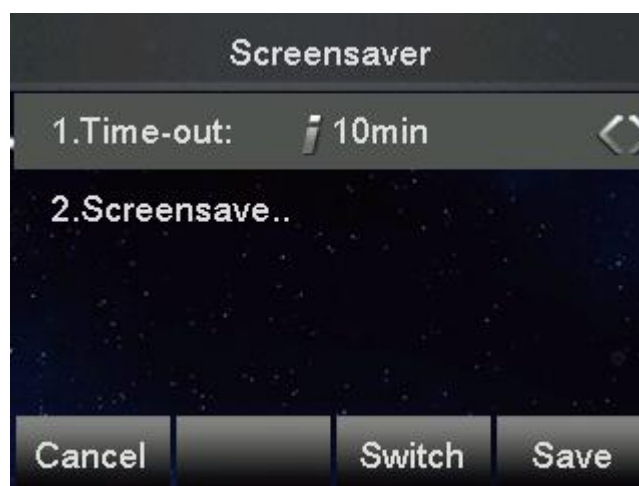

To upload screen saver via Web interface:

1. Setting → Preference
2. Choose the picture wanted to use as screen saver
3. Click  to save the upload picture



logout

Home | Account | Network | Function Keys | **Setting** | Directory | Management

Preference

Web Language: English

Keypad DTMF Tone: ☒ On ☐ Off

Handfree AGC: ☐ Disable ☒ Enable

Volume Amplification: 0dB default

HandSet Send Volume: 0dB default

HeadSet Send Volume: 0dB default

HandFree Send Volume: 0dB default

Backlight Time: 0

Screen Time Out: off

Expansion screensaver time: 10 min

Text Logo:

ScreenSaver Type: time & logo

Upload Screen Photo: **Browse...** No file selected. **Upload Photo** Cancel

(Photo size should be less than 2M bytes, name length should be less than 48)

ScreenSaver Photo: ScreenSaver Photo1 **Delete**


Ring Tones: Ring2.bin

NOTE

ScreenSaver Photo:
You can only upload screen photos in format of '.bmp' and '.jpg'.

To delete upload screen saver phone via Web interface:

1. Setting → Preference
2. Select the photo that to delete.
3. Click Delete to delete the photo.

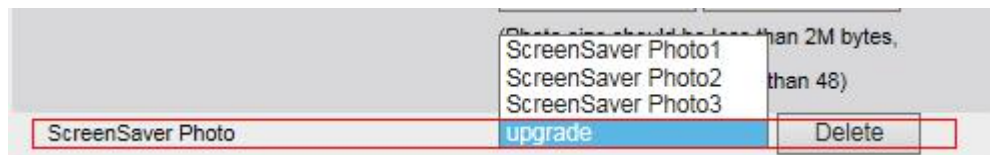

Note:

System Screen Photo (ScreenSaver1-ScreenSaver3) cannot be deleted and only color IP Phone support upload wallpaper.

To custom text logo via web interface:

1. Click Setting→Preference.
2. choose the Time-out as 1 min or 2/5/10/30 minute.
3. Enter the desired value in the Text Logo field.
4. Click Saveset to save the configuration.

Screen Time Out	1 min	<div>it will work when screensaver type is time & logo or logo only, and '\n' represents the newline</div>
Text Logo	welcome	

To wake up screen saver via Web interface:

1. Setting → Preference
2. Choose Dial First Digit: Screensaver Wakes up or Screensaver Wakes up and Dial


Dial First Digit	<input checked="" type="radio"/> Screensaver Wakes up <input type="radio"/> Screensaver Wakes up and Dial
------------------	--

Note:


1. The upload Photo size should be less than 2M bytes, name length should be less than 48, and the File name should be letters, numbers or underline '_' and photo number should be less than 9.
2. The default screensaver photos cannot be deleted.
3. You can only upload screen photos in format of '.bmp' and '.jpg'.

Backlight

 To set Backlight via web interface:

1. Click setting → Preference
2. Enter the time for Backlight time (In seconds).
3. Click  to save the configuration.

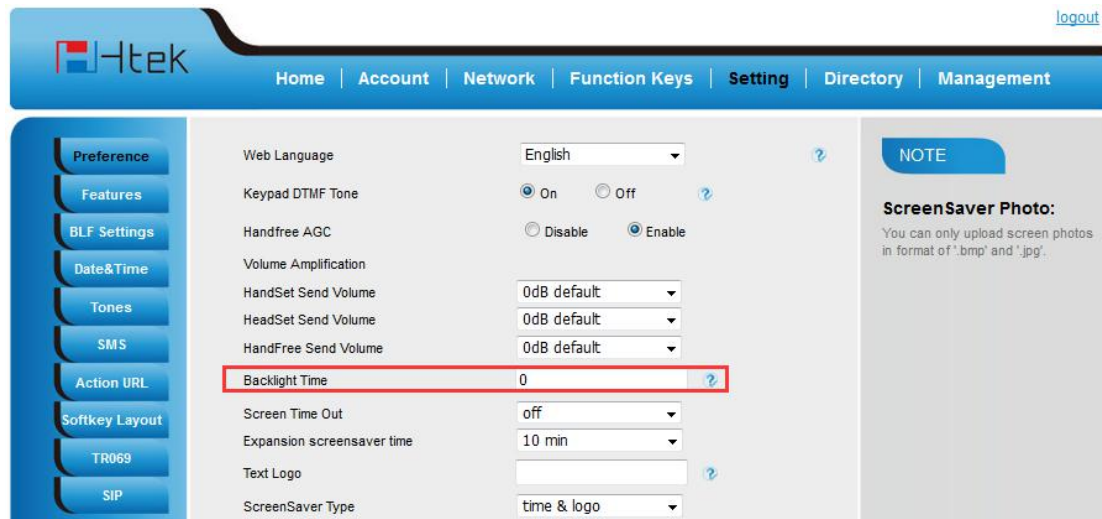


The default is 0, which means Backlight is always on.




Time and Date

The time and date showed on the idle page can be set manually or automatically synchronized to NTP server.




To configure the time and Date by SNTP setting via phone interface

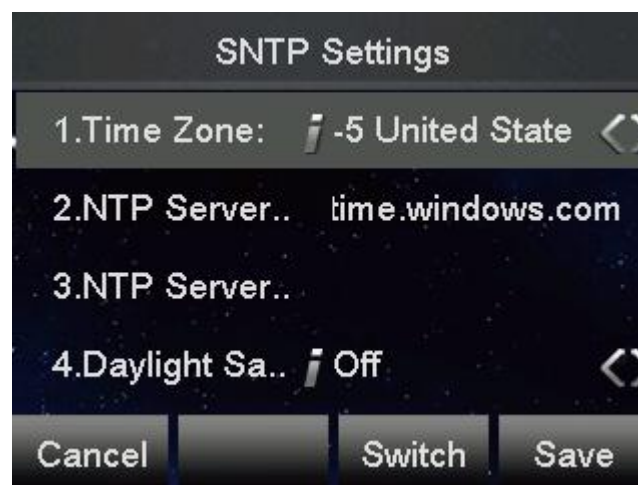
1. To press Menu → Setting → Basic setting → Time & Date → SNTP Settings
2. Press  or  to change the Time zone.
3. Fill the NTP server1, NTP Server2, and Daylight Saving.
4. Press  or Save soft key to save the configuration.








To configure time and date manually via phone interface

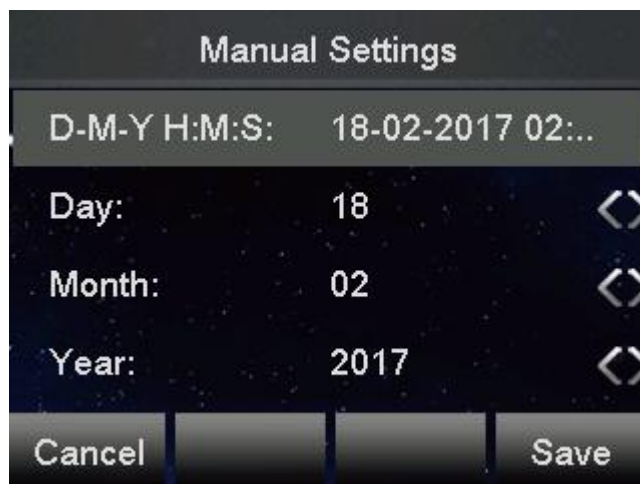1. To press Menu → Setting → Basic setting → Time & Date → Manual Settings

2. Press  and  or change time, or you can input the right time.
3. Press  or Save soft key to save the configuration.






To configure the Time & Date Format via phone interface


1. To press Menu → Setting → Basic setting → Time & Date Format
2. Press  and  to change between 12 Hour or 24 Hour.
3. Press  and  to change among Y-M-D(year-month-day), M-D-Y(month-day-year), D-M-Y(day-month-year).
4. Press  or Save soft key to save the configuration.



To configure the DHCP time via phone interface


1. To press Menu → Setting → Basic setting → DHCP time

2. Press  and  to change between Disable and Enable.
3. Press  or Save soft key to save the configuration.

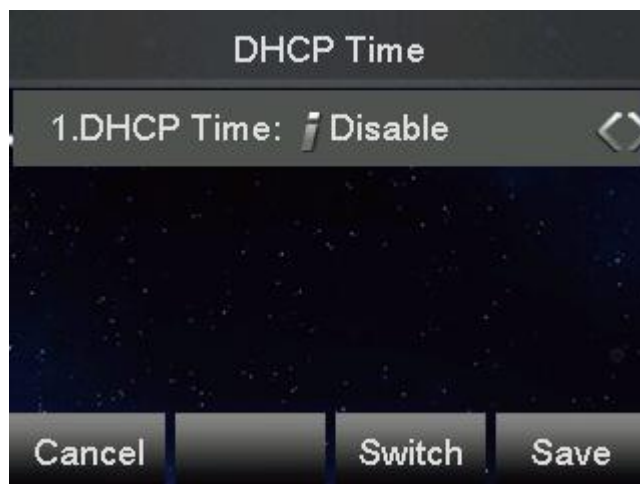



To configure the NTP Server by web interface

1. Login
Login name: admin, password: admin(default)
2. Setting → Date & Time → NTP Server
3. Fill the value in the blank.

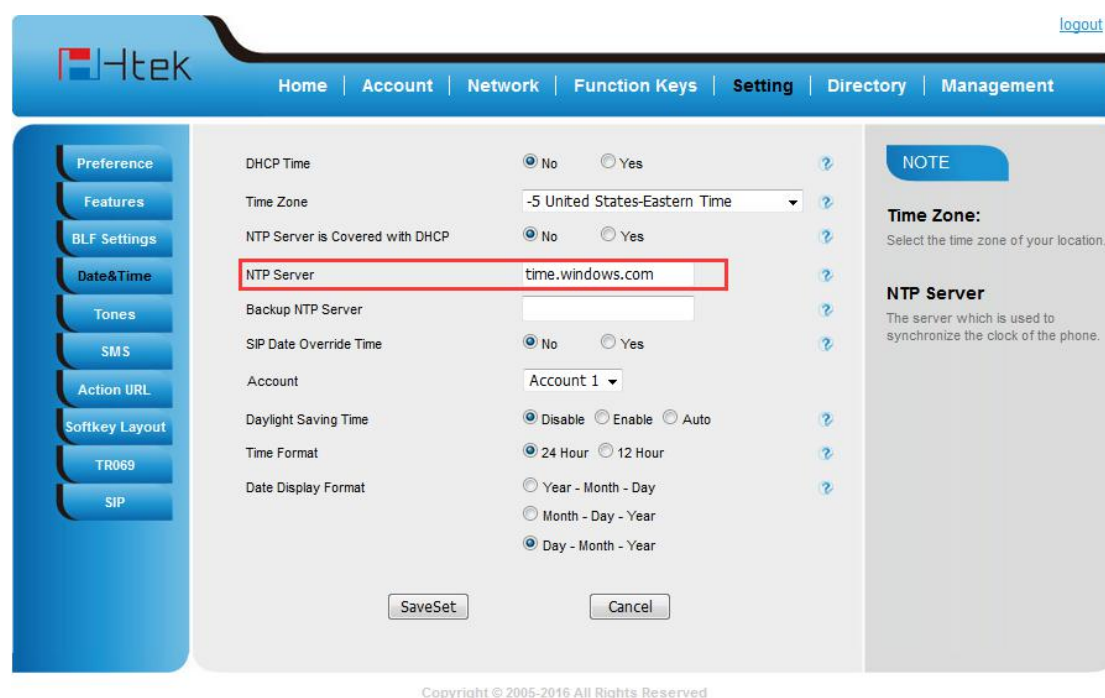

 
To configure the Backup NTP Server by web interface


1. Setting → Date & Time → Backup NTP Server
2. Fill the value in the blank.
3. Click  to save the configuration

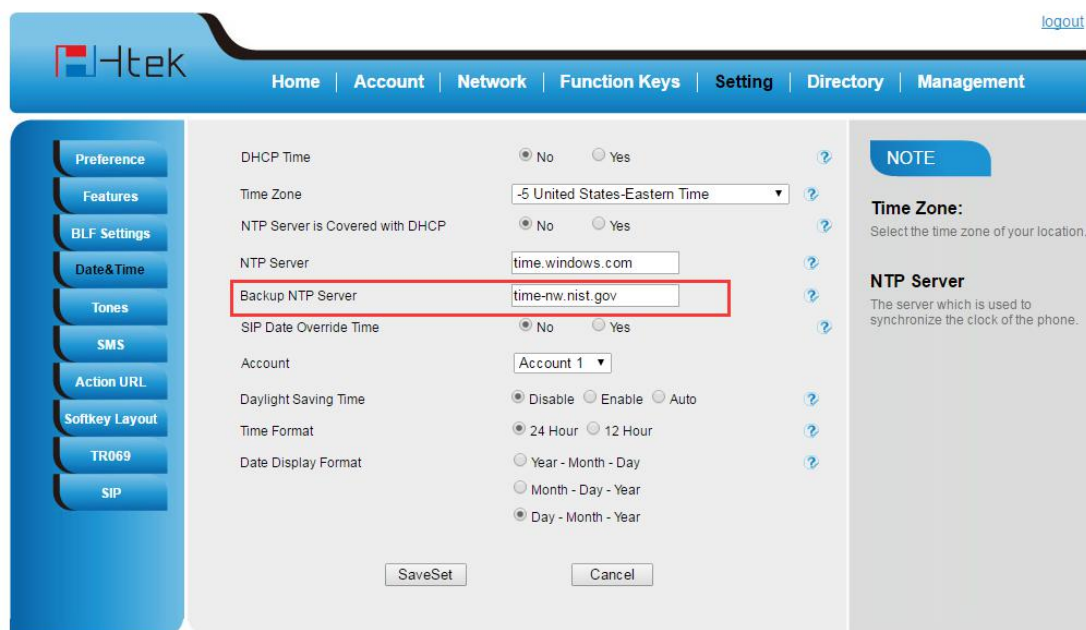

The screenshot shows the Htek web interface for basic setting configuration. The 'Date & Time' settings are visible. The 'Backup NTP Server' field is highlighted with a red box and contains the value 'time-nw.nist.gov'. The 'Time Zone' is set to '-5 United States-Eastern Time'. The 'NTP Server' is 'time.windows.com'. The 'SIP Date Override Time' is 'No'. The 'Account' is 'Account 1'. The 'Daylight Saving Time' is 'Disable'. The 'Time Format' is '24 Hour'. The 'Date Display Format' is 'Day - Month - Year'. A 'NOTE' section on the right explains the 'Time Zone' and 'NTP Server' settings.

 To change the Time Zone and Date Display Format via web interface

1. Setting → Date & Time
2. Select your time zone.
3. Press  to save the configuration.


Home | Account | Network | Function Keys | **Setting** | Directory | Management

Preference
Features
BLF Settings
Date&Time
Tones
SMS
Action URL
Softkey Layout
TR069
SIP

DHCP Time ☒ No ☐ Yes

Time Zone -5 United States-Eastern Time

NTP Server is Covered with DHCP ☒ No ☐ Yes

NTP Server time.windows.com

Backup NTP Server

SIP Date Override Time ☒ No ☐ Yes

Account Account 1

Daylight Saving Time ☒ Disable ☐ Enable ☐ Auto

Time Format ☒ 24 Hour ☐ 12 Hour

Date Display Format ☐ Year - Month - Day ☐ Month - Day - Year ☒ Day - Month - Year

SaveSet Cancel

NOTE


Time Zone:
Select the time zone of your location.

NTP Server
The server which is used to synchronize the clock of the phone.

Copyright © 2005-2016 All Rights Reserved

To change the SIP Date Override Time via web interface

- Setting → Date & Time → Account
- Select On or Off for SIP Date Override Time .
- Click SaveSet to save the configuration.


Home | Account | Network | Function Keys | **Setting** | Directory | Management

Preference
Features
BLF Settings
Date&Time
Tones
SMS
Action URL
Softkey Layout
TR069
SIP

DHCP Time ☒ No ☐ Yes

Time Zone -5 United States-Eastern Time

NTP Server is Covered with DHCP ☒ No ☐ Yes

NTP Server time.windows.com

Backup NTP Server time-nw.nist.gov

SIP Date Override Time ☒ No ☐ Yes

Account Account 1

Daylight Saving Time ☒ Disable ☐ Enable ☐ Auto

Time Format ☒ 24 Hour ☐ 12 Hour

Date Display Format ☐ Year - Month - Day ☐ Month - Day - Year ☒ Day - Month - Year

SaveSet Cancel

 
NOTE


Time Zone:
Select the time zone of your location.

NTP Server
The server which is used to synchronize the clock of the phone.

To change the Account via web interface


- Setting → Date & Time → Account.


2. Select desired Account.
3. Click  to save the configuration.

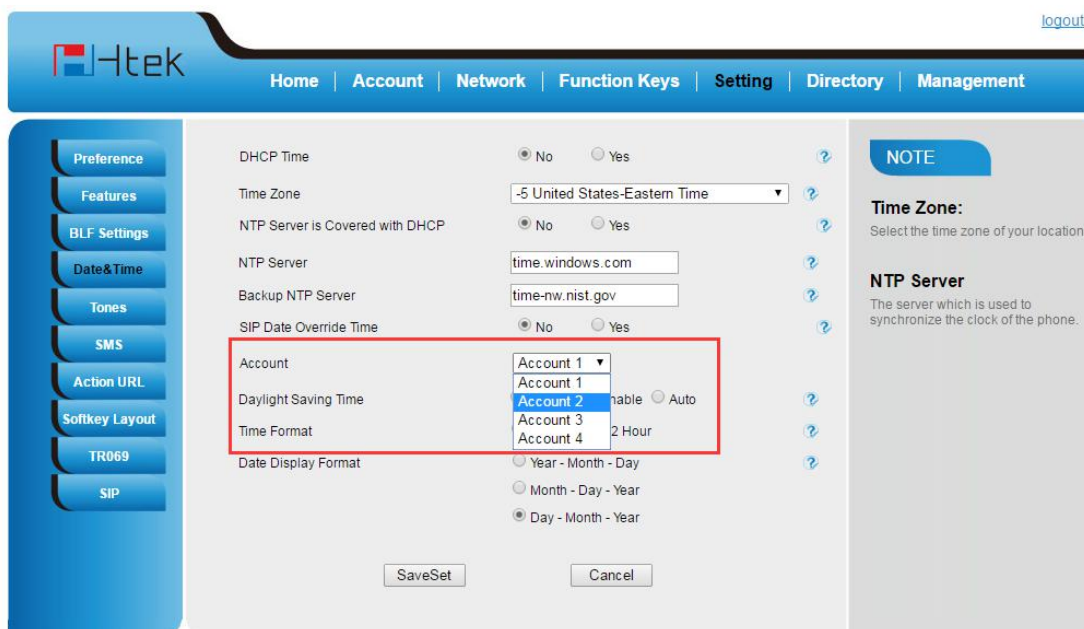

The screenshot shows the Htek web interface with the 'Setting' tab selected. The 'Date & Time' section is active in the left sidebar. The main content area displays various time-related settings. A red box highlights the 'Account' dropdown menu, which is open, showing a list of accounts: 'Account 1', 'Account 1', 'Account 2' (which is highlighted in blue), 'Account 3', and 'Account 4'. Below the dropdown, the 'Daylight Saving Time' is set to 'Auto', 'Time Format' is '2 Hour', and 'Date Display Format' is 'Day - Month - Year'. At the bottom of the settings area are 'SaveSet' and 'Cancel' buttons. On the right side, there is a 'NOTE' section with information about 'Time Zone' and 'NTP Server'.

To change the Daylight Saving Time via web interface

1. Setting → Date & Time → Daylight Saving Time
2. Select Disable or Enable or Auto for Daylight Saving Time.
3. Click  to save the configuration.

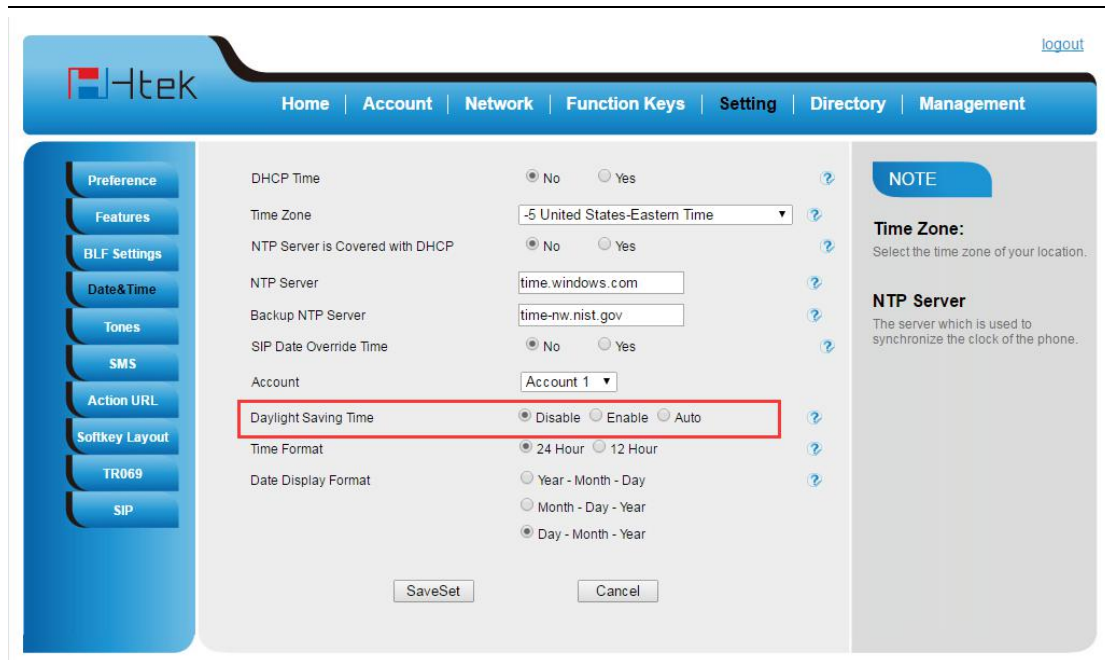

Note:

If the IP Phone cannot obtain the time and date from the Simple Network Time Protocol (SNTP) server, please contact your system administrator for more information.


Daylight Saving Time

Daylight Saving Time (DST) is the practice of temporary advancing clocks during the summertime so that evenings have more daylight and mornings have less. Typically, clocks are adjusted forward one hour at the start of spring and backward in autumn. Many countries have used the DST at various times, details vary by location. The DST can be adjusted automatically from the time zone configuration. Typically, there is no need to change this setting

LED Status Setting

The LED Status setting mainly defines the power indicator LED.

To configure LED Status via web interface:




1. Click Setting→Preference
2. Select Yes or No for Power Status, Ringing Status, Miss Calls Status and Voice Message Status.
3. Click  for the setting.

For the LED status description, see: LED Instruction [Power Indicator LED](#)

LED Status Setting:		
Power Status	<input checked="" type="radio"/> Yes	<input type="radio"/> No
Ringing Status	<input checked="" type="radio"/> Yes	<input type="radio"/> No
MissCalls Status	<input type="radio"/> Yes	<input checked="" type="radio"/> No
Voice Message Status	<input type="radio"/> Yes	<input checked="" type="radio"/> No




Key as Send

To configure Key as Send via phone interface:

1. Press Menu → Features → Key as Send
2. Press  and  key to select the enable choice.
3. Press  or Save soft key to save the configuration



To cancel # Key as Send via phone interface:


1. Press Menu → Features → Key as Send
2. Press  and  key to select the disable choice.
3. Press  or Save soft key to save the configuration

Network Setting

Htek IP Phone supports IPv4, IPv6, IPv4&IPv6. They have three mode of Network: DHCP, Static, and PPPoE. The default mode is DHCP, it will obtain IP address and other information automatically.

If your phone cannot contact a DHCP server for any reason, you need to configure a static IP address manually.

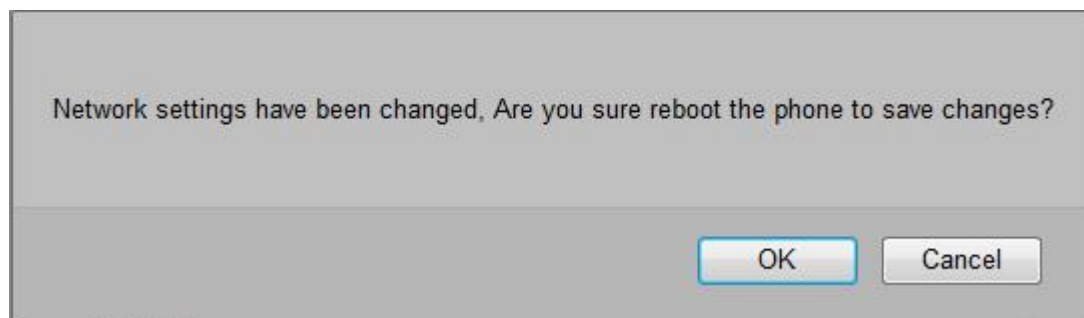


When switch DHCP, Static IP and PPPoE to each other, or change the Static IP on webpage, it will show the warning of restart as following.




IPv4


If you set IP Mode to IPv4, IP phone will use IPv4 address. IPv4 has three network modes: DHCP, Static, and PPPoE


To configure IPv4 via phone interface:

1. Press Menu→Setting→Advanced Settings (password: admin) →Network→WANPort →IP Port Mode.
2. Press  or  to change the IP Port Mode..
3. Press  or Save soft key to save the configuration.

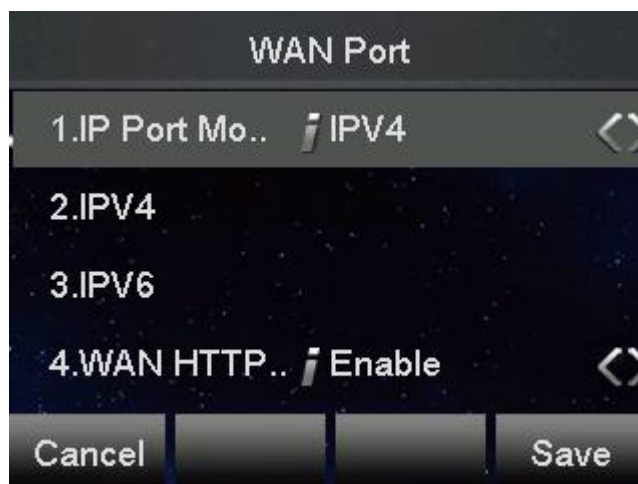

To configure IPv4 via Web interface:

1. Click Network→Basic→ Internet Port
2. Select IPv4 for Internet Port
3. Click  for the setting.

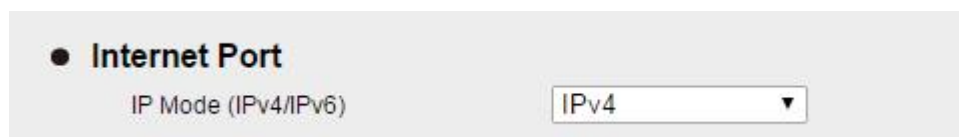

To configure DHCP via phone interface:


1. Press Menu→Setting→Advanced Settings (password: admin) →Network→WAN Port IPv4→DHCP mode.
2. Click Save and restart the phone.

To configure a static IP address via phone interface:

1. Press Menu→Setting→Advanced Settings (password: admin) →Network→WAN Port →IPv4 →Static mode.
2. Enter the parameters: IP, Netmask, Gateway, Pri. DNS(primary dns), sec. DNS(second DNS) in the corresponding fields.

Static mode	
1.IP:	192.168.1.102
2.Netmask:	255.255.254.0
3.Gateway:	192.168.0.2
4.Pri.DNS:	218.2.2.2
<div> Cancel 123 Delete Save </div>	


3. Click Save and restart the phone.

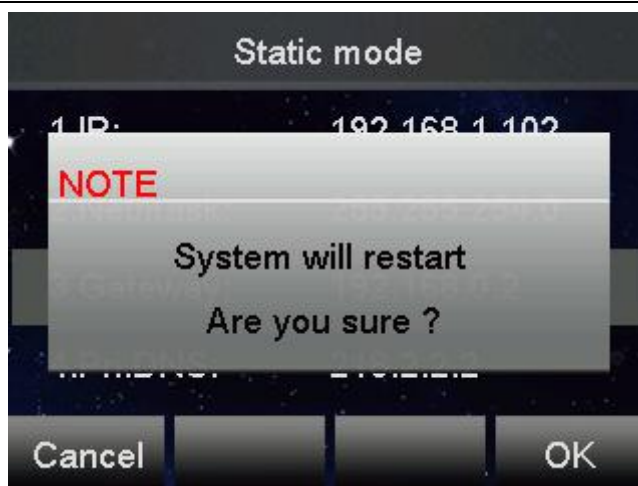

Press the Save soft key to accept the change or the Cancel soft key to cancel. If you are using an xDSL modem, you can connect your phone to the Internet via PPPoE mode. You can set a WAN port to be a PPPoE port. The PPPoE port will perform a PPP negotiation to obtain the IP address. Contact your system administrator for the PPPoE user name and password.

To configure PPPoE via phone interface:


1. Press Menu→Setting→Advanced Settings (password: admin) →Network→WANPort →PPPoE mode.
2. Enter the User ID and password
3. Click Save and restart the phone.

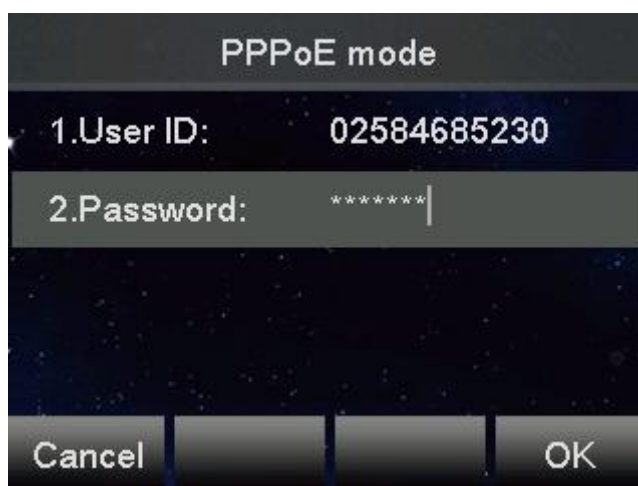

To configure Network via web interface:

1. Click Network→Basic→IPv4 setting

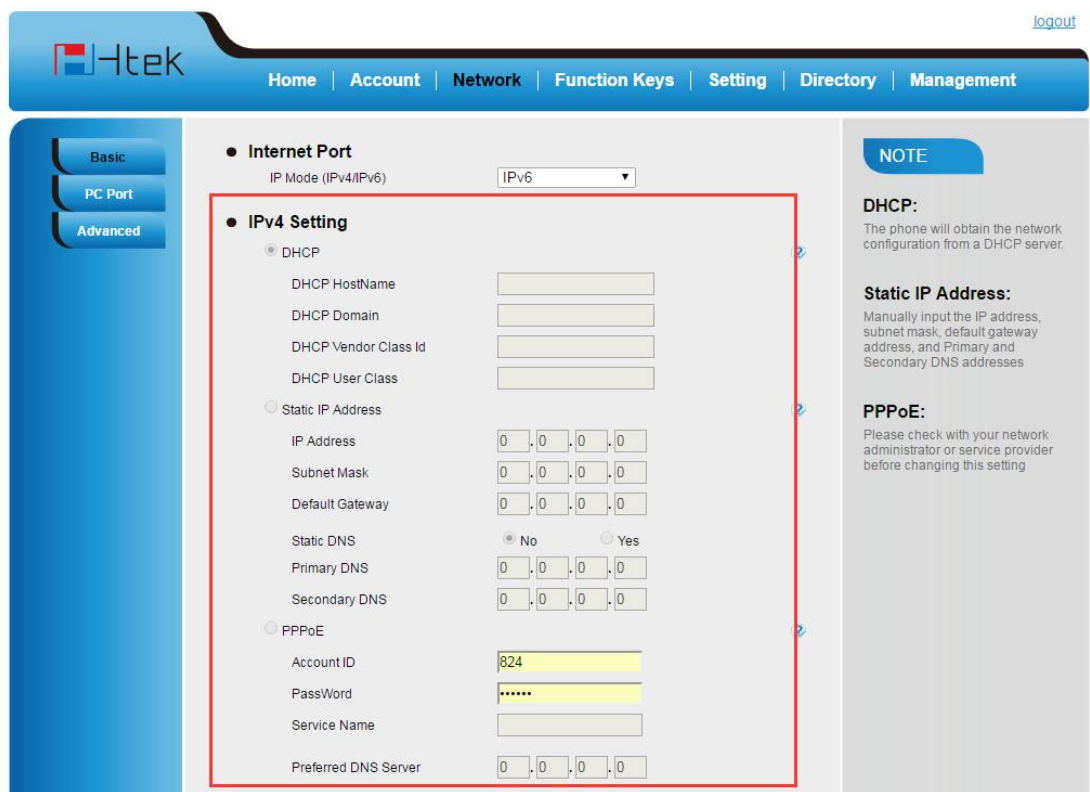


2. Select the desired Type: DHCP, Static or PPPoE
3. Filled the necessary information.
4. Click the SaveSet and restart the phone.




IPv6


If you set IP Mode to IPv6, IP phone will use IPv6 address. IPv4 has two network modes: DHCP, Static

To configure IPv6 via phone interface:

1. Press Menu → Setting → Advanced Settings (password: admin) → Network → WANPort → IP Port Mode.
2. Press  or  to change the IP Port Mode..
3. Press  or Save soft key to save the configuration.

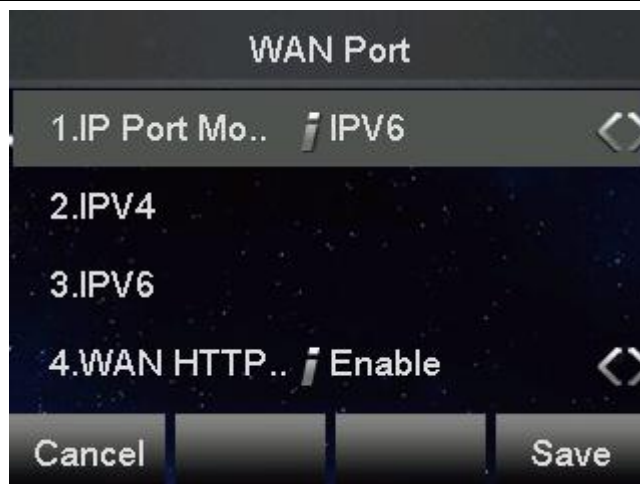

To configure IPv6 via Web interface:

1. Click Network→Basic→ Internet Port
2. Select IPv6 for Internet Port
3. Click  for the setting.




To configure DHCP via phone interface:

1. Press Menu→Setting→Advanced Settings (password: admin) →Network→WAN Port IPv6→DHCP mode.
2. Click Save and restart the phone.

To configure a static IP address via phone interface:

1. Press Menu→Setting→Advanced Settings (password: admin) →Network→WANPort →IPv6 →Static mode.
2. Enter the parameters: IP, IPV6 Prefix, Gateway, Pri. DNS(primary dns), sec. DNS(second DNS) in the corresponding fields.

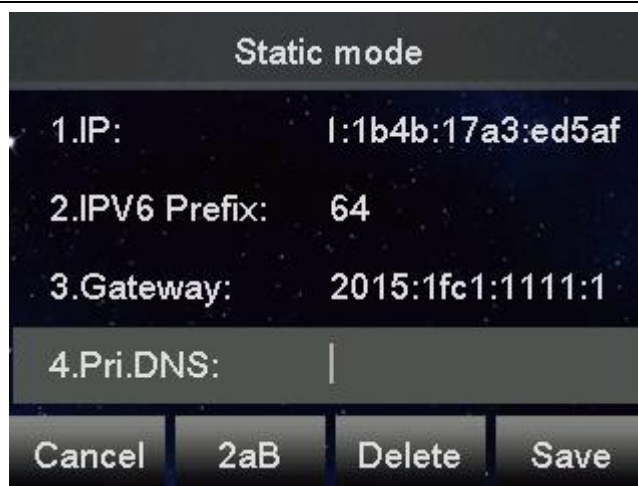

Static mode

1.IP: 1:1b4b:17a3:ed5af


2.IPV6 Prefix: 64

3.Gateway: 2015:1fc1:1111:1

4.Pri.DNS: |

Cancel 2aB Delete Save

- Click Save and restart the phone.

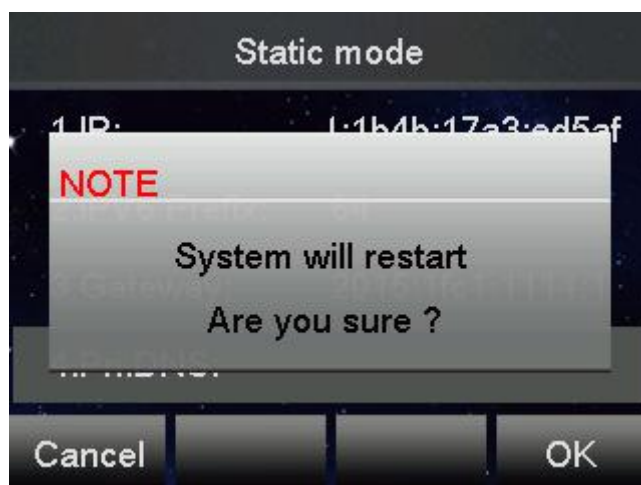

Static mode

1.IP: 1:1b4b:17a3:ed5af

2.IPV6 Prefix: 64

3.Gateway: 2015:1fc1:1111:1

4.Pri.DNS: |

NOTE

System will restart

Are you sure ?

Cancel OK

To configure Network via web interface:

- Click Network→Basic→IPv6 setting
- Select the desired Type: DHCP, Static
- Fill required fields.
- Click the SaveSet and restart the phone.

IPv6 Setting

☒ DHCP
 ☐ Static IP Address

IP Address

IPv6 Prefix (0~128)

Default Gateway

IPv6 Static DNS

Primary DNS

Secondary DNS

64

☒ No
 ☐ Yes

SaveSet

Restart




?


?

IPv4&IPv6


If you set IP Mode to IPv4&IPv6, IP phone will support both IPv4 and IPv6 address. The settings of DHCP, Static, and PPPoE are same as above.


To configure IPv4&IPv6 via phone interface:

- Press Menu→Setting→Advanced Settings (password: admin) →Network→WANPort →IP Port Mode.
- Press  or  to change the IP Port Mode..
- Press  or Save soft key to save the configuration.

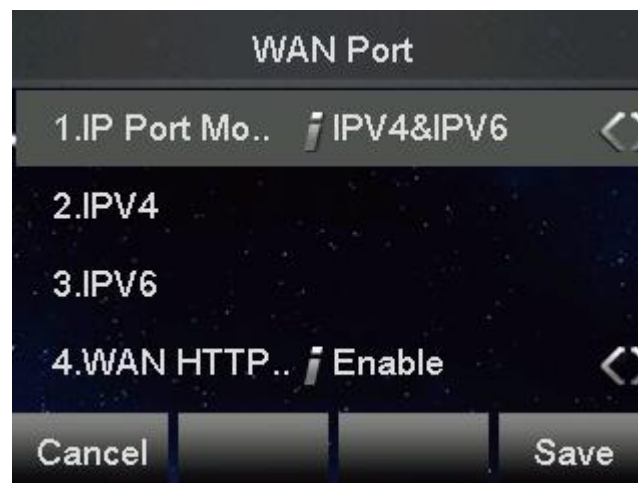

 To configure IPv4&IPv6 via Web interface:

1. Click Network→Basic→ Internet Port
2. Select IPv4&IPv6 for Internet Port
3. Click  for the setting.

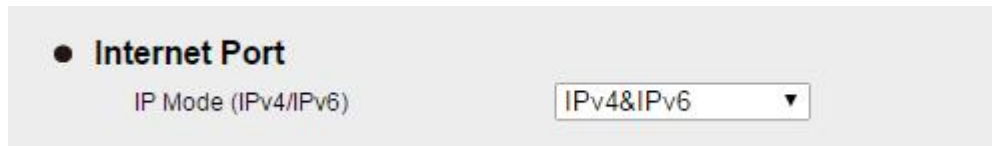**Note:**

Wrong network parameters may result in inaccessibility of your phone and may also have an impact on your network performance. For more information about these parameters, contact your system administrator.

PC Port

Three modes for PC port: bridge, connect to Expansion Module and router.

To configure PC Bridge via Phone interface:

1. Press Menu→Setting→Advanced Settings (password: admin) →Network→PC Port →Bridge mode.
2. Click Save
3. Click the OK button, then the phone will reboot.

To configure PC router via Phone interface:

1. Press Menu→Setting→Advanced Settings (password: admin) →Network→PC Port →Router mode.
2. Enter the IP, Netmask and DHCP server
3. Click Save
4. Click the OK button, then the phone will reboot

To configure PC Connect to Expansion Module via Phone interface:

1. Press Menu→Setting→Advanced Settings (password: admin) →Network→PC Port → Connect to Expansion Module.
2. Click Save
3. Click the OK button, then the phone will reboot

To configure Bridge via web interface:

1. Click Network→Basic
2. Select ☒ As Bridge
3. Click and the phone will reboot automatically

**To configure Router via web interface:**

1. Click Network→Basic
2. Select As Router
3. Fill the IP address and other necessary information.
4. Click and the phone will reboot automatically

PC Port

☐ As Bridge
 ☐ Connect to Expansion Module
 ☒ As Router

IP Address 192.168.22.1

Subnet Mask 255.255.255.0

IP Lease Time 24

DHCP Server Disable

DMZ IP

To configure PC Connect to Expansion Module via web interface:

1. Click Network→Basic
2. Select As Connect to Expansion Module
3. Click and the phone will reboot automatically

PC Port

☐ As Bridge
 ☒ Connect to Expansion Module
 ☐ As Router

IP Address 192.168.22.1

Subnet Mask 255.255.255.0

IP Lease Time 24

DHCP Server Disable

DMZ IP

Contact Setting

This section provides the operating instructions for managing contacts. The topics include:

- Local Directory
- Remote Phonebook


- LDAP
- Search Contact

Local Directory

In the directory, you can add or delete your friends, business partner or anyone others' phone No. so you will not forget their number. Or put some anonymous phone No. in the blacklist to prevent from being disturbed. The local Directory can add up to 1000 contacts.





A. To add contacts list into local directory


To add contacts manually via phone interface


1. Press Menu → Directory → Local Directory
2. Press Add soft key.
3. Enter the necessary information as Name, Phone number...
4. Press save soft key or  to add the contacts successfully.





To add contacts from history via phone interface:

1. Press History soft key or press Menu → History → Local history
2. Press  and  to select the targeted one. (Press  and  switched among the All calls, Dialed calls, Received calls, Missed Calls and Forward Calls).
3. Press Option soft key → Add to Contacts
4. Edit the necessary information as Name, Phone number...

5. Press save soft key or  to add the contacts successfully.

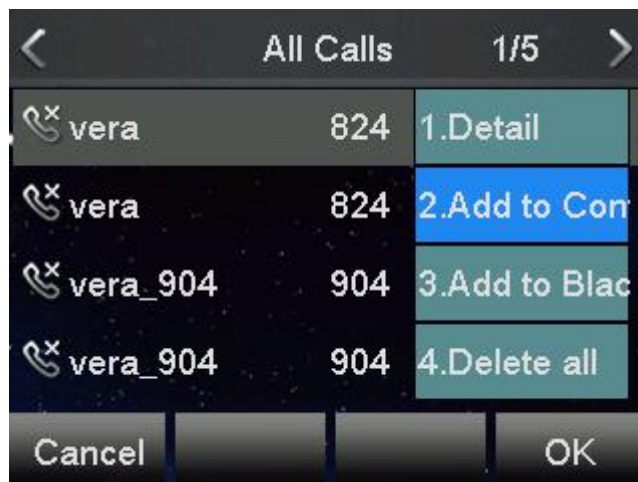

To add contacts via web interface:

 1. Click Directory→Directory
2. Enter the name, number and some other information.
3. Press  and then press  button.

[logout](#)

Home
Account
Network
Function Keys
Setting
Directory
Management

Directory

Remote Phone Book

Call History

LDAP

BroadSoft

Calllog

MultiCast Paging

Contact
BlackList
Hangup

Index	Display Name	Office Number	Mobile Number	Other Number	Account	
1	Nancy	827			Auto	<input type="checkbox"/>

Save
Delete
Move to Contact/blacklist

Contact

Name

Office Number

Mobile Number

Other Number

Account

Auto

Ring

Default

Group

Not In Group

Photo

Auto

Add
Edit
Search

Delete Photo

Browse...

Upload Photo

Import Local Contacts

NOTE

Add Contact/Blacklist

Fill out the contact information. User shouldn't leave contact name blank.

Delete Contact/Blacklist

Select the contact you want to delete in the grid, and then press the button Delete to confirm.

Move to Contact/blacklist

Choose the contacts you want to move in the grid, and press the button move to Contact/Blacklist to move it.

Upload Photo

The format of the photo supported is jpg or bmp, and the size should be less than 128 *128

Import

Browse the file in XML format.

Export

Click Export button and create a file with whose name you prefer to export.


B: To add contacts into blacklist


To add blacklist manually via phone interface:

1. Press Menu → Directory → Blacklist
2. Press Add soft key.
3. Enter the necessary information as Name, Phone number...
4. Press save soft key or to add the contacts successfully.


To add blacklist from history via phone interface:


1. Press History soft key or press Menu → History → Local history
2. Press and to select the targeted one.
3. Press Option soft key → Add to Blacklist
4. Edit the necessary information as Name, Phone number...

5. Press save soft key or  to add successfully.

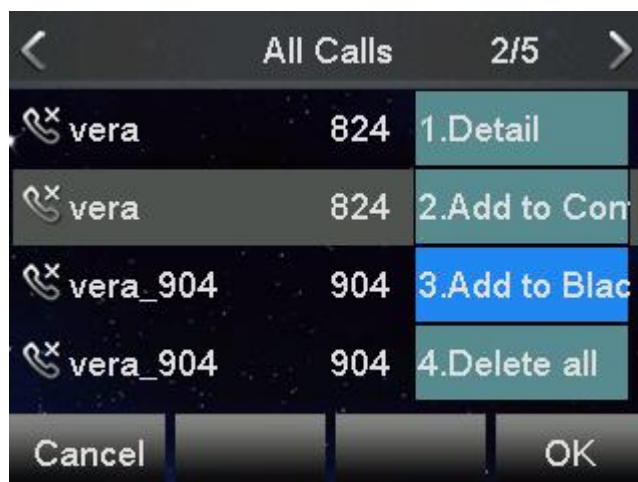

Upload Contacts photo via web interface:

1. Click Directory and select the desired contact.
2. Click Choose file to select the photo for the contact
3. Click  to upload the photo.

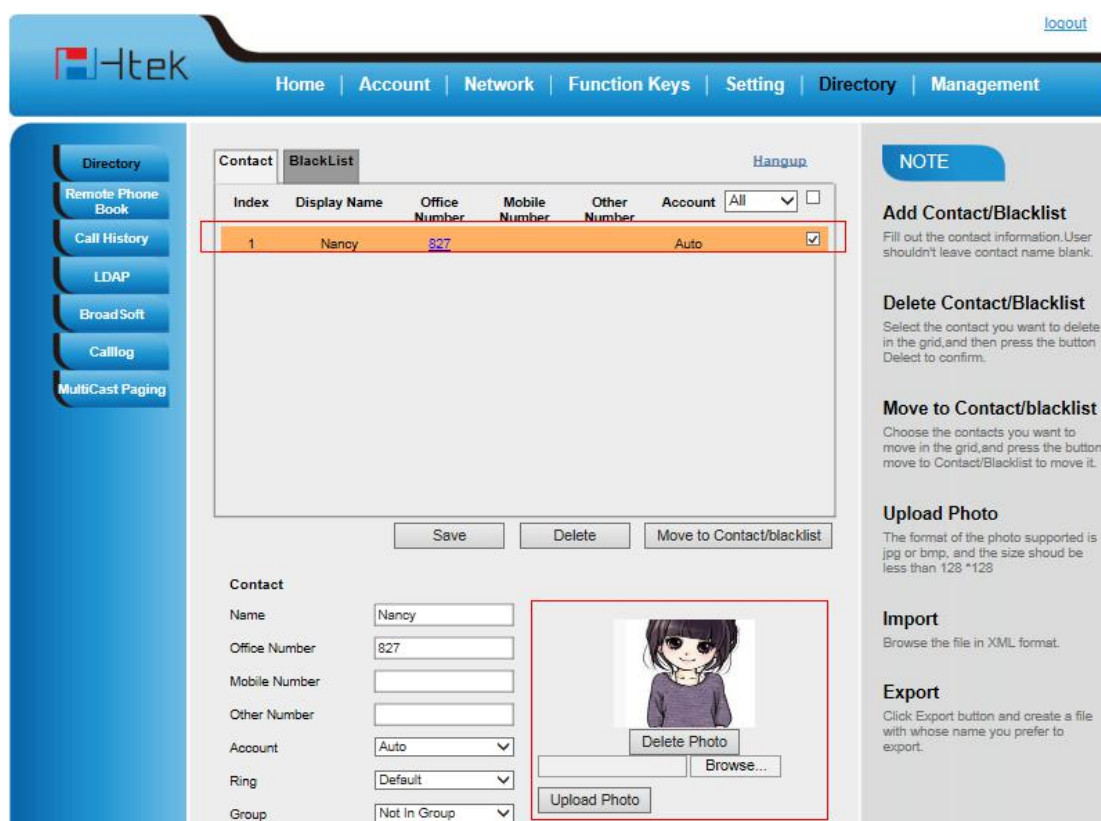

Directory

Home | Account | Network | Function Keys | Setting | Directory | Management

Logout

Directory

Remote Phone Book
Call History
LDAP
BroadSoft
Calllog
MultiCast Paging

Contact **BlackList** **Hangup**

Index	Display Name	Office Number	Mobile Number	Other Number	Account	All	
1	Nancy	827			Auto	<input checked="" type="checkbox"/>	

Save Delete Move to Contact/blacklist

Contact

Name: Nancy
Office Number: 827
Mobile Number:
Other Number:
Account: Auto
Ring: Default
Group: Not In Group

Photo

Delete Photo
Browse...
Upload Photo

NOTE

Add Contact/Blacklist
Fill out the contact information. User shouldn't leave contact name blank.

Delete Contact/Blacklist
Select the contact you want to delete in the grid, and then press the button Delete to confirm.


Move to Contact/blacklist
Choose the contacts you want to move in the grid, and press the button move to Contact/Blacklist to move it.

Upload Photo
The format of the photo supported is jpg or bmp, and the size should be less than 128 * 128

Import
Browse the file in XML format.

Export
Click Export button and create a file with whose name you prefer to export.

When you place a call from the contact, the phone idle screen will show the contact photo.

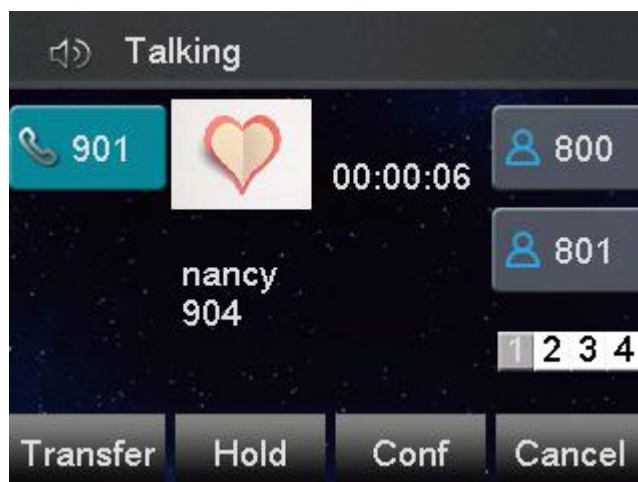

Note:

The format of the photo supported is jpg or bmp

Photo size should be less than 2M bytes, name length should be less than 48.

To import or export the contact list

You can manage your phone's local directory via phone or web user interface. But you can only import or export the contact list via web interface.

To import an XML file of contact list via web interface:

1. Click on Directory
2. Click Browse to select a contact list file (file format must be .xml) from your local system.
3. Click Import XML to import the contact list.

To export an XML file of contact list via web interface:


1. Click on Directory
2. Click Export XML to import the contact list.

To import a CSV file of contact list via web interface:

1. Click on Directory
2. Click Browse to select a contact list file (file format must be .csv) from your local system.
3. Click Import Csv to import the contact list.

To export a CSV file of contact list via web interface:

1. Click on Directory
2. Click Export Csv to import the contact list.

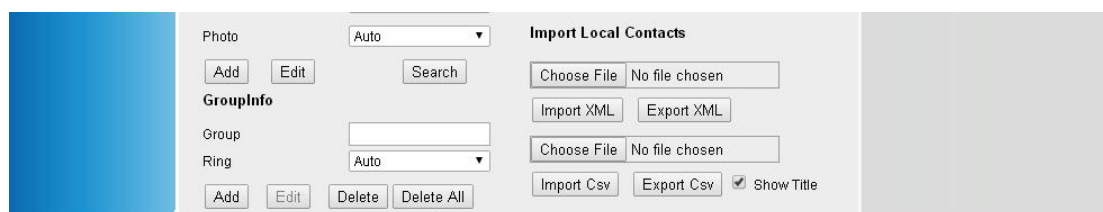


Note:

If the xml file and CSV file more than 1000 contacts, the phone will only upload 1000 contacts.

Remote Phonebook

To set Remote Phonebook via web interface:

1. Login the webpage and click Directory→Remote Phone Book
2. Fill the path of the remote file in the Phone Book URL field.
For example,
<http://192.168.0.240/Phonebook/Phonebook.xml>
3. Fill the Name and then click **SaveSet** to save the configuration.

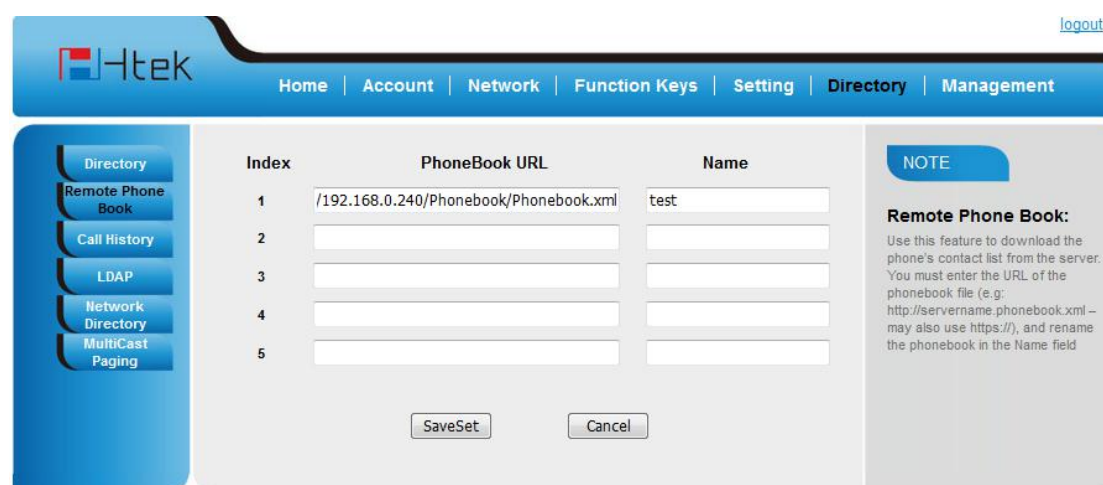

Index	PhoneBook URL	Name
1	/192.168.0.240/Phonebook/Phonebook.xml	test
2		
3		
4		
5		

NOTE

Remote Phone Book:
Use this feature to download the phone's contact list from the server. You must enter the URL of the phonebook file (e.g: <http://servername.phonebook.xml> – may also use https://), and rename the phonebook in the Name field

To check the contacts via phone interface:

Press Directory→Left Button→Left Button, and then you can see the item you set, press enter you will find the detail.

For More detail, please refer to: [Remote Phonebook](#) on www.htek.com .

Note:

Every remote contact only supports 1000 contacts.

LDAP Phonebook

When use the LDAP feature, you can get the LDAP Phonebook directly.

To configure LDAP via web interface:

1. Login webpage and click Directory→LDAP
2. Filled the LDAP Name Filter:
 - a) This parameter specifies the name attributes for LDAP searching. The “%” symbol in the filter stands for the entering string used as the prefix of the filter condition.
 - b) For example (cn=%), when the name prefix of the cn of the contact record matches the search criteria, the record will be displayed on the IP PHONE LCD.
3. Filled LDAP Number Filter:

This This parameter specifies the number attributes for LDAP searching.
4. Filled Server Address: Fill the domain name or IP address of the LDAP Server.
For example: 192.168.0.9
5. Port(the port of the LDAP Serve) Base, User Name, Password
6. Max.Hits(1-32000): the maximum number of the search results to be returned by the LDAP server.
7. LDAP Display Name: the display name of the contact record displayed on the LCD screen.
8. Filled the relative value and then click save button the save the settings.

Following is the example screenshot for the configuration.

[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

[Directory](#)
[Remote Phone Book](#)
[Call History](#)
[LDAP](#)
[Network](#)
[Directory](#)
[MultiCast](#)
[Paging](#)

LDAP Name Filter: (cn=%)

LDAP Number Filter: ((telephoneNumber=)

Server Address: 192.168.0.9

Port: 389

Base: dc=pbx,dc=com

User Name: cn=admin,dc=pbx,dc=

Password:

Max.Hits(1~32000): 32000

LDAP Display Name: cn

Search Delay(0~2000ms):

Protocol: ☒ Version2 ☐ Version3

LDAP Lookup For Incoming Call: ☐ On ☒ Off

LDAP Sorting Results: ☐ On ☒ Off

LDAP Synchronize Time(0~9999mins):

[SaveSet](#) [Cancel](#)

NOTE

To configure LDAP Key via web interface:

1. Click Function Key→Line Key→ choose Line Key 1(for example)
2. Select LDAP in the Type field.
3. Click Saveset to save the configuration.

[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

[Line Key](#)
[Programmable Key](#)
[EXP KEY](#)

Line Label Length: Default

Line Page Indicator: Disable


Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	LDAP	Default			Account 1	

NOTE

To Configure LDAP Key via phone interface:

1. Press Menu→Feature→Function Keys→Line Keys as Function Keys→Line Key 1
2. Select LDAP in the Type field
3. Press save or OK key to save the configuration.

When press the LDAP Key the LCD will display as following:

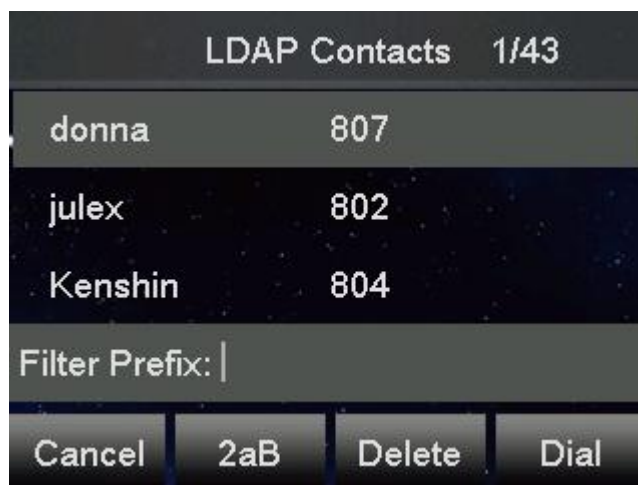

For More detail, please refer to [LDAP Notes](http://www.htek.com) on www.htek.com

Search Contact

You can search contact in all contacts, local contacts, remote contacts and LDAP contact.

To search contact in all contacts:


1. Click the Directory softkey on Idle interface.
2. Click the More softkey, then you can see the Search softkey
3. Click the Search softkey, you can enter the desired part of name or part of number.
4. Click Ok softkey, then with the search content to match the contact will be displayed on the LCD.



Note:

If you don't click the OK softkey, then IP Phone will display the relevant contacts automatically within 5 seconds


To search contact in Local contacts:

1. Click the Directory softkey on Idle interface.
2. Click the  button and select the Local contacts list.
3. Click the More Softkey, then you can see the Search softkey
4. Click the Search softkey, you can enter the desired part of name or part of number.
5. Click Ok softkey, then with the search content to match the contact will be displayed on the LCD.

Note:

If you don't click the OK softkey, then IP Phone will display the relevant contacts automatically within 5 seconds

To search contact in Remote contacts:

1. Click the Directory softkey on Idle interface.
2. Click the  button and select the remote contacts list.
3. Select the desired the remote contact and click Enter softkey.
4. Click the Search softkey, you can enter the desired part of name or part of number.
5. Click Ok softkey, then with the search content to match the contact will be displayed on the LCD.

Note:

If you don't click the OK softkey, then IP Phone will display the relevant contacts automatically within 5 seconds

To search contact in LDAP contacts:



1. Click the LDAP function key.
2. Enter the first character or more of contact's name.
3. Select the desired the remote contact and click Enter softkey.
4. Then IP Phone will display the relevant contacts automatically within Search Delay.


Call History Setting

Call History

This phone maintains call history lists of Dialed Calls, Received Calls, Missed Calls and Forwarded Calls. The call history list supports up to 100 entries in all on phone interface and more than 1500 items. You can check the call history, dial a call, add a contact or delete an entry from the call history list. You should enable the history record feature in advance.


To enable the history record feature via phone interface:

1. Press Menu→Feature→History Setting
2. Press  and  or Switch soft key to enable History record.
3. Press Save soft key to save the configuration.

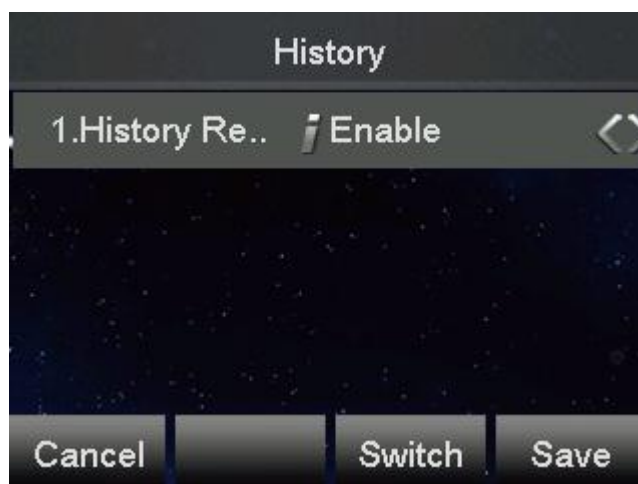

To check the call history via phone interface:

1. Press the History soft key. The LCD screen displays All Calls list.
2. Press Right or Left Key to switch among All Calls, Missed Calls, Received Calls, Dialed Calls and Forwarded Calls.
3. Press to select the desired entry.
4. Press the Option soft key, and then select Detail from the prompt list.
5. The detailed information of the entry appears on the LCD screen.

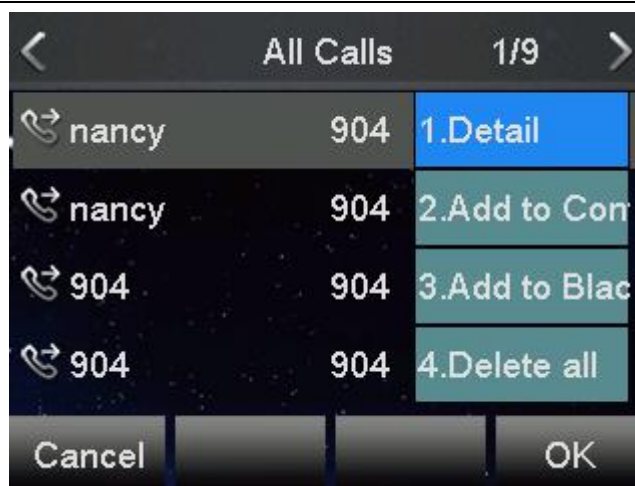

To delete an entry from the call history list via phone interface:


1. Press the History soft key.
2. Press Right or Left Key to switch among All Calls, Missed Calls, Received Calls, Dialed Calls and Forwarded Calls.
3. Press UP or DOWN key to select the desired entry.
4. Press the Delete soft key.

To delete all entries from the call history list via phone interface:

1. Press the History soft key.
2. Press Right or Left Key to switch among All Calls, Missed Calls, Received Calls, Dialed Calls and Forwarded Calls.
3. Press the Option soft key, and then select Delete All from the prompt list.
4. Press the OK soft key.
5. Press the OK soft key to confirm the deleting or the Cancel soft key to cancel.

To check the call history via web interface:

1. Click Directory→ Call History
2. Click Dialed List, Missed List, Received List, Forwarded List then you can see the history list.


[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

[Directory](#)
[Remote Phone Book](#)
[Call History](#)
[LDAP](#)
[Network Directory](#)
[MultiCast Paging](#)

Diald List
Missed List
Received List
Forwarded List


Index	Date	Time	Local Identity	Name	Tel Number
1	00-00-0000	00:26:31		*50801	*50801
2	00-00-0000	00:26:24		*50800	*50800
3	00-00-0000	00:24:49		800	800
4	00-00-0000	00:23:12		800	800
5	00-00-0000	00:22:20		800	800
6	00-00-0000	00:21:23		800	800
7	00-00-0000	00:21:07		800	800
8	00-00-0000	00:20:48		801	801
9	00-00-0000	00:03:21		801	801
10	02-08-2016	02:21:40 am		513	513
11	30-05-2016	11:02:52 pm		2000	224.5.6.20:2000
12	30-05-2016	11:02:44 pm		2000	224.5.6.20:2000
13	26-05-2016	01:19:41		56	56

Export XML
Export Csv

NOTE

To Dial a call from Call History via web interface:

1. Click Directory→Call History
2. Select the desired history item, and click Tel Number.
3. Then the call is dialed on phone.



[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

Directory

Remote Phone Book

Call History

LDAP

Network Directory

MultiCast Paging





Diald List
Missed List
Received List
Forwarded List

Index	Date	Time	Local Identity	Name	Tel Number
1	00-00-0000	00:26:31		*50801	*50801
2	00-00-0000	00:26:24		*50800	*50800
3	00-00-0000	00:24:49		800	800
4	00-00-0000	00:23:12		800	800
5	00-00-0000	00:22:20		800	800
6	00-00-0000	00:21:23		800	800
7	00-00-0000	00:21:07		800	800
8	00-00-0000	00:20:48		801	801
9	00-00-0000	00:03:21		801	801
10	02-06-2016	02:21:40 am		513	513
11	30-05-2016	11:02:52 pm		2000	224.5.6.20:2000
12	30-05-2016	11:02:44 pm		2000	224.5.6.20:2000
13	26-05-2016	01:19:41		56	56

Export XML
Export Csv



NOTE


To Dial a call from Call History via phone interface:

1. Press History soft key or press Menu → History → Local history
2. Press  and  to select the targeted one.
3. Press the Send soft key, , or , or the corresponding line key.





Audio Settings

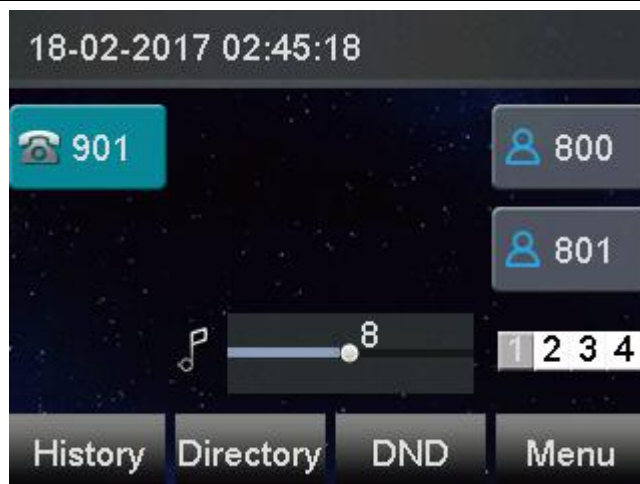Volume

You can adjust the volume for the phone by the volume keys:  and .




To adjust the Ring tone volume via phone interface:

1. Option 1: To press  and  on the idle page
2. Option 2: To press  and  during the call is ringing


To adjust the handset volume via phone interface:

To press  and  during a call in handset mode.

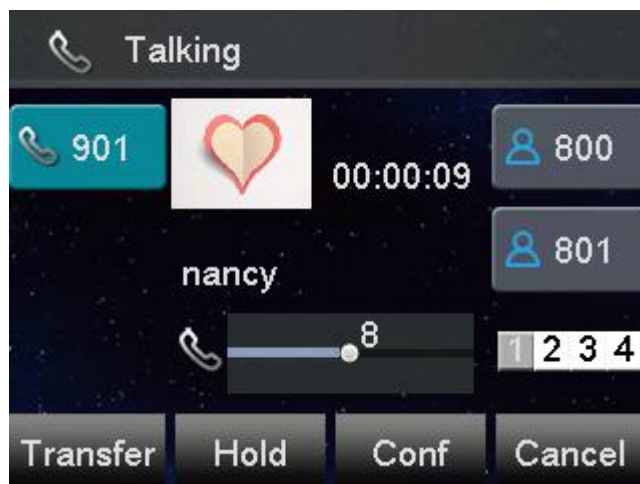


To adjust the headset volume via phone interface:

To press  and  during a call in headset mode.

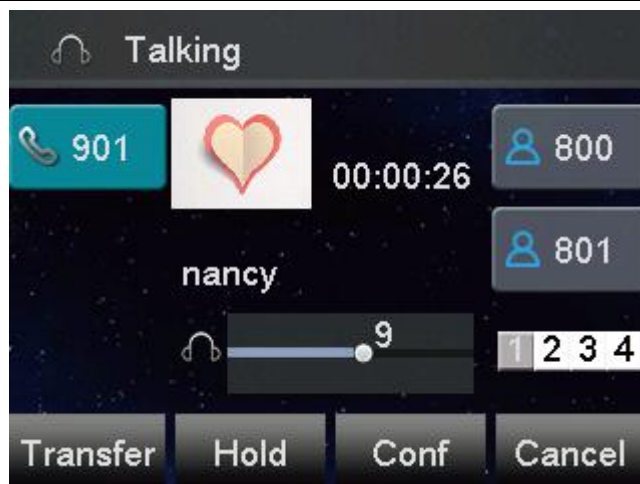

To adjust the speaker Volume via phone interface:

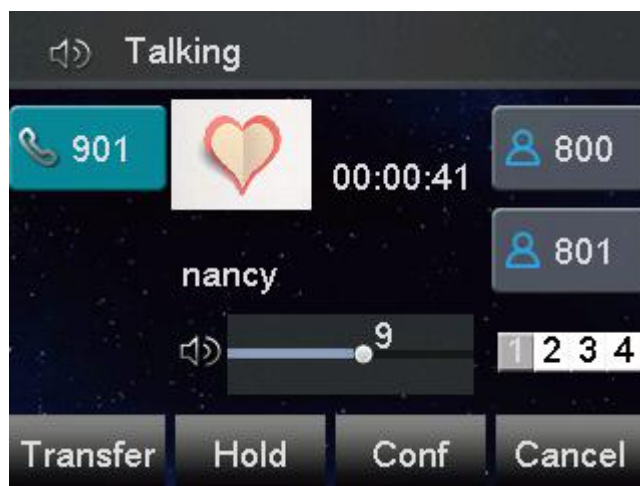


To press  and  during a call in speaker mode.




Ring Tone


You can adjust the type and volume of the ring tone.


To adjust the Ring Tone Type via Phone interface:

1. Press Menu → Setting → Basic Settings → Ring Tone.
2. Press  and  to select the aimed one.
3. Press  or Save soft key to save the configuration.

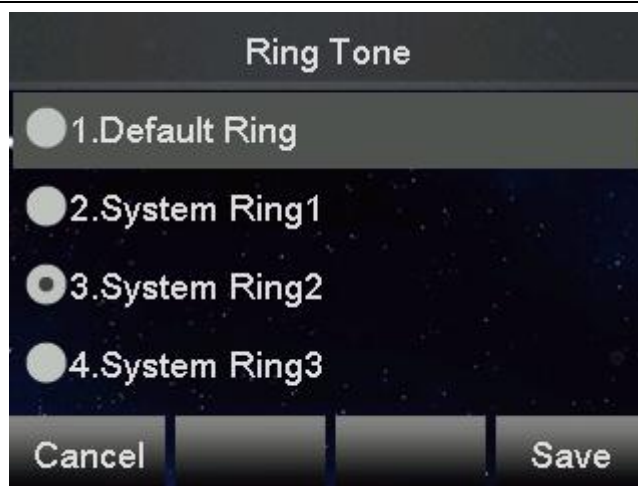



To adjust the Ring Tone Type via Web Interface

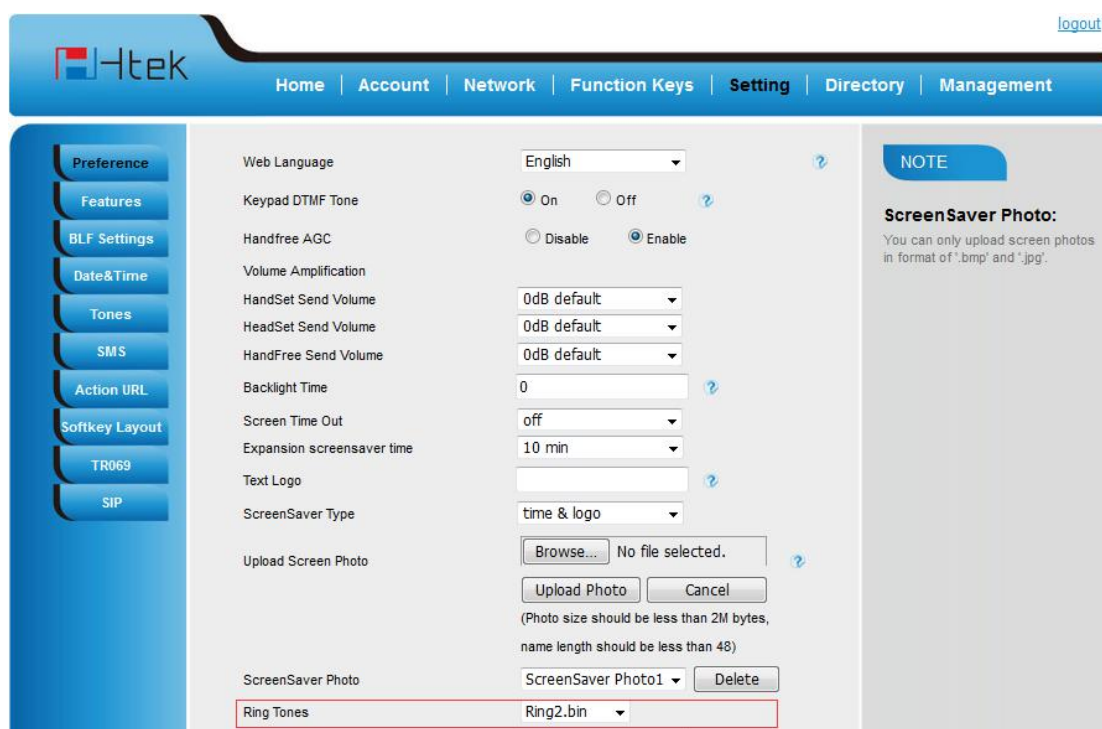1. Setting → Preference → Ring Tone
2. Select the wanted one
3. Click  to save the configuration.





To configure Distinctive Ring Tone via Phone Interface

1. Press Directory

2. Select the target contact
3. Press Detail soft key to edit the contact.
4. Press  and  to select the wanted Ring Tone for the contact
5. Press Save soft key to save the contact.



To configure Distinctive Ring Tone via Web Interface

1. Directory → Directory → Contact
2. Choose the Ring Tone you want to use.
3. Click  →  to save the configuration.

[logout](#)

[Home](#)
[Account](#)
[Network](#)
[Function Keys](#)
[Setting](#)
[Directory](#)
[Management](#)

Directory

Remote Phone Book

Call History

LDAP

BroadSoft

Calllog

MultiCast Paging

Contact
BlackList
Hanqun

Index	Display Name	Office Number	Mobile Number	Other Number	Account	
1	Nancy	827			Auto	<input checked="" type="checkbox"/>

Save
Delete
Move to Contact/blacklist

Contact

Name:

Office Number:

Mobile Number:

Other Number:

Account:

Ring:

Group:

Photo:

Delete Photo
浏览... 未选择文件.

Upload Photo

Import Local Contacts

NOTE

Add Contact/Blacklist
Fill out the contact information. User shouldn't leave contact name blank.

Delete Contact/Blacklist
Select the contact you want to delete in the grid, and then press the button Delete to confirm.

Move to Contact/blacklist
Choose the contacts you want to move in the grid, and press the button move to Contact/Blacklist to move it.

Upload Photo
The format of the photo supported is jpg or bmp, and the size should be less than 128 *128

Import
Browse the file in XML format.

Export
Click Export button and create a file with whose name you prefer to export.

Click [Ring tone](#) for more information.

Voice Mail Tone

This option can set whether to play the beep for phone's voice mail

1. Click the Setting → Preference
2. Select On or Off for Voice Mail Tone.
3. Click SaveSet for the setting.

Voice Mail Tone

☒ On
☐ Off

Play Hold Tone

When you hold the phone, Whether to play hold tone

1. Click the Setting → Preference
2. Set On or Off for Play Hold Tone.

- Click for the setting.

Play Hold Tone
☐ On
☒ Off

Play Hold Tone Delay

When you hold the phone. How many seconds to play beep?

- Click the Setting → Preference
- Set Enable or Disable for Play Hold Tone Delay.

- Click for the setting.

Play Hold Tone Delay

System Settings

Dial Plan


Dial plan is a string of characters that governs the way this phone processes the inputs received from your phone keypad. This phone supports dial plan with following accept digits:

1,2,3,4,5,6,7,8,9,0,*,#

Grammer	Description
x	any digit from 0-9;
xx+	at least 2 digit number;
^	exclude;
,	hear dial tone;
[3-5]	any digit of 3, 4, or 5;
[147]	any digit 1, 4, or 7;
<2=011>	replace digit 2 with 011 when dialing.

To configure dial plan via web interface:

1. Click Account → Advanced → Dial Plan.
2. Filled the value in dial plan field.
3. Click SaveSet to save the configuration.

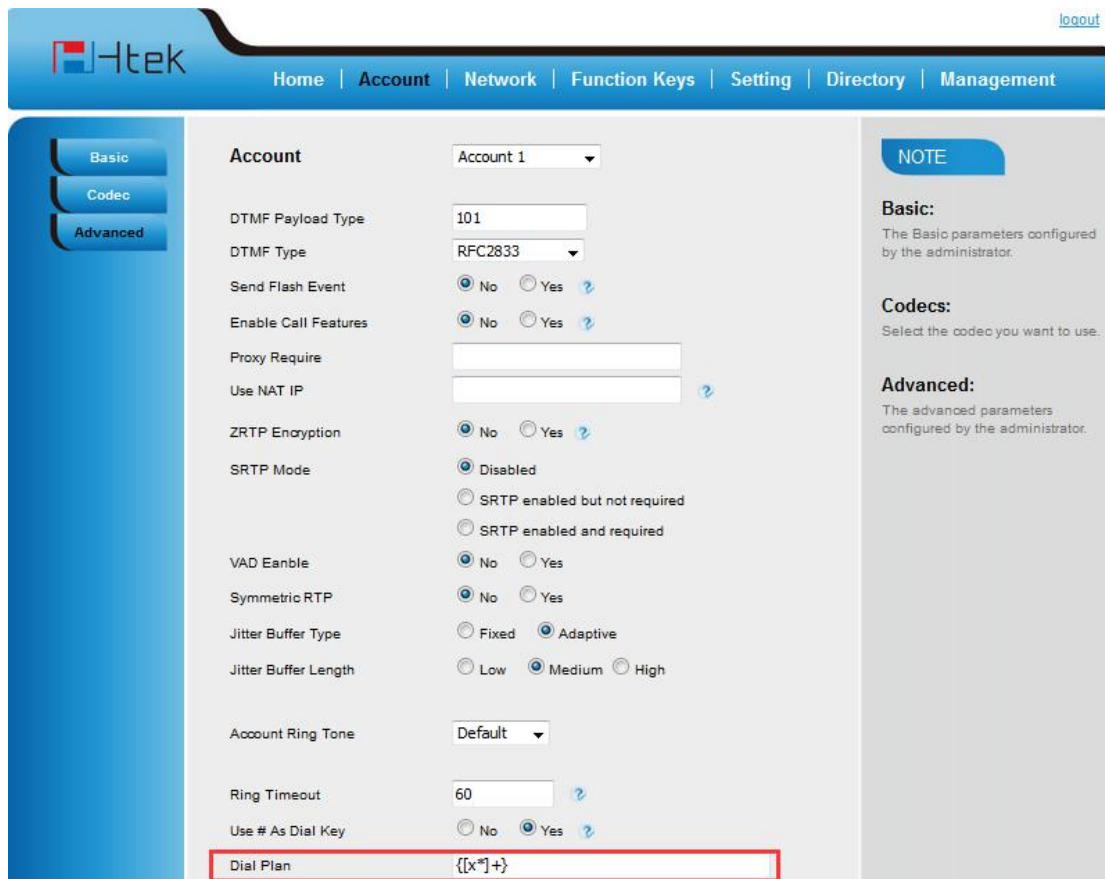

The screenshot shows the Htek web interface for configuring an account. The 'Account' section is selected, and the 'Advanced' tab is active. The 'Dial Plan' field is highlighted with a red box and contains the value '{[*]*}+'. The 'NOTE' section on the right states: 'Basic: The Basic parameters configured by the administrator. CODECS: Select the codec you want to use. Advanced: The advanced parameters configured by the administrator.'

Note:


Illegal input will fall back to default: {[*]*}. For More, please refer to [dial plan](#) on www.htek.com

Dial-Now Timeout

Dial-Now Timeout means that when you entry the number which matching with dial plan, it will dial out automatically after some time when you stop enter the number.

To configure Dial-Now Timeout via web interface:


1. Click Webpage Setting → Preference


2. Fill the blank of Dial-Now Timeout: for example 5(seconds).(0 means dial out immediately).
3. Click the  button to save the configuration

No Key Entry Timeout

No Key Entry Timeout means that when you entry the number, it will dial out automatically after some time when you stop enter the number.

To configure No Key Entry Timeout via web interface:

1. Click Webpage Setting → Preference
2. Fill the blank of No Key Entry Timeout: for example 5(seconds).(0 means never timeout, you should press the send key the dial out the number.
3. Click the  button to save the configuration.

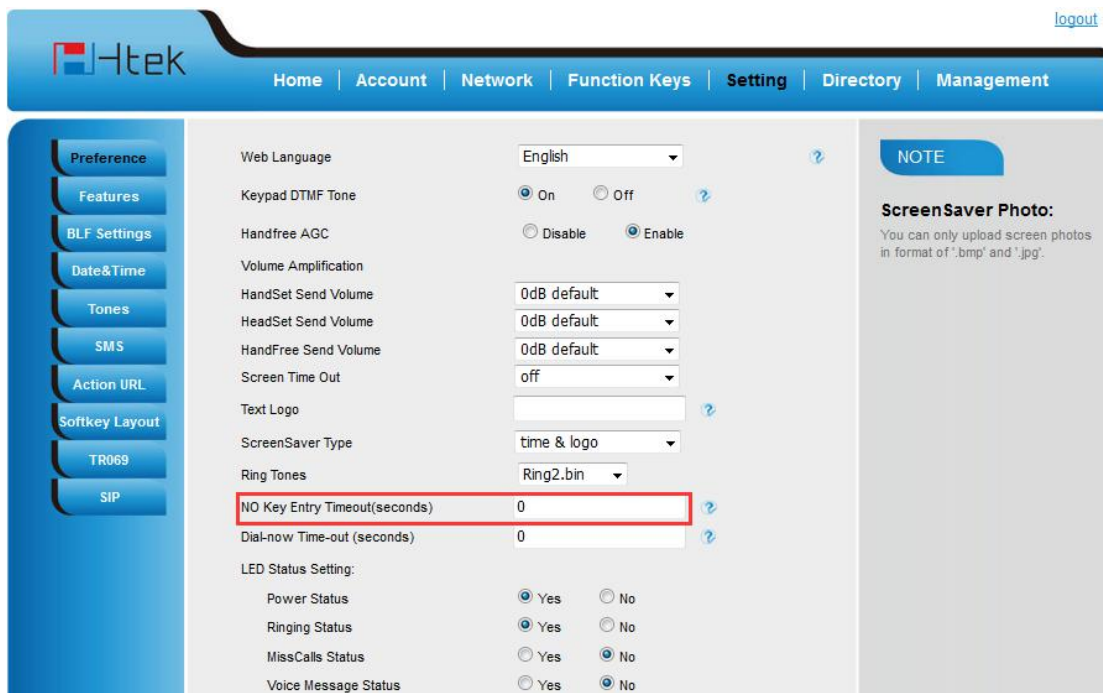

The screenshot shows the Htek web interface with the 'Preference' tab selected. The 'NO Key Entry Timeout(seconds)' field is highlighted with a red box and set to 0. Other settings include Web Language (English), Keypad DTMF Tone (On), Handfree AGC (Enable), and various volume settings. A 'NOTE' box on the right states: 'ScreenSaver Photo: You can only upload screen photos in format of '.bmp' and '.jpg'.'


Emergency Call

Public telephone networks in countries around the world have a single emergency telephone number (emergency services number), that allows a caller to contact local emergency services for assistance when required. The emergency telephone number may differ from country to country. It

is typically a three-digit number so that it can be easily remembered and dialed quickly. Some countries have a different emergency number for each of the different emergency services. You can specify the emergency telephone numbers on the IP phone for contacting the emergency services in an emergency situation.

To configure emergency call via web interface:

1. Click Setting→Features→Phone Lock
2. Enter the emergency services number(e.g.110,119,120) in the Emergency field,
3. Click **SaveSet** to save the configuration.

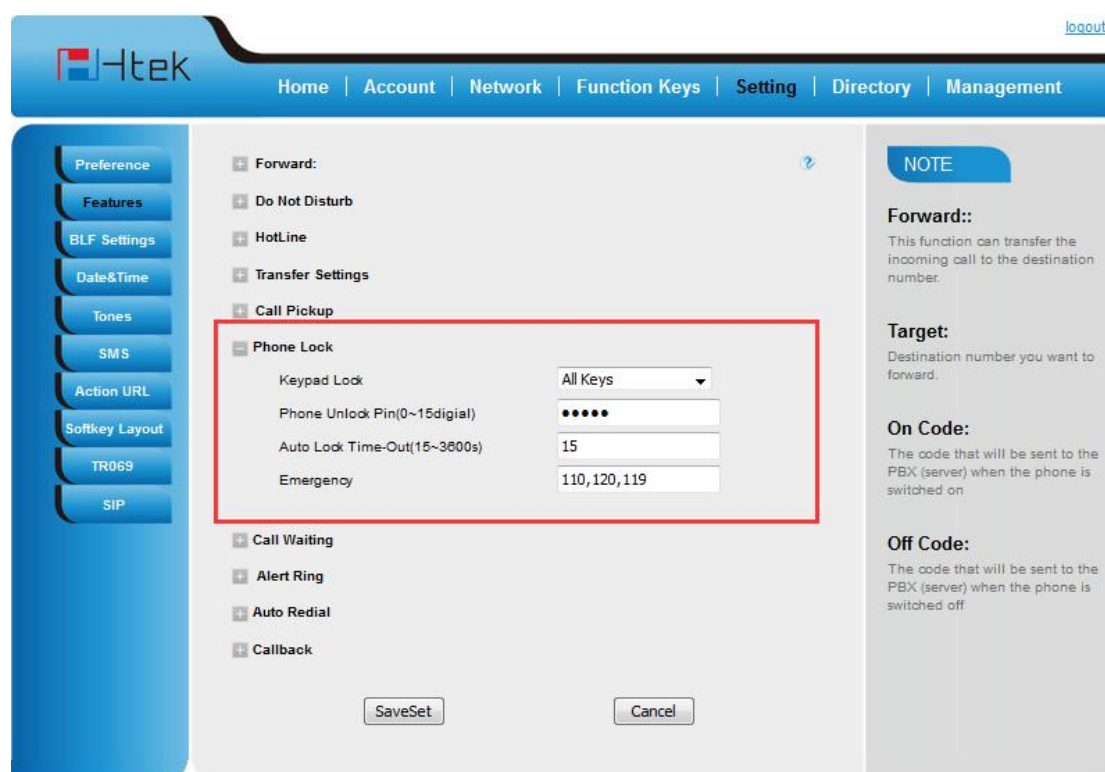

The screenshot shows the Htek web interface for configuring phone settings. The 'Phone Lock' section is highlighted with a red box. It contains the following fields:

- Forward:** (Expanded)
- Do Not Disturb** (Expanded)
- HotLine** (Expanded)
- Transfer Settings** (Expanded)
- Call Pickup** (Expanded)
- Phone Lock** (Expanded):
 - Keypad Lock: All Keys (dropdown)
 - Phone Unlock Pin(0~15digital): •••••
 - Auto Lock Time-Out(15~3600s): 15
 - Emergency: 110,120,119
- Call Waiting** (Expanded)
- Alert Ring** (Expanded)
- Auto Redial** (Expanded)
- Callback** (Expanded)

At the bottom of the configuration area are **SaveSet** and **Cancel** buttons. On the right, a **NOTE** sidebar provides information about the Forward, Target, On Code, and Off Code functions.


Label Scroll

When setting function keys, you need to set the label of the function keys. If the words are too long to show on the label, you can use this function to make labels scroll. Another approach is to set the labels to long label mode.

To configure Label Scroll via web interface:

1. Click the Setting → Preference
2. Select Enable or Disable for Label Scroll.

- Click  for the setting.

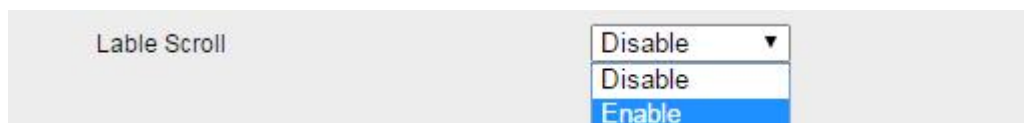


Show Missed Calls

Whether to show missed call notification on LCD

To configure Label Scroll via web interface:

- Click the Setting → Preference
- Select Yes or No for Show Missed Calls.

 - Click  for the setting.




Auto Logout Time

Set the Web login timeout

- Click the Setting → Preference
- Set number 1~5000 min for Auto Logout Time.

 - Click  for the setting.



Reboot in Talking

This function is to allow reboot during the calls or not

- Click the Setting → Preference
- Set Enable or Disable for Reboot in Talking.

- Click  for the setting.

Reboot in Talking

Disable ▼

Detect IP Conflict

LCD can display message when IP conflict

1. Click the Setting → Preference
2. Set Enable or Disable for Detect IP Conflict.

3. Click  for the setting.

 
Detect IP Conflict

Enable ▼

Redial Mode

Call redial has two ways:(1) To redial the last placed call from the IP Phone (2) To redial the call from all calls list

1. Click the Setting → Preference
2. Set Direct Mode or Select Mode for Redial Mode.

3. Click  for the setting.

Redial Mode

☒ Direct Mode

☐ Select Mode

Keypad Lock


To enable Keypad Lock via Phone


1. Press Menu--Settings--Advanced Setting--Phone Setting--Lock
2. Press Info or Switch to change choose lock type: All Keys Menu Key Function Key Lock & Answer
3. Press Save or OK key to save the configuration.

To disable Keypad Lock via Phone

1. Press Menu--Settings--Advanced Setting--Phone Setting--Lock
2. Press Info or Switch to change to choose Off.
3. Press Save or OK key to save the configuration.

To enable Keypad Lock via Webpage

1. Click Webpage Setting → Features
2. To choose the Phone Lock.
3. To fill the unlock PIN and auto lock time
4. Fill the Emergence Number, when the phone is Lock, only Emergency Number can be sent.
5. To click  to save the configuration.

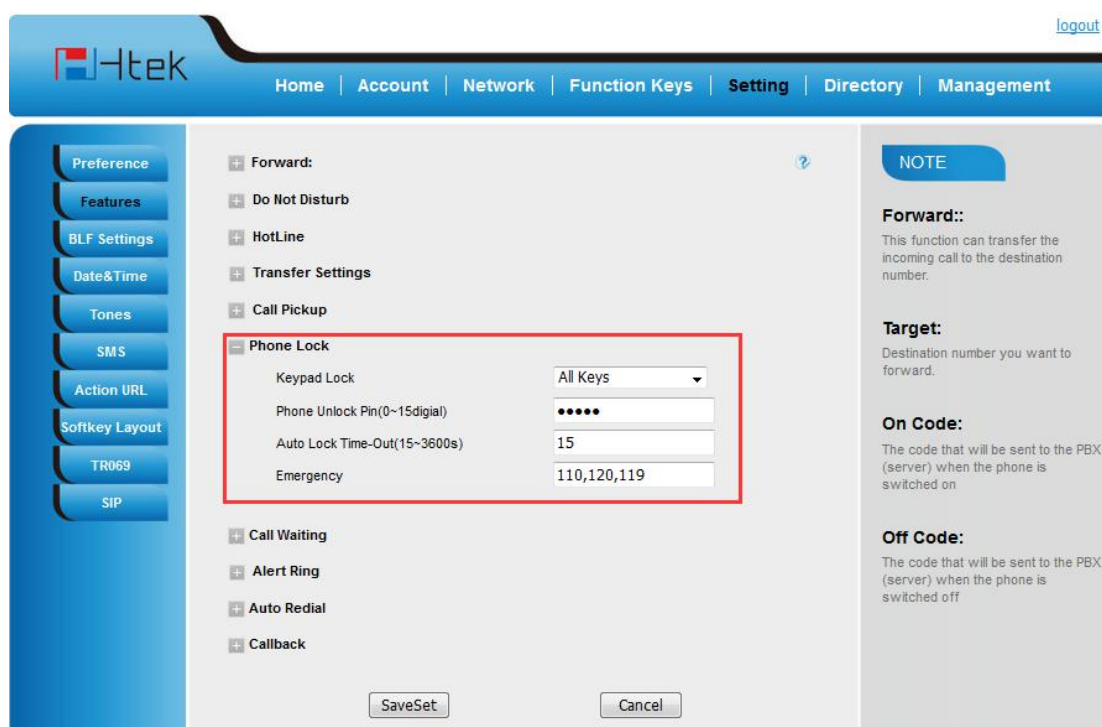

The screenshot shows the Htek web interface with the 'Setting' menu selected. The 'Phone Lock' section is highlighted with a red box. It contains the following fields:

- Keypad Lock: All Keys (dropdown menu)
- Phone Unlock Pin(0~15digital): •••••
- Auto Lock Time-Out(15~3600s): 15
- Emergency: 110,120,119

At the bottom of the form are 'SaveSet' and 'Cancel' buttons. On the right side, there is a 'NOTE' section with the following text:

Forward::
This function can transfer the incoming call to the destination number.

Target:
Destination number you want to forward.

On Code:
The code that will be sent to the PBX (server) when the phone is switched on

Off Code:
The code that will be sent to the PBX (server) when the phone is switched off

To Disable Keypad Lock via Webpage

1. Click Webpage Setting → Features
2. To choose Disable for the Phone Lock.

 
3. To click  to save the configuration.

Suppress DTMF Display

In order to ensure safety in Call process, you can choose whether to hide DTMF

1. Click the Setting → Preference
2. Select On or Off for Suppress DTMF Display.

3. Click  for the setting.




Suppress DTMF Display Delay

In order to ensure safety in Call process, you can choose whether to hide DTMF

1. Click the Setting → Preference
2. Select On or Off for Suppress DTMF Display Delay.

 3. Click  for the setting.




Check-Syn With Authenticate

If this option is enabled, the server needs to be authenticated before the phone agrees to synchronize.

1. Click the Setting → Preference
2. Set Enable or Disable for Check-Syn With Authenticate.

 
3. Click  for the setting.




Other features settings

Action URL

To configure action url via web interface:

1. Click Setting→Action URL
2. Filled the needed value in the necessary blank.
3. Click  to save the setting.

Click [Action URL](#) for more how to use, or check on www.htek.com

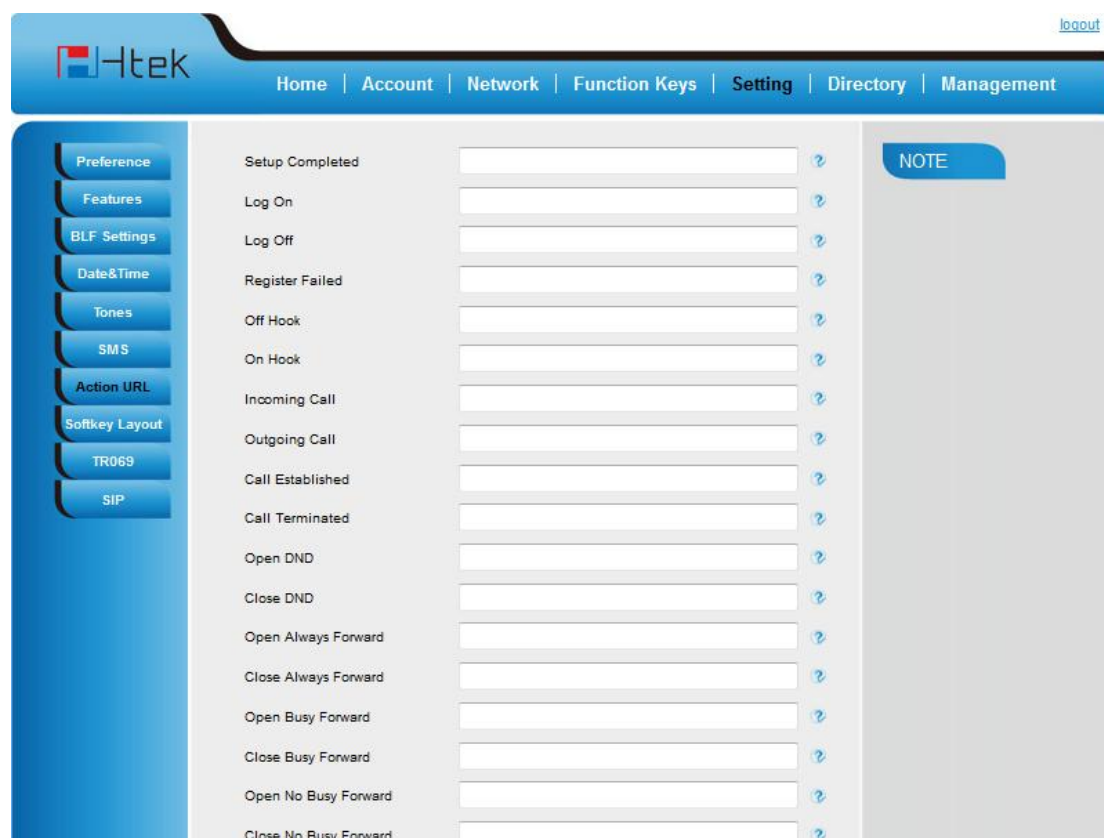

Softkey Layout


This feature mainly defines which shown on the soft key in some status. For example, what the soft key displays when dialing, or talking.

To configure Soft key via web interface:

4. Click Setting→Softkey Layout

5. Select Enable for Custom Softkey

6. Select call States.



7. Select the feature form the disable key to enable key field by 




Disable to Enable field.



Delete the Enable, and it will back to Disable field.

8. Click  or  to change to position or each feature.

9. Click  to save the configuration.

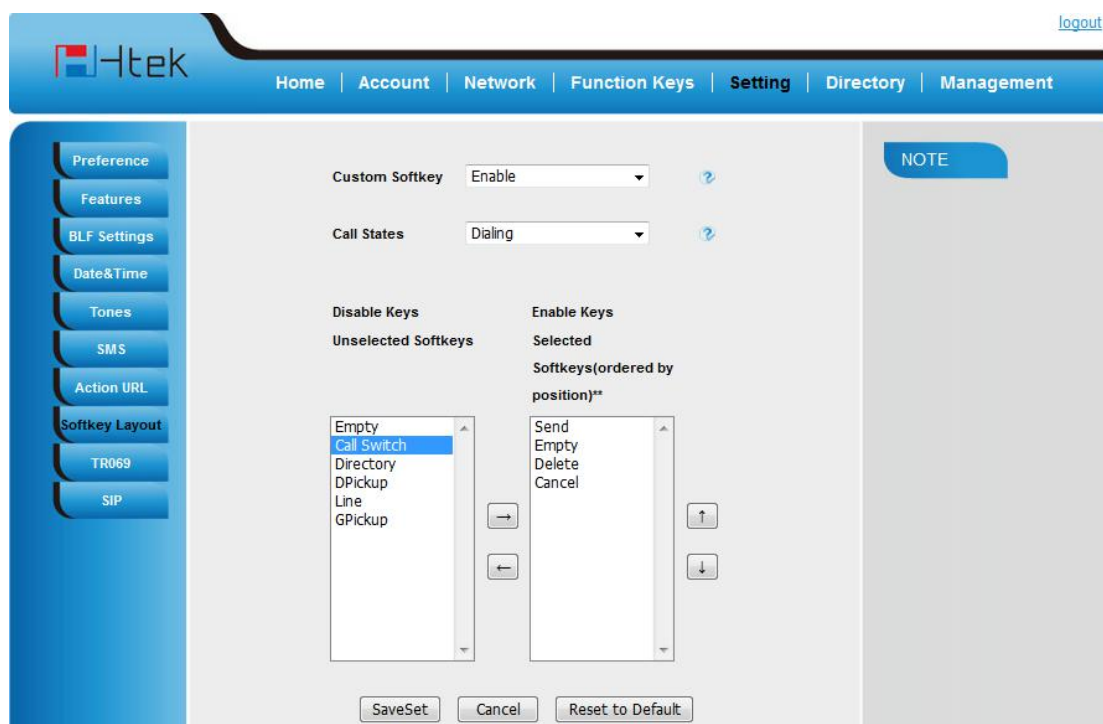



Note:


1. When there more than 5 items in the Enable field, the last softkey will display More, and last two item will show in the next page softkey, you can check by press more.

Programmable Key

For the default keys as Soft keys, Navigation keys and so on, you can define them as some specific feature, and it works only on the idle page.

  To configure Programmable Key via web interface:

1. Click Function Keys→Programmable Keys
2. Select the desired Key to set.
3. Click  to save the setting.
4. By clicking , all setting of the keys will be back to default.

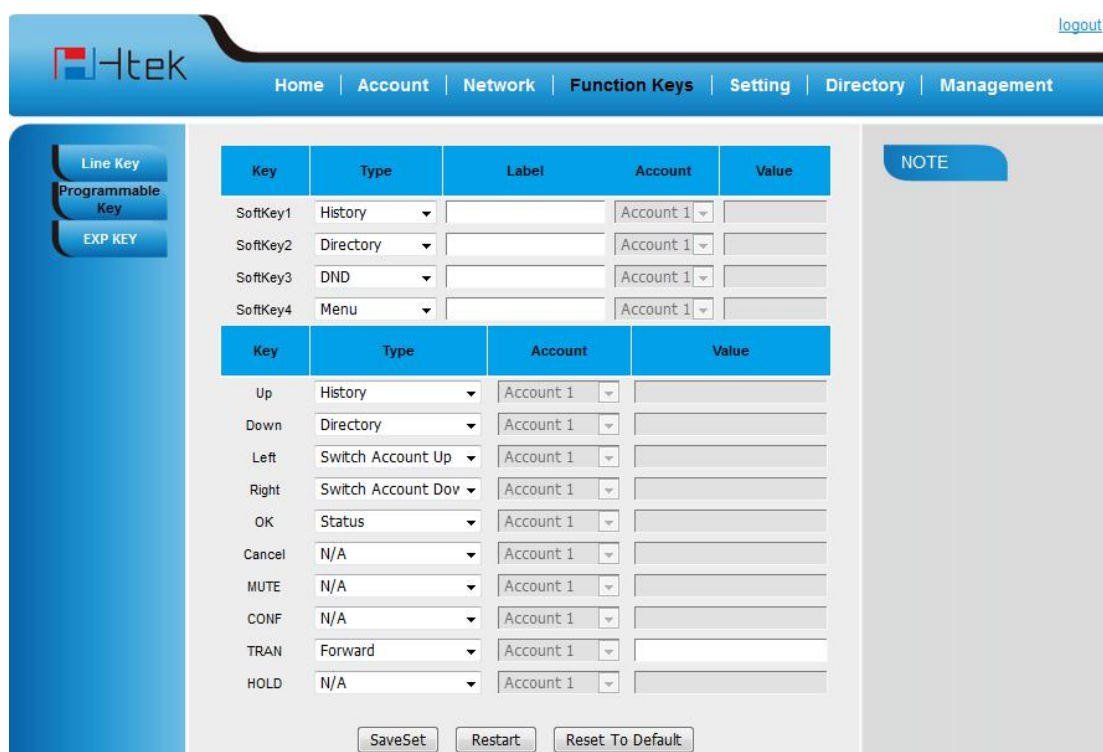

logout

Home | Account | Network | **Function Keys** | Setting | Directory | Management

Line Key
Programmable Key
EXP KEY

Key	Type	Label	Account	Value
SoftKey1	History		Account 1	
SoftKey2	Directory		Account 1	
SoftKey3	DND		Account 1	
SoftKey4	Menu		Account 1	

Key	Type	Account	Value
Up	History	Account 1	
Down	Directory	Account 1	
Left	Switch Account Up	Account 1	
Right	Switch Account Dov	Account 1	
OK	Status	Account 1	
Cancel	N/A	Account 1	
MUTE	N/A	Account 1	
CONF	N/A	Account 1	
TRAN	Forward	Account 1	
HOLD	N/A	Account 1	

SaveSet Restart Reset To Default

NOTE

Exp Key

It only works when there is expansion module connected with the phone.



For Exp Key configuration, please refer to: [UC46 User manual](#).

Basic Call Features




Place a Call

There are three ways to dialing a call: Handset, Headset and Hands-free speakerphone.

To place a call by Handset

1. Pick up the handset, or press a line key and dial the necessary number.
2. Press  or  or press the send softkey, then the call is sending.

To place a call by Headset:

1. Press the  (light is Green)
2. Enter the desired number.
3. Press  or , or press the Send softkey, then the call is sending.




Using headset to place and answer calls for all time

1. Click webpage Setting → Preference
2. HeadSet Priority → Enable
3. Ring Device For HeadSet → User Headset





4. Press 

Refresh Caller Id Via Contact	Disable
HeadSet Priority	Enable
Ringer Device For HeadSet	Use Speaker
Redial Mode	<input checked="" type="radio"/> Direct Mode <input type="radio"/> Select Mode
Intercom Barge	<input type="radio"/> On <input checked="" type="radio"/> Off ?
Show Missed Calls	<input checked="" type="radio"/> Yes <input type="radio"/> No ?
Suppress DTMF Display	<input type="radio"/> Off <input checked="" type="radio"/> On
Suppress DTMF Display Delay	<input type="radio"/> Off <input checked="" type="radio"/> On
Voice Mail Tone	<input checked="" type="radio"/> On <input type="radio"/> Off
Busy Tone Timer (0~5s)	4
<div>SaveSet</div> <div>Cancel</div>	


Placing a call by hands-free speakerphone

1. Press the , or press the Line key, then you can hear the dial tone.
2. Press the number.
3. Press  or  press the Send soft key, then the call is sending.


To place a call by call history or Directory via phone interface.

1. Press the History soft key (On the idle page) or Menu → History /Directory
2. Press  and  to select the targeted one.
3. Press the Send soft key, or , or , or the corresponding line key, then the call is sending.

Note:

1. The  key is set to be a send key. For more information, refer to the Key as Send on page
2. During the call, you can also change among Headset, Handset or Free-speaker mode.


Making two calls with one line and one account

1. Press a line key and dial one phone number, then make a call.
2. Press the corresponding line key
3. Dial another phone number,
4. Press the Send soft key, or , then make the second call.



End a Call

Here shows to end a call during three modes:



To end a call by Handset

Press the Cancel soft key or hang up the handset, or press .

To end a call under Headset Mode

Press the Cancel soft key or press , or press .


To end a call under hands-free speakerphone Mode

Press the Cancel soft key or press , or press .

Note:

1. During the conference, to end the call is same as mentioned above.

Redial a Call

1. To redial the last placed call from the IP Phone
2. Press  directly when LCD is on the idle interface.


Receive a Call

There are three ways to receive a call when the phone is ringing:


To receive a call by handset

Pick up the handset the conversation is built.


To receive a call by headset


Press  and now the conversation is built.

To receive a call by hands-free speaker

1. Option 1: Press  directly.
2. Option 2: Press Answer soft key.
3. Option 3: Press the Line key (flashes red).

Moreover, some other action can be done by soft key when the call is coming.

1. To press the Reject soft key to reject the call. Or press  to reject the current call.
2. To press Forward to forward to another phone.
3. To press Silence soft key, and then the call will keep silent, no ring tone display.

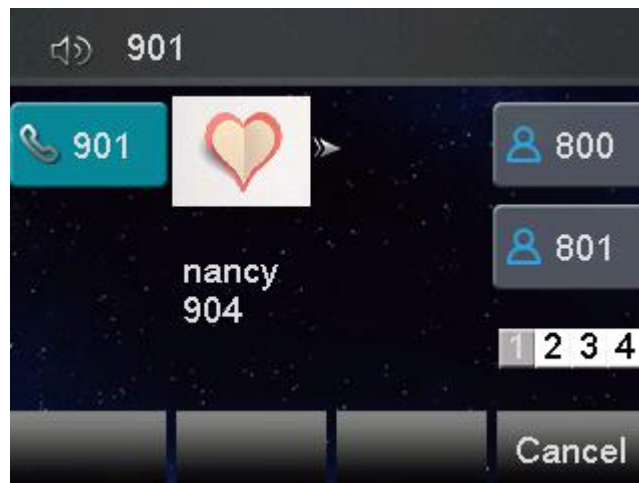



Incoming Call Show Mode

There are two incoming call show modes for this phone:

1. name and number of the contacts
2. name and number of the incoming call and the account which is connecting

 To set incoming call show mode via web interface:

1. Click setting → preference
2. Select the desire mode for the incoming call show mode
3. Click  to save the setting.



LED Status Setting:


Power Status	<input checked="" type="radio"/> Yes	<input type="radio"/> No
Ringing Status	<input checked="" type="radio"/> Yes	<input type="radio"/> No
MissCalls Status	<input type="radio"/> Yes	<input checked="" type="radio"/> No
Voice Message Status	<input type="radio"/> Yes	<input checked="" type="radio"/> No
Incoming Call Show Mode	<input checked="" type="radio"/> Peer Name & Peer Number <input type="radio"/> Peer Name & Peer Number & Self Name	




Auto Answer

Enable auto answer feature, you will answer all incoming call automatically.

To enable Auto Answer via Web interface

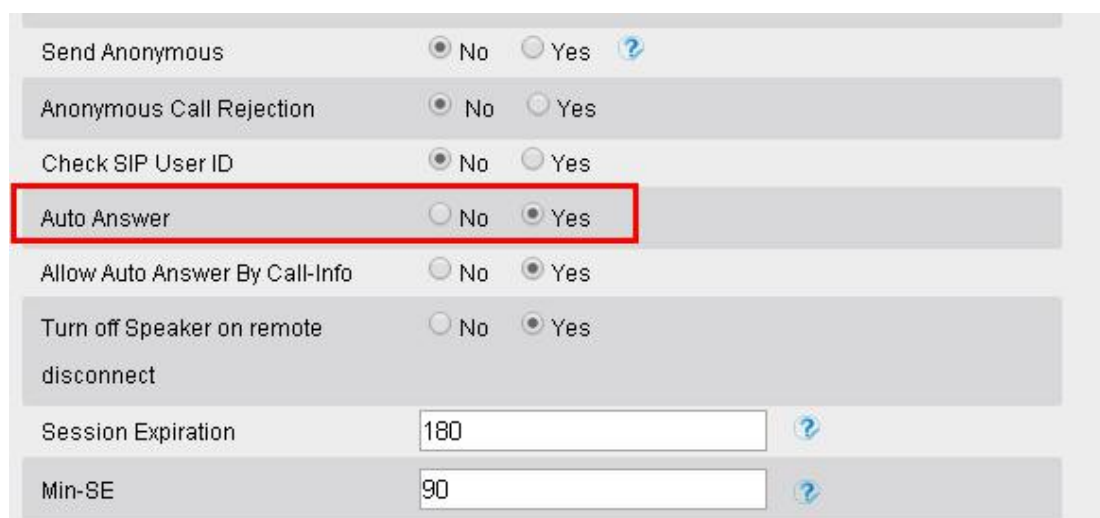1. To Click Account → Advanced
2. To choose Yes for the Auto Answer.
3. To click Saveset to save the configuration.




Send Anonymous	<input type="radio"/> No	<input type="radio"/> Yes	
Anonymous Call Rejection	<input type="radio"/> No	<input type="radio"/> Yes	
Check SIP User ID	<input type="radio"/> No	<input type="radio"/> Yes	
Auto Answer	<input type="radio"/> No	<input checked="" type="radio"/> Yes	
Allow Auto Answer By Call-Info	<input type="radio"/> No	<input checked="" type="radio"/> Yes	
Turn off Speaker on remote disconnect	<input type="radio"/> No	<input checked="" type="radio"/> Yes	
Session Expiration	<input type="text" value="180"/>		
Min-SE	<input type="text" value="90"/>		

To Disable Auto Answer via Webpage

1. To Click Account → Advanced
2. To choose No for the Auto Answer.
3. To click Saveset to save the configuration.



Call Hold

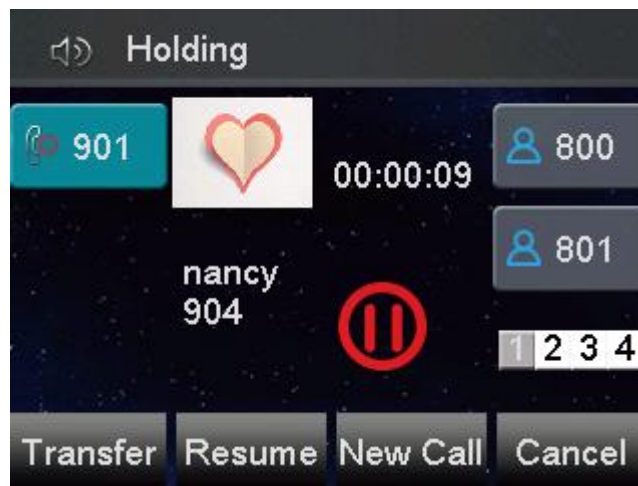When use hold feature, the Hold icon will show on the display.





To make a call on hold during three modes:



To hold a call under handset mode:

1. Press Hold soft key or  to hold the current call.
2. Press Resume soft key or  to resume the call on hold.

To hold a call under headset mode:

1. Press Hold soft key or  to hold the current call.
2. Press Resume soft key or  to resume the call on hold.

To hold a call during the speaker mode:



1. Press Hold soft key or  to hold the current call.
2. Press Resume soft key or  to resume the call on hold.

Call Transfer

This phone supports blind, attended and Semi-Attended Transfer.


Blind Transfer


When you use this feature, you can transfer


1. Press  or Transfer soft key during the conversation, the call is on hold now.
2. Enter the number that transfers to.
3. Press , and now the blind transfer completed.

Attended Transfer

When you use this feature, you can

1. Press  or transfer soft key during the conversation, the call is on hold now.

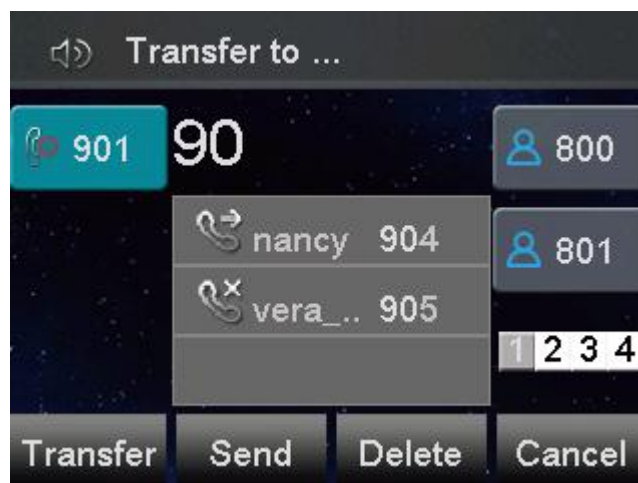


 

2. Enter the number that transfer to, and press the send soft key or .

3. Start the second conversation, press  or transfer soft key, then, transfer completed.


NOTE:

To transfer calls across SIP domains, SIP service providers must support transfer across SIP domains. Blind transfer will usually use the primary account SIP profile.

Semi-Attended Transfer

1. Press  or transfer soft key during the conversation, the call is on hold now.
2. Enter the number transfer to, and then press , then you can hear the ring tone.
3. Press  or the Tran soft key, and now the Semi-attended transfer completed.

BLF Transfer

1. Set a Programmable Key or line key is set as BLF. For how to set BLF, please refer to [BLF](#)
2. Press  or transfer soft key during the conversation, the call is on hold now.
3. Press BLF key then realize blind, attended and Semi-Attended Transfer.

Hold transfer on hook:

1. Setting → Features → Transfer Setting: Hold Transfer On Hook: ON.
2. A place a call to B, B answer, A press the hold softkey and place a call to C, A cancel the call when C is ringing or answering, then C and B in the same call and the transfer is successful.

+ Do Not Disturb		
+ HotLine		
- Transfer Settings		
Blind Transfer On Hook	<input checked="" type="radio"/> On	<input type="radio"/> Off
Semi-Attended Transfer	<input checked="" type="radio"/> On	<input type="radio"/> Off
Attended Transfer On Hook	<input checked="" type="radio"/> On	<input type="radio"/> Off
Transfer Mode via DSSkey	Attended Transfer ▼	
Hold Transfer On Hook	<input checked="" type="radio"/> On	<input type="radio"/> Off
+ Call Pickup		

Hold transfer on Three Way conference:

1. Setting → Features → Three Way Call Release Type: Transfer.
2. A place a call to B, B answer, A place a call to C again, C answer, A press the conference then A, B and C will establish meeting.
3. A press the Cancel softkey or on-hook to exit the meeting in the process of talking.
4. Then B and C will continue to talk.

Transfer to New Call via web interface

1. Click Setting → Feature
2. Select Transfer Mode via DSS key → New Call
3. Select the desired Line or Line Key and select Transfer in the Type.
4. Enter the phone number in the Value field.

+ Do Not Disturb

+ HotLine

- Transfer Settings

Blind Transfer On Hook

☒ On ☐ Off

Semi-Attended Transfer

☒ On ☐ Off

Attended Transfer On Hook

☒ On ☐ Off


Transfer Mode via DSSkey

Attended Transfer ▼
Attended Transfer
Blind Transfer
New Call

Hold Transfer On Hook

+ Call Pickup

+ Phone Lock



[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

[logout](#)

Line Key

Programmable
Key

EXP KEY

Line Label Length
Default ▾
Line Page Indicator
Disable ▾

Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line ▾	Default ▾			Auto ▾	
Key2	Line ▾	Default ▾			Auto ▾	
Key3	Line ▾	Default ▾			Auto ▾	
Key4	Line ▾	Default ▾			Auto ▾	
Key5	BLF ▾	Default ▾	530		Account 1 ▾	*04
Key6	N/A ▾	Default ▾			Account 1 ▾	
Key7	N/A ▾	Default ▾			Account 1 ▾	
Key8	N/A ▾	Default ▾			Account 1 ▾	
Key9	N/A ▾	Default ▾			Account 1 ▾	

NOTE







NOTE: if the person that wanted to be spoken to do not want to answer the call, then the person that answered the coming call could use this function.


Call Conference

This IP Phone supports up to 5-way conference.

5-way conference

1. Assuming that call party A and B are in conversation. A wants to bring C, D and E in a conference
2. A press line 2 key, the call is placed on hold.

3. A enter the number of C and then press send soft key or .
4. C answering the call.
5. A press  or the conference soft key, then A, B and C are now in a conference.(and now this is **3-way conference**)
6. A press line 3 key, the current 3-way conference is placed on hold.
7. A enter the number of D and then press send soft key or .
8. D answering the call.
9. A press  or the conference soft key, then A, B, C and D are now in a conference.(and now this is **4-way conference**)
10. A press line 4 key, the call is placed on hold.
11. A enter the number of E and then press send soft key or .
12. E answering the call.
13. A press  or the conference soft key, then A, B, C, D and E are now the **5-way conference** is built.
14. A end the call, the conference is finished.

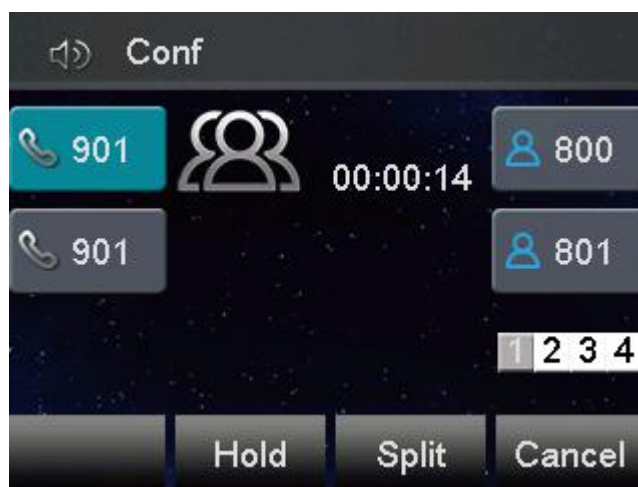


Note:




1. If C does not answer the call, A can back to continue the conversation with B;
2. Once A hangs up the call, the conference is ended, while if B or C drops the call, A&C or A&B conversation continues.
3. The conference feature is not available on all servers. For more information, contact your system administrator.
4. To realize the 5 way conference, the line should be all available.

Call Forward

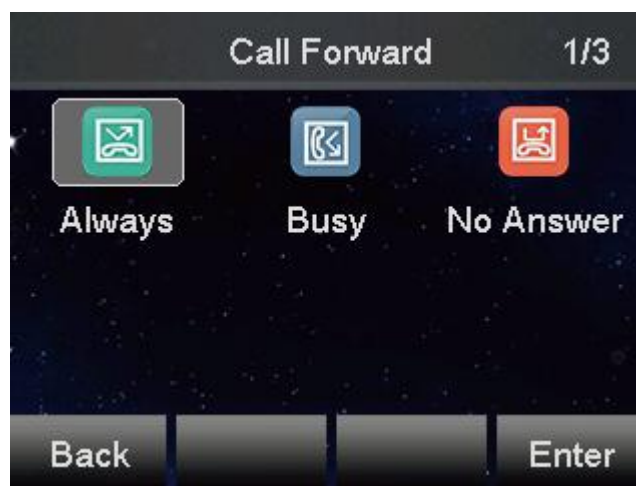This phone supports static forward (always forward, busy forward and no answer forward) and dynamic forward

 
To configure static forward
To configure always forward




With this feature, all incoming calls will forward immediately to configured number.


1. Press Menu → Features → Call forward → Always Forward.
2. Press  and  to select the enable choice
3. Enter the forward to number and on code (optional), off code (optional).
4. Press  or Save soft key to save the configuration.



To configure busy forward

With this feature, the incoming calls are immediately forwarded if the phone is busy.

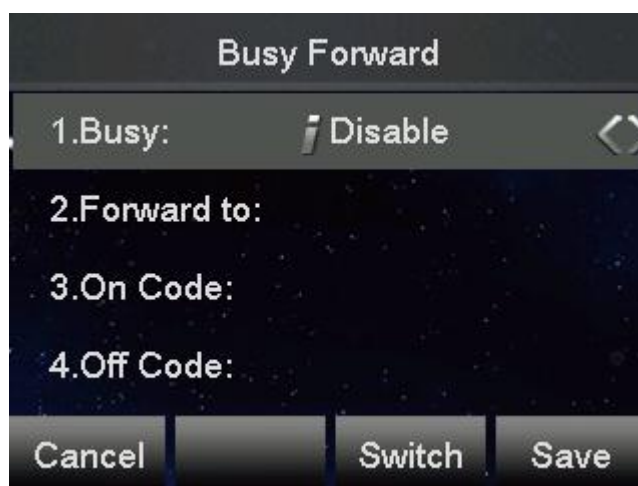


1. Press Menu → Features → Call forward → Busy forward.
2. Press  and  to select the enable choice.
3. Enter the forward to number and on code (optional), off code (optional).
4. Press  or Save soft key to save the configuration.





To configure no answer forward

No Answer Forward: Incoming calls are forwarded if not answered after some time.

1. Press Menu → Features → Call forward → No answer forward.

2. Press  and  to select the enable choice
3. Enter the forward to number and on code (optional), off code (optional).
4. Press  or Save soft key to save the configuration.

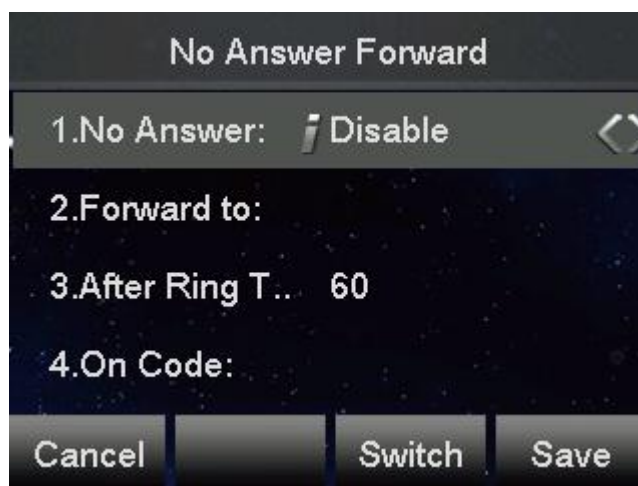


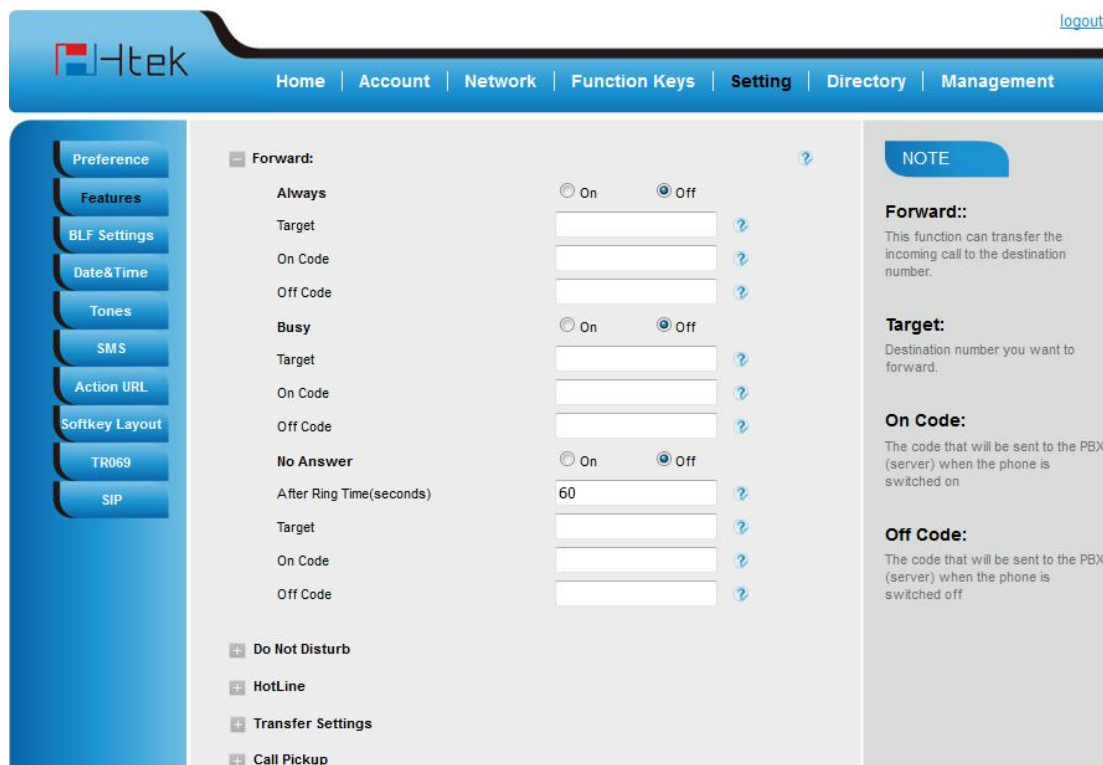
When the Forward feature is enabled, the Icon  will display on Top of the LCD.







To configure Forward via Web Interface

1. Setting → Features
2. Click On for the Always/Busy/No Answer
3. Fill the Forward to Number

 
4. (Optional) fill the on/off code
5. Click  to save the configuration



To cancel the forward feature via Phone Interface


1. Option 1: To press the  key to disable the forward feature.
2. Option 2: Press Menu → Features → Call forward → Always/Busy/No answer Forward
Press  and  to select the disable choice
Press  or Save soft key to save the configuration.


To cancel the forward feature via Web Interface

1. Setting → Features
2. Click Off for the Always/Busy/No Answer
3. Click  to save the configuration

To configure dynamic forward

Forward an incoming call during the ringing.

1. When the phone is ringing, press Forward soft key.
2. Enter the forward number or select the desired number from Directory softkey (Precondition: local directory has a or more contacts).
3. Press  or press the send soft key, then the call is forwarded.

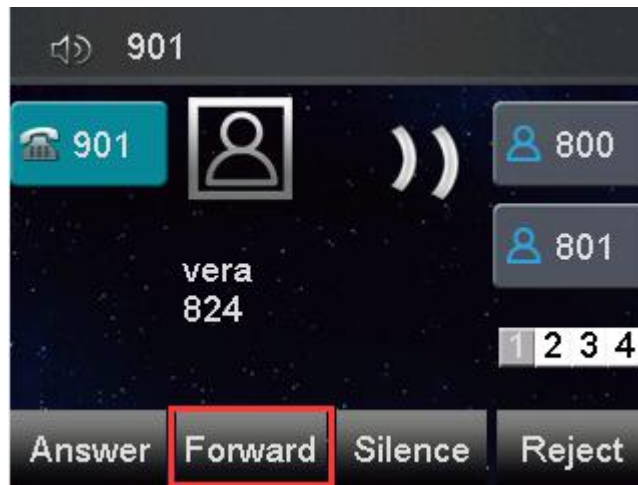

Note:





If the Programmable Key or line key is set as BLF, when an incoming call ringing, press this BLF key directly to realize the dynamic forward.

You can choose a desired forward number from the Directory when you press the Forward key.

Call Return


This feature allows you to dial the last phone call you received.

To configure the Call Return via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the Key Event in the type field.
4. Press  and  key to select the Call Return.


5. Press  or Save soft key to save the configuration

To configure the Call Return via Web interface

1. Click Function keys → Line or Line Key.
2. Select the desired Line or Line Key and select Call Return in the Type.
3. Click  to save the configuration.


Call Back


When this option is set, if the phone you call is busy and does not set call waiting or voice mail, your LCD screen will prompt for call-back, as shown in figure

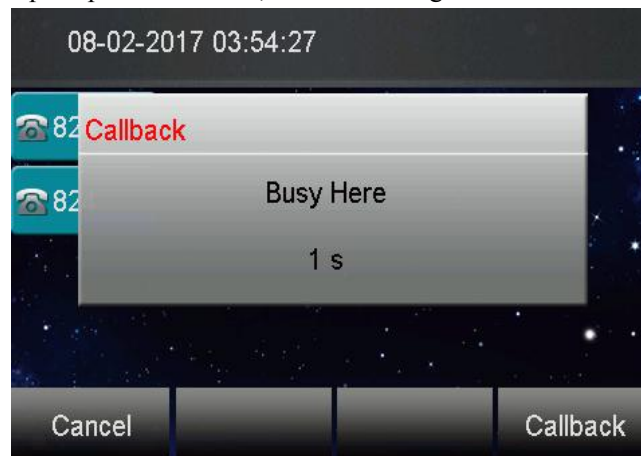

If you press the callback, the phone will dial the Callback phone number.

To configure the Call Back via Web interface

1. Click Setting → Features → Callback .
2. Fill the Callback phone number.
3. Click  to save the configuration.

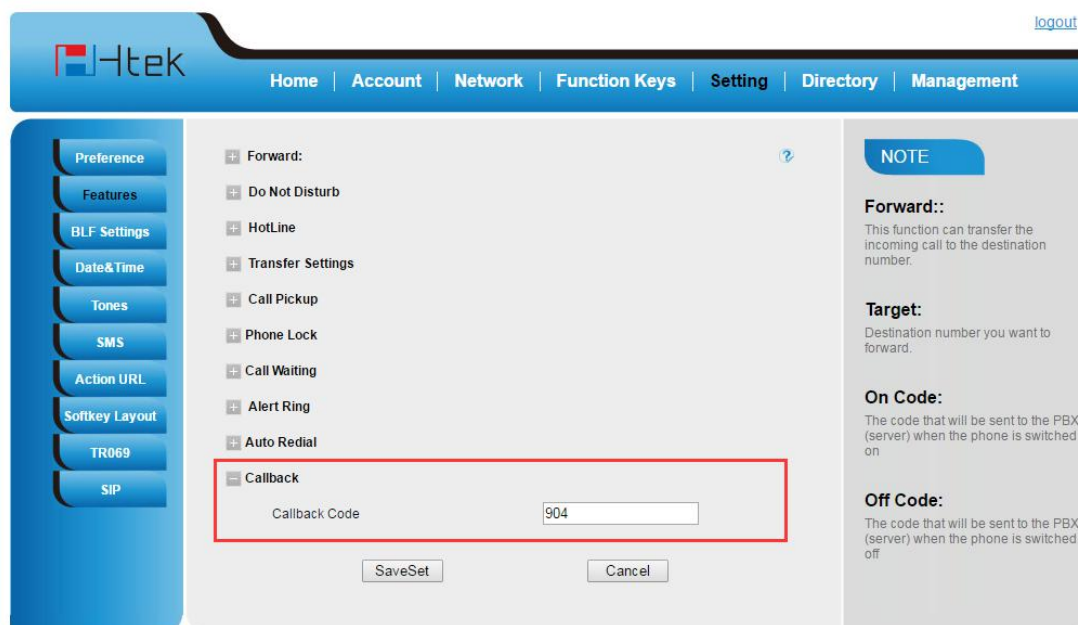

logout

Home | Account | Network | Function Keys | Setting | Directory | Management

Preference
Features
BLF Settings
Date&Time
Tones
SMS
Action URL
Softkey Layout
TR069
SIP

Forward:
Do Not Disturb
HotLine
Transfer Settings
Call Pickup
Phone Lock
Call Waiting
Alert Ring
Auto Redial
Callback

Callback Code: 904

SaveSet Cancel

NOTE

Forward::
This function can transfer the incoming call to the destination number.


Target:
Destination number you want to forward.

On Code:
The code that will be sent to the PBX (server) when the phone is switched on

Off Code:
The code that will be sent to the PBX (server) when the phone is switched off

Call Waiting Tone

1. Click Setting → Features
2. Select Call Waiting: On and Call Waiting Tone: On

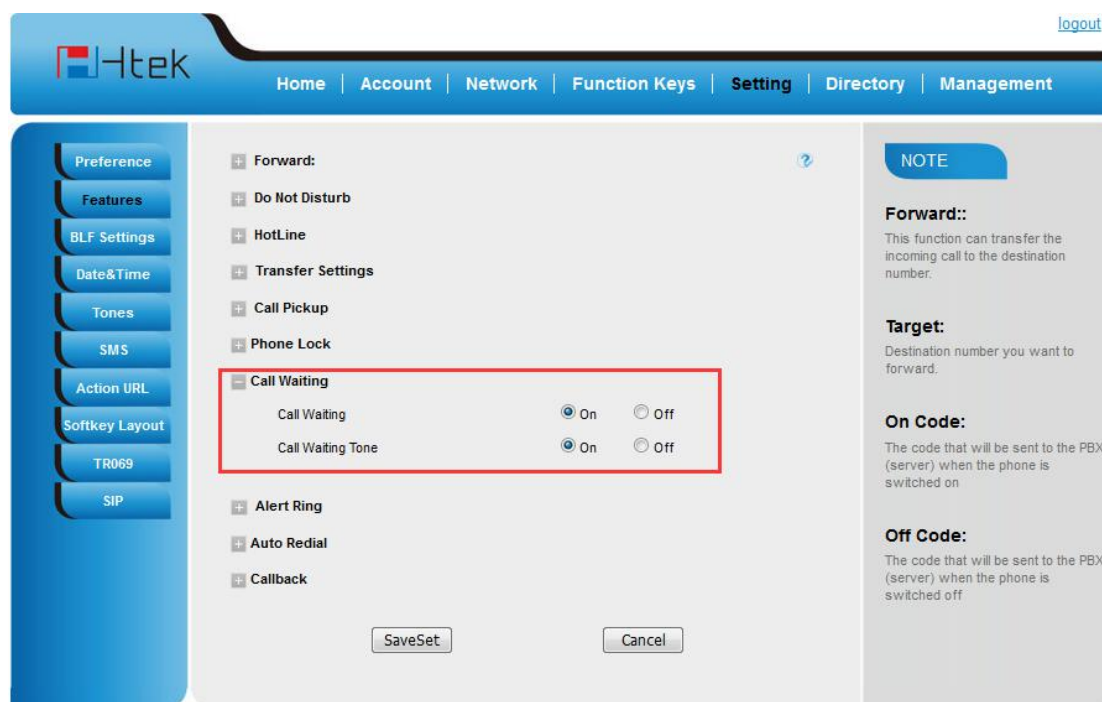

logout

Home | Account | Network | Function Keys | Setting | Directory | Management

Preference
Features
BLF Settings
Date&Time
Tones
SMS
Action URL
Softkey Layout
TR069
SIP

Forward:
Do Not Disturb
HotLine
Transfer Settings
Call Pickup
Phone Lock
Call Waiting
Alert Ring
Auto Redial
Callback

Call Waiting: On Off
Call Waiting Tone: On Off

SaveSet Cancel

NOTE

Forward::
This function can transfer the incoming call to the destination number.


Target:
Destination number you want to forward.

On Code:
The code that will be sent to the PBX (server) when the phone is switched on

Off Code:
The code that will be sent to the PBX (server) when the phone is switched off

To Change the Call Waiting Tone time via Web interface

1. Click Setting → Tone

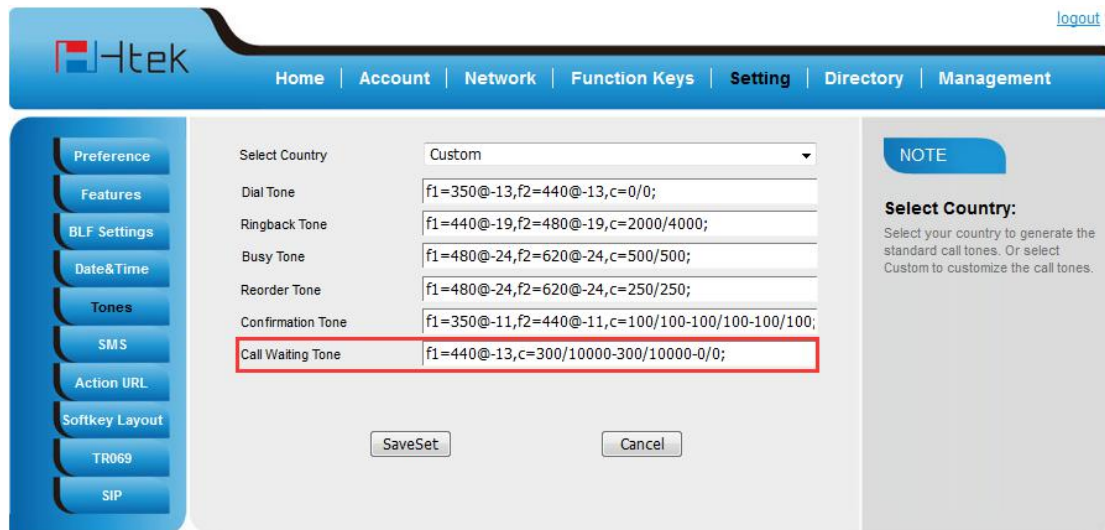

logout

Home | Account | Network | Function Keys | **Setting** | Directory | Management

Preference
Features
BLF Settings
Date&Time
Tones
SMS
Action URL
Softkey Layout
TR069
SIP

Select Country: Custom

Dial Tone: f1=350@-13,f2=440@-13,c=0/0/;

Ringback Tone: f1=440@-19,f2=480@-19,c=2000/4000/;

Busy Tone: f1=480@-24,f2=620@-24,c=500/500/;

Reorder Tone: f1=480@-24,f2=620@-24,c=250/250/;

Confirmation Tone: f1=350@-11,f2=440@-11,c=100/100-100/100-100/100/;

Call Waiting Tone: f1=440@-13,c=300/10000-300/10000-0/0/;

SaveSet Cancel

NOTE
Select Country:
Select your country to generate the standard call tones. Or select Custom to customize the call tones.

2. Change the Tone Time as you want (for example 3s)

 







Call Waiting Tone: f1=440@-13 c=300/3000-300/3000-0/0/;

Hide Caller ID




Just enable the anonymous call feature, you can set your ID do not appear on the other phone that you called.

To configure anonymous call

 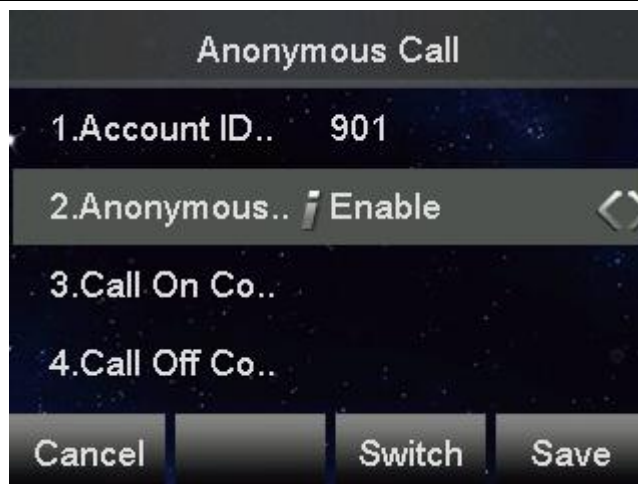1. Press Menu → Features → Anonymous Call
2. Press  and  to change the Line ID
3. Press  and  to select the enable choice in Anonymous Call filed.
4. Enter the call on code (optional), call off code (optional).
5. Press  or Save soft key to save the configuration.



 

 


To cancel anonymous call feature


1. Press Menu → Features → Anonymous Call
2. Press  and  key to select the disable choice in Anonymous Call filed.
3. Press  or Save soft key to save the configuration.

Reject Anonymous




If you do not want to be disturb by anonymous calls, you can set the reject anonymous call features, so you will not hear the unknown calls

To configure rejecting anonymous call

 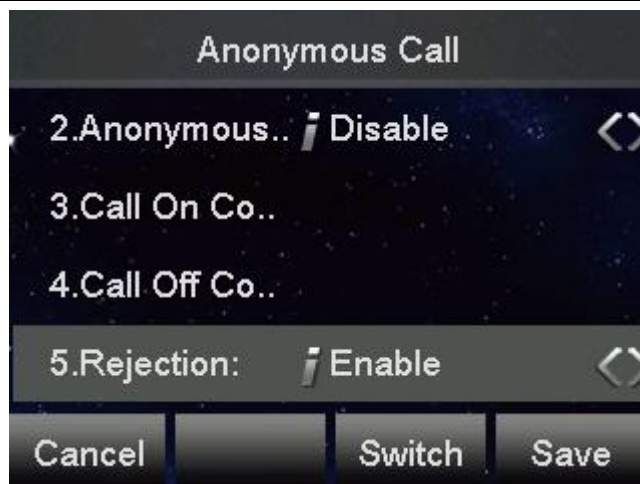1. Press Menu → Features → Anonymous Call
2. Press  and  key to change the Line ID
3. Press  and  key to select the enable choice in Rejection filed.
4. Press  or Save soft key to save the configuration




To cancel rejecting anonymous call




1. Press Menu → Features → Anonymous Call
2. Press  and  key to select the disable choice in Rejection filed.
3. Press  or Save soft key to save the configuration.

Call Mute

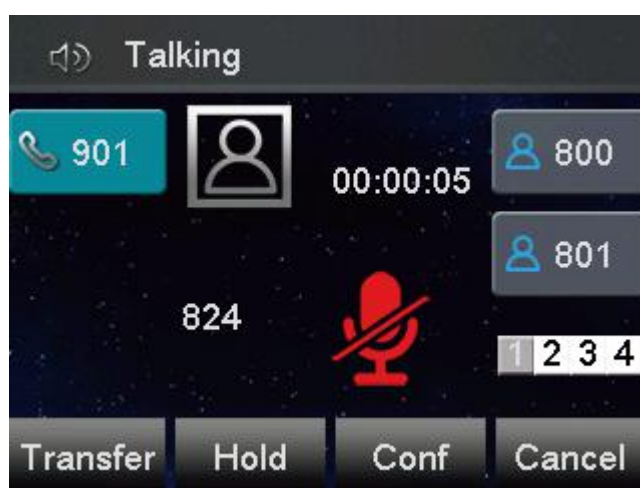
When you use the Mute feature, the other parties will not hear your voice while you can hear their voice. Call mute applies to all modes (handset, headset, and speakerphone).



To mute the call during a call (including a conference call)


1. Press the mute key , then the mute key glows green, and the LCD display 
2. To disable the mute function, press  again.

DND


When you use the DND feature, the phone is to reject all incoming calls automatically and you can see the mute icon  shown on the Top of the LCD on idle page.



To enable DND feature via phone interface:


Press the DND soft key when the phone is idle, and then  shown on the LCD.

To disable DND feature via phone interface:

Press the DND soft key again, and then there is no  on the LCD.

Hot Line

To configure Hot Line

1. Press Menu → Features → Hot Line
2. Enter the Number and delay time (as present, we support off hook auto dial).
3. Press  or Save soft key to save the configuration



Hot Line


1.Number: |

2.HotLine De.. 0

Cancel 123 Delete Save

To configure Hotline auto dial via Web Interface

1. Setting → Features.
2. Fill the number in the Hotline Number and Hotline Time-out.
3. Click **SaveSet** to save the configuration.

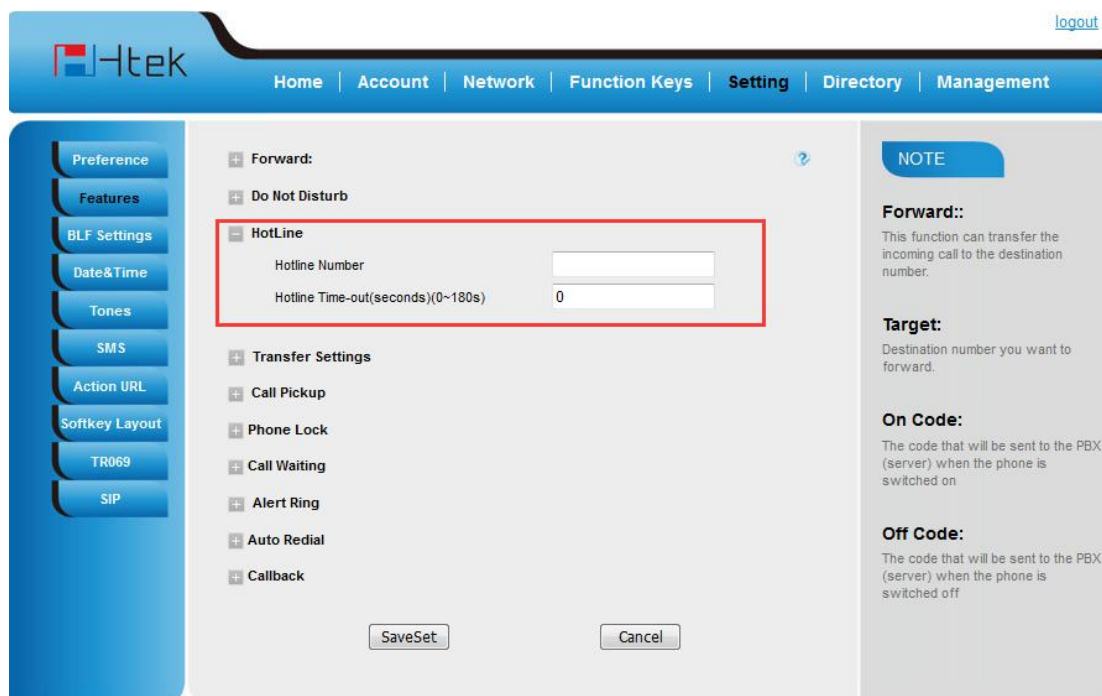

logout

Htek Home Account Network Function Keys Setting Directory Management

Preference Features BLF Settings Date&Time Tones SMS Action URL Softkey Layout TR069 SIP

Forward: Do Not Disturb

HotLine

Hotline Number

Hotline Time-out(seconds)(0~180s) 0

Transfer Settings Call Pickup Phone Lock Call Waiting Alert Ring Auto Redial Callback

SaveSet Cancel

NOTE

Forward::
This function can transfer the incoming call to the destination number.

Target:
Destination number you want to forward.


On Code:
The code that will be sent to the PBX (server) when the phone is switched on

Off Code:
The code that will be sent to the PBX (server) when the phone is switched off


Delete the hotline number and save the configuration, and then now the Hotline auto dial is cancelled.

Auto Redial

When this option is set, if the phone you call is busy and does not set call waiting or voice mail, your LCD screen will prompt for Auto Redial, as shown in figure.

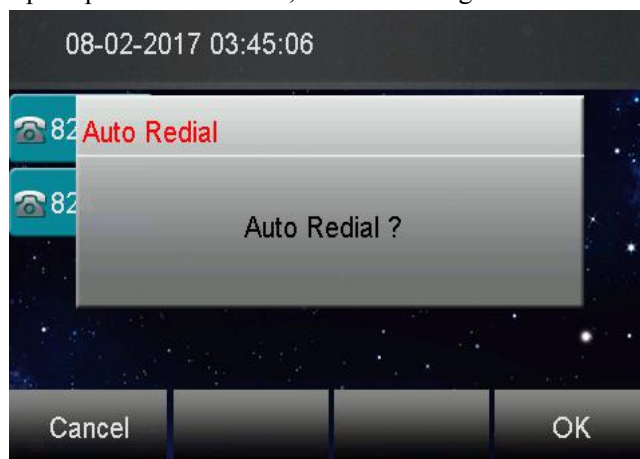


If you press OK, your LCD will prompt Auto Redial Interval and Auto Redial Times

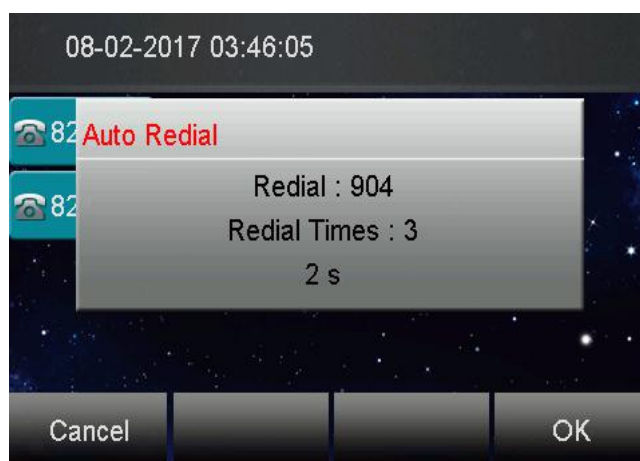

To configure Auto Redial via Web Interface

1. Click Setting → Features → Auto Redial
2. Select On or Off for Auto Redial.
3. Fill the number 1~300 seconds for the Auto Redial Interval.
4. Fill the number 1~300 times for the Auto Redial Times.
5. Click to save the configuration.

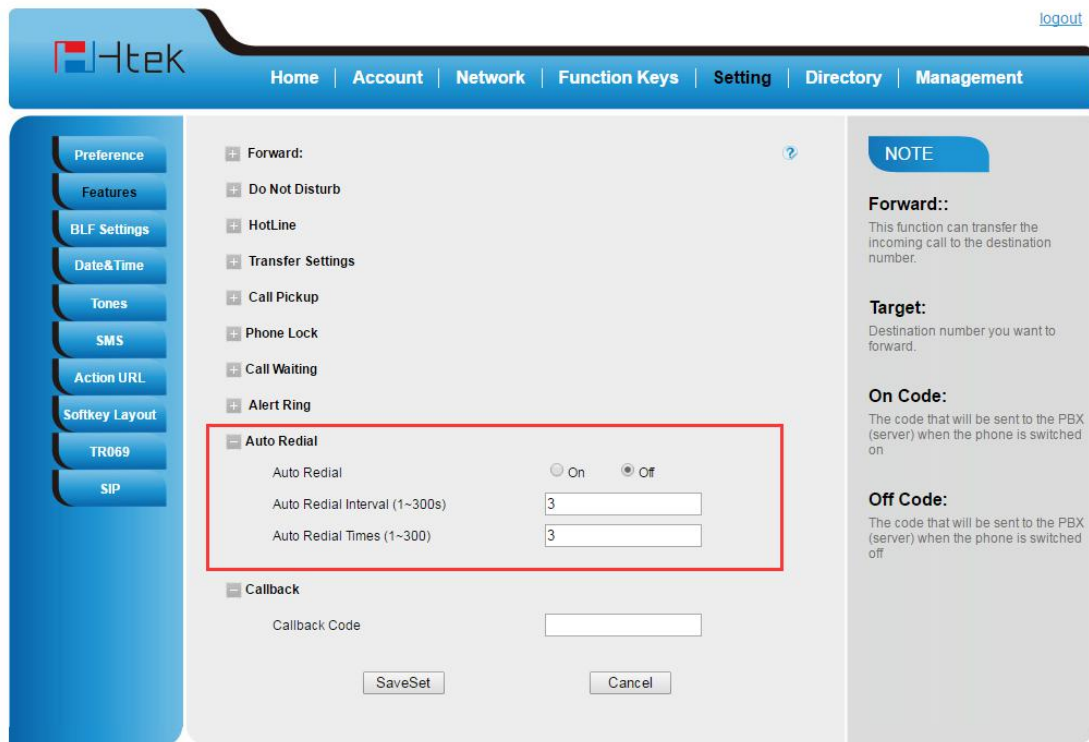

Preference
Features
BLF Settings
Date&Time
Tones
SMS
Action URL
Softkey Layout
TR069
SIP

Forward:
Do Not Disturb
HotLine
Transfer Settings
Call Pickup
Phone Lock
Call Waiting
Alert Ring
Auto Redial
Auto Redial
Auto Redial Interval (1~300s)
Auto Redial Times (1~300)
Callback
Callback Code

NOTE
Forward::
This function can transfer the incoming call to the destination number.
Target:
Destination number you want to forward.
On Code:
The code that will be sent to the PBX (server) when the phone is switched on.
Off Code:
The code that will be sent to the PBX (server) when the phone is switched off.

SaveSet Cancel

Function Key Features Settings

The function key supports the Line Label Length and Line Page Indicator:

Line Label Length: if this option is set Long label, then the label's length will be longer, it is used for string is too long.

Line Page Indicator: enable this option. when the phone have be configured four pages and current page is first page, the forth page has a BLF and BLF's status is changed, then the forth page's button will flash red.

Line

It works same as Line keys.

Line support three Mode (Default, lock and float)


Default mode: If the phone has a incoming call, it means that the phone will not jump to the first page when the first page set the line type and current page is four page.


Lock mode: it means that the other page's same position has the same line when the first page set the line type.

Float mode: If the phone has a incoming call, it means that the phone will jump to the first page when the first page set the line type and current page is four page.

To configure Line Feature via Web Interface

1. Click Function keys → Line or Line Key.

2. Select the wanted Key and set as Line.
3. Select the Account.
4. Click the  button to save the configuration.

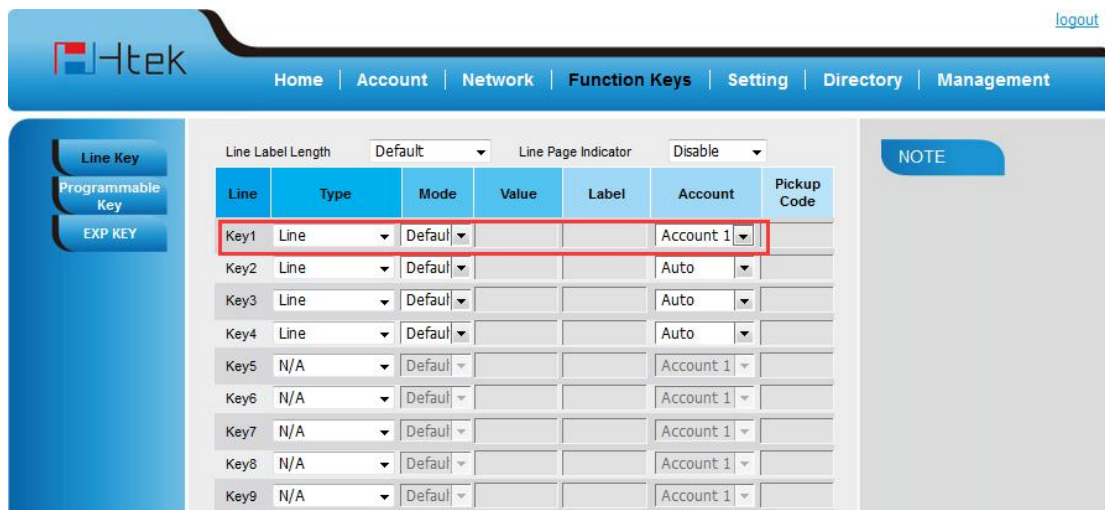

Line Label Length: Default Line Page Indicator: Disable




Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Account 1	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	N/A	Default			Account 1	
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	

NOTE

Speed Dial

 With this feature, you can dial one directory by press the definite key.


To configure Speed Dial feature via phone interface


1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
2. Press  and  key to select the Speed Dial in the type field.
3. Enter the targeted Number.
4. Press  or Save soft key to save the configuration

Then the selected Line or Line Key will work as Speed Dial.

To configure Speed Dial feature via Web Interface

 1. Click Function keys → Line or Line Key.

2. Select the wanted Line or Line Key and set as Speed Dial.
3. Enter the desired phone number in the Value field.
4. Select the Account ID
5. Click the  button to save the configuration.

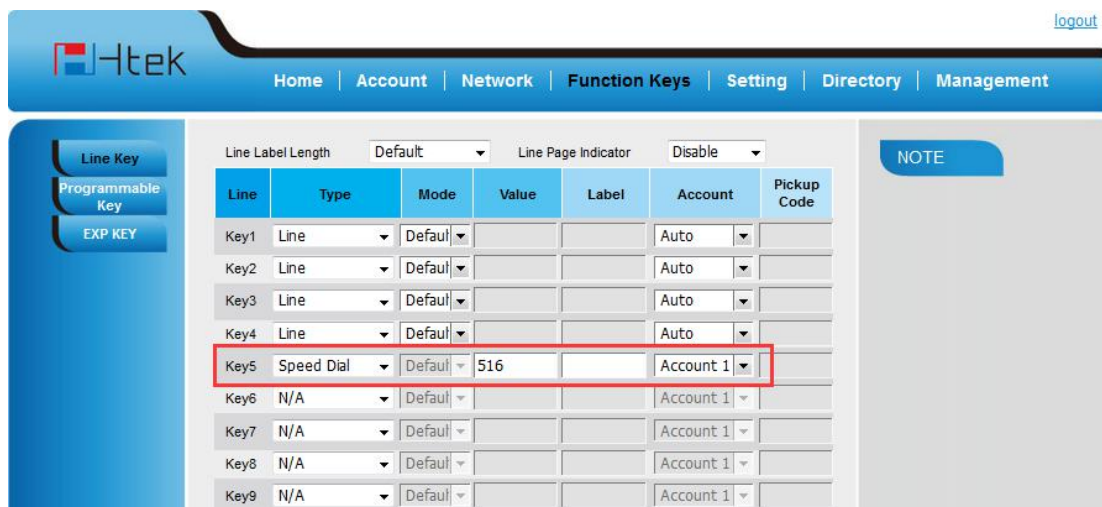



Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	Speed Dial	Default	516		Account 1	
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	




BLF

You can use the BLF (Busy Lamp Field) feature to monitor a specific one whether his phone is busy or free.


1. When the monitored line is idle, the light is steady green.
2. When the monitored line is ringing, the light is blinking red, press the BLF key to pick the phone up directly.
3. When the monitored line is calling or in a conversation, the light is steady red.


To configure a BLF key by phone

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example).
2. Select the targeted Line or Line Key.
3. Press  and  key to select the BLF in the type field.

4. Enter the targeted Value Number.
5. Press  and  key to select the Account ID.
6. Enter the Pickup Code.
7. Press  or Save soft key to save the configuration

To configure a BLF key by web

1. Click Function keys → Line or Line Key.
2. Select the desired Line or Line Key and select BLF in the Type.
3. Enter the monitored phone number in the Value field.
4. Select the Account ID
5. Filled the Pickup code.
6. Click  to save the configuration.

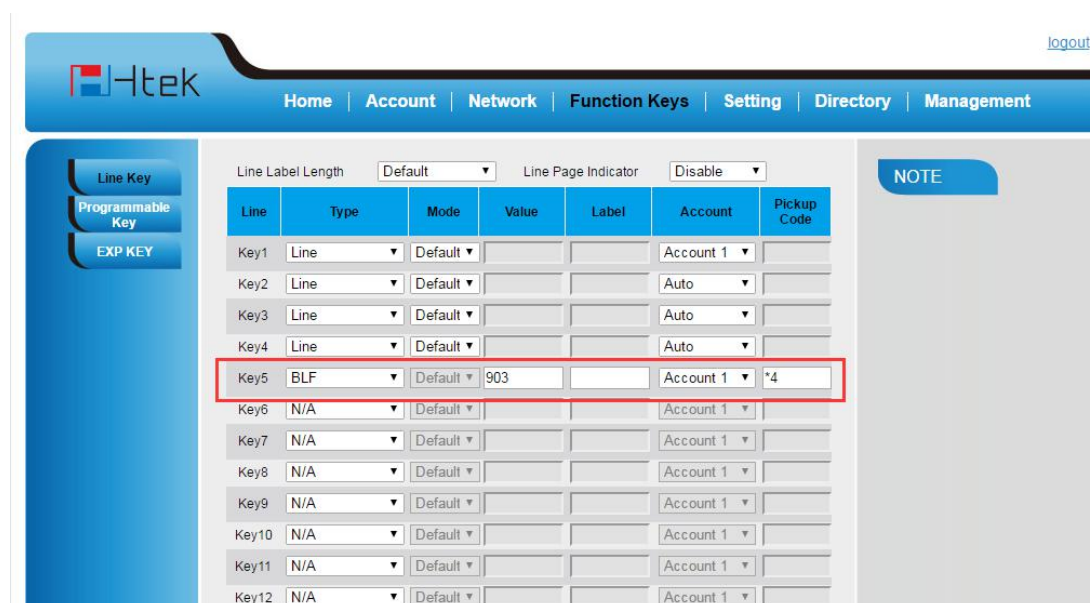

Line Label Length: Default Line Page Indicator: Disable

Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Account 1	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	BLF	Default	903		Account 1	*4
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	
Key10	N/A	Default			Account 1	
Key11	N/A	Default			Account 1	
Key12	N/A	Default			Account 1	

NOTE


Note:

This feature is not available on all servers. For more information, contact your system administrator.


After setting the BLF key, do not need to restart the phone.

Visual Alert for BLF Pickup


If this option is on, when you use the BLF feature to monitor a specific phone whether it is busy or free, you can see this message on the LCD, as shown in the following figure.

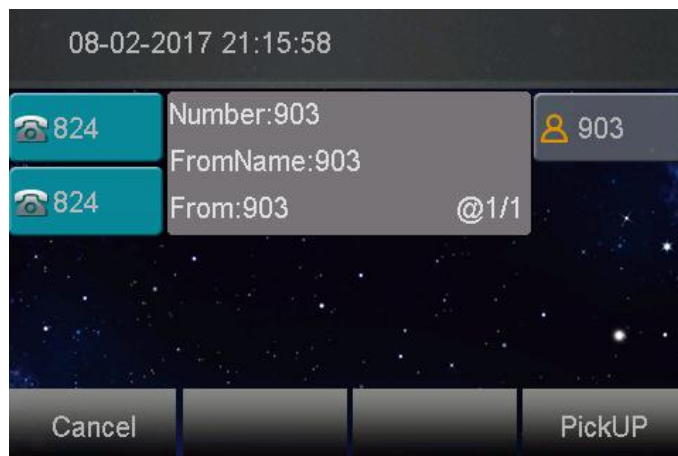

To configure Visual Alert for BLF Pickup via Web Interface

1. Click Setting → Features → Call Pick up → Visual Alert for BLF Pickup
2. Select On or Off for Visual Alert for BLF Pickup
3. Click  to save the configuration.

[logout](#)



[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

Preference

Features

BLF Settings

Date&Time

Tones

SMS

Action URL

Softkey Layout

TR069

SIP

+ Forward:

+ Do Not Disturb

+ HotLine

+ Transfer Settings

- Call Pickup

Direct Call Pickup

☐ On
 ☒ Off

Direct Call Pickup Code

Group Call Pickup

☐ On
 ☒ Off

Group Call Pickup Code

Visual Alert for BLF Pickup

☐ On
 ☒ Off

Audio Alert for BLF Pickup

☐ On
 ☒ Off

+ Phone Lock

+ Call Waiting

+ Alert Ring

+ Auto Redial

- Callback

Callback Code

NOTE

Forward::
This function can transfer the incoming call to the destination number.

Target:
Destination number you want to forward.

On Code:
The code that will be sent to the PBX (server) when the phone is switched on

Off Code:
The code that will be sent to the PBX (server) when the phone is switched off


Audio Alert for BLF Pickup

If this option is on, when you use the BLF feature to monitor a specific phone whether it is busy or free, you can hear beep.

To configure Audio Alert for BLF Pickup via Web Interface

1. Click Setting → Features → Call Pick up → Audio Alert for BLF Pickup
2. Select On or Off for Audio Alert for BLF Pickup
3. Click to save the configuration.

[logout](#)



[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

Preference

Features

BLF Settings

Date & Time

Tones

SMS

Action URL

Softkey Layout

TR069

SIP

Forward:

Do Not Disturb

HotLine

Transfer Settings

Call Pickup

Phone Lock

Call Waiting

Alert Ring

Auto Redial

Callback

Direct Call Pickup ☐ On ☒ Off

Direct Call Pickup Code

Group Call Pickup ☐ On ☒ Off

Group Call Pickup Code

Visual Alert for BLF Pickup ☐ On ☒ Off

Audio Alert for BLF Pickup ☐ On ☒ Off

Callback Code

?

SaveSet

Cancel

NOTE

Forward::
This function can transfer the incoming call to the destination number.

Target:
Destination number you want to forward.

On Code:
The code that will be sent to the PBX (server) when the phone is switched on

Off Code:
The code that will be sent to the PBX (server) when the phone is switched off

BLF List

To configure BLF List via web interface:

1. Login and click Account

* Account Active	<input type="radio"/> No <input checked="" type="radio"/> Yes	
* Primary SIP Server	<input type="text" value="as.iop2.broadworks.net"/>	?
Fallover SIP Server	<input type="text"/>	?
Second Fallover SipServer	<input type="text"/>	?
Prefer Primary SIP Server	<input checked="" type="radio"/> No <input type="radio"/> Yes	?
Outbound Proxy	<input type="text"/>	?
* SIP Transport	<input checked="" type="radio"/> UDP <input type="radio"/> TCP <input type="radio"/> TLS	?
NAT Traversal	<input type="radio"/> No <input checked="" type="radio"/> No,but send keep alive <input type="radio"/> STUN	
Lable	<input type="text"/>	?
* SIP User ID	<input type="text" value="2404984031"/>	?
* Authenticate ID	<input type="text" value="2404984031"/>	?
* Authenticate Password	<input type="password" value="....."/>	?
Name	<input type="text" value="4031"/>	?
DNS Mode	<input checked="" type="radio"/> A Record <input type="radio"/> SRV <input type="radio"/> NAPTR/SRV	

- Click Advanced and then fill the Eventlist BLF URL.

Force Invite	<input checked="" type="radio"/> No <input type="radio"/> Yes	?
Hook Flash Timing	minimum: <input type="text" value="30"/> maximum: <input type="text" value="100"/>	?
Special Feature	<input type="text" value="Standard"/>	
Eventlist BLF URL	<input type="text" value="blf_sales"/>	

- To configure BLF List Keys

3.1 Click→Function Keys→Line Key


3.2 Select the BLF List in the Type Field.


3.3. Select Account

3.4 Click to save the configuration.


For more information, please check [BLF list Note](#) on www.htek.com.

Voice Message


This phone supports Voicemail, and when there is message, the message  will light green. Moreover, when pick up the handset, or press speaker key, you will hear some quick busy tone.

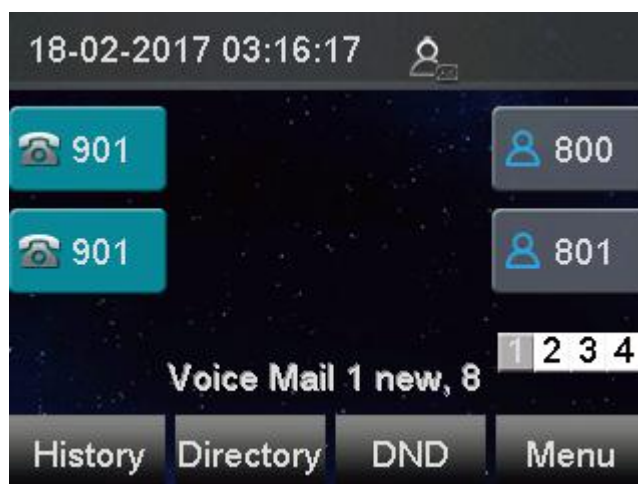






To configure the Voice mail feature via phone interface:

1. Press Menu→Messages→Voice Mail→Set Voice Mail.
2. Enter the Account1/2/3/4 NO.
3. Press  or Save soft key to save the configuration

To configure Voice Mail Line Key via Web Interface:

1. Click Function keys → Line Key.
2. Select the wanted Key.
3. Enter the desired voicemail feature codes in the Value field.
4. Filled the Label displayed on LCD.
5. Select the Account.
6. Click  to save the configuration.

To configure a Voice mail key by phone interface:


1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example).
2. Select the targeted Line or Line Key.
3. Press  and  key to select the Voice mail in the type field.
4. Enter the Value Number.
5. Press  and  key to select the Account ID.
6. Press  or Save soft key to save the configuration

To leave a voice mail:

You can leave a voice mail for someone else when he/she is busy or inconvenient to answer the call. Follow the voice prompt from the system server to leave a voice mail, and then hang up.

To listen to voice mails:


When the phone interface prompts receiving new voice mail's icon, the power indicator LED flashes red(Setting->Preference: Enable Voice Message Status) and the voice message button flashes green.

1. Pressing  or the targeted Line or Line Key to dial out the voice mail access code.
2. Follow the voice prompt to listen to voice mail.

To view the voicemail via phone interface:

Press Menu->Messages->Voice Mail->View Voice Mail.

The LCD screen displays the amount of new and old voice mails

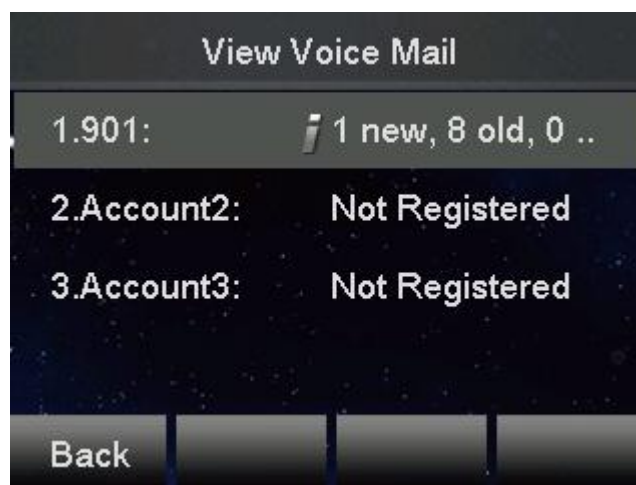

Note:

This feature is not available on all servers. For more information, contact your system




administrator.

Before listening to voice mails, make sure the voice mail access code has been configured. When all new voice mails are retrieved, the power indicator LED, voice mail indicator LED and targeted Line or Line Key will go out.

Direct Pickup


With this feature, you can pick up the set line when it ringing.

To configure Direct Pickup feature via phone interface


1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
2. Press  and  key to select the Speed Dial in the type field.
3. Enter the value.
4. Press  or Save soft key to save the configuration

Then the selected Line or Line Key will work as Direct Pickup.

To configure Direct Pickup feature via Web Interface

1. Click Function keys → Line or Line Key.
2. Select the wanted Line or Line Key and set as Direct Pickup.
3. Enter the pickup code and followed the desired phone number in the Value field.
4. Select the Account ID
5. Click  to save the configuration.

[logout](#)



[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

Line Key
 Programmable Key
 EXP KEY

Line Label Length: Default
Line Page Indicator: Disable




Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	Direct Pickup	Default	*04516		Account 1	04
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	

NOTE

Group Pickup

 With this feature, you can pick up the specified group that you want incoming calls.


To configure the Pickup via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the Group Pickup in the type field.
4. Enter pickup code and followed the desired group number
5. Press  or Save soft key to save the configuration

To configure the Group Pickup via Web interface

1. Click Function keys → Line or Line Key.
2. Select the desired Line or Line Key and select Group Pickup in the Type.
3. Enter the pickup code and followed the desired Group number in the Value field.
4. Click SaveSet to save the configuration.

[logout](#)



[Home](#) | [Account](#) | [Network](#) | **[Function Keys](#)** | [Setting](#) | [Directory](#) | [Management](#)

Line Key

Programmable Key

EXP KEY

Line Label Length Default
Line Page Indicator Disable




Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	Group Pickup	Default	*04620		Account 1	*04
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	

NOTE


Call Park

With this feature, you can put a call on hold and continue the conversation from another phone.


To configure the Call Park via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
2. Press  and  or press Switch soft key to select the Call Park.
3. Press  or Save soft key to save the configuration

To configure the Call Park via Web interface

1. Click Function key → Line or Line Key.
2. Select the desired Line or Line Key and select call park in the Type.
3. Enter the call park code in the value field.
4. Click the  button to save the configuration.

[logout](#)



[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

Line Key

Programmable Key

EXP KEY

Line Label Length: Default

Line Page Indicator: Disable

Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	Call Park	Default	70		Account 1	*04
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	

 


NOTE

For More information for Call Park, please see: [Call park note](#) on <http://www.htek.com>

Intercom

When use the intercom feature, you can quickly get access connect to the configured one.

To configure intercom feature via phone interface


1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
2. Press  and  key to select the intercom in the type field.
3. Enter the intercom codes followed by desired number.
4. Press  or Save soft key to save the configuration

Then the selected Line or Line Key will work as intercom.


To configure Intercom feature via Web Interface

1. Click Function keys → Line or Line Key.
2. Select the wanted Line or Line Key.
3. Enter intercom codes followed by desired number in the Value field.
4. Select the Account ID

- Click the  button to save the configuration.

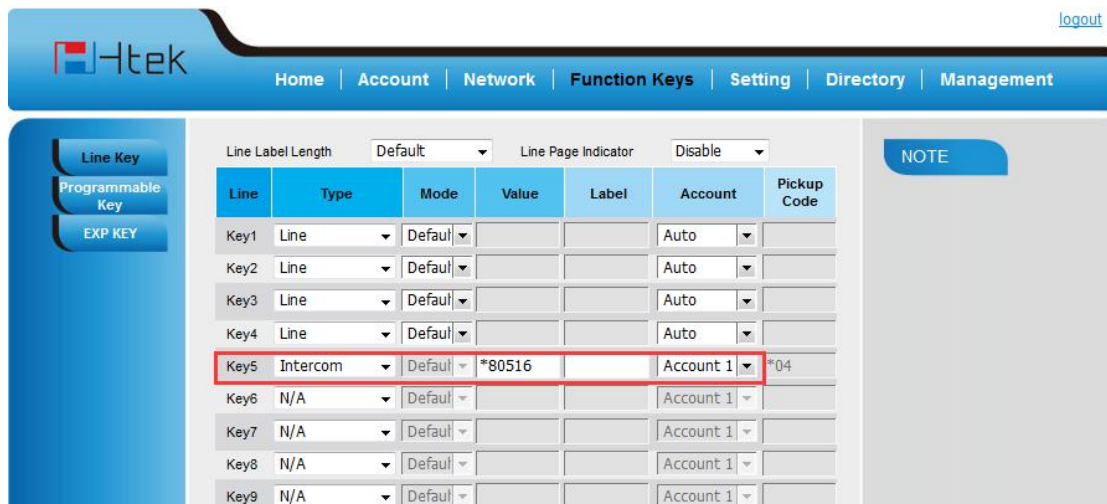

If you want to achieve the intercom feature, you must enable the “Allow Auto Answer By Call-Info”

- Click the account
- Select the desired account from the pull-down list of Account in the Account field.
- Click the advanced
- Enable the “Allow Auto Answer By Call-Info”
- Click the  button to save the configuration.



 
Intercom Barge


If this option is enabled, when there is an active call and an incoming intercom call arrives, the previous call will be put on hold and the intercom call will be answered

- Click the Setting → Preference

- Set On or Off for Intercom Barge.

- Click  for the setting.



Intercom Barge ☐ On ☒ Off 

Note:


This feature is not available on all servers. For more information, contact your system administrator.

DTMF

When the key is configured as DTMF key, you are allowed to send out the desired DTMF number during the conversation.

To use this feature, you should sure that the DTMF Tone is on.

 


To configure the DTMF via Web Interface

- Click Setting→Preference
- Select On for Keypad DTMF Tone.
- Click  to save the configuration.




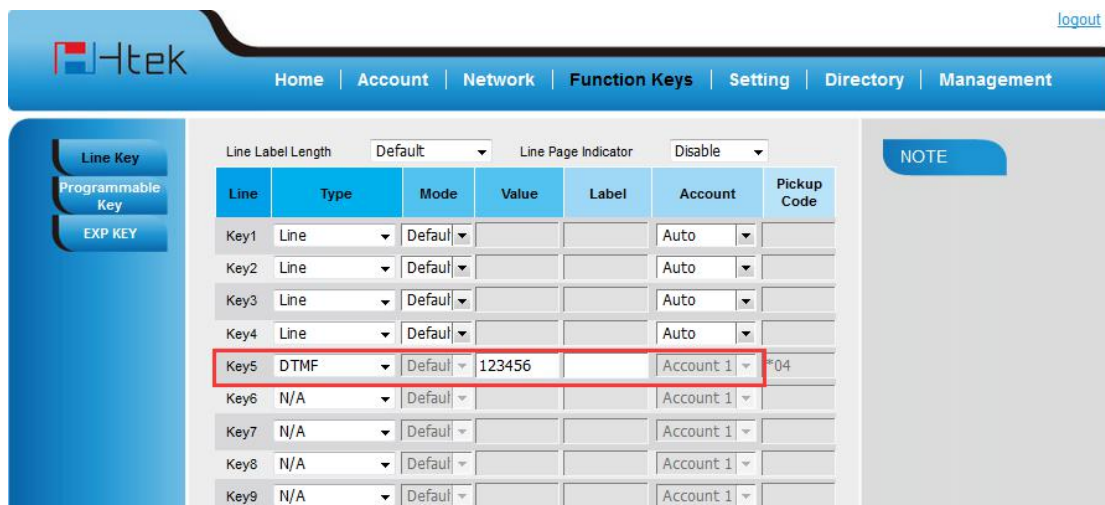
Keypad DTMF Tone ☒ On ☐ Off 

To configure the DTMF via Phone Interface

- Press Menu → Features → Function Keys→Line or Line Keys as Function Keys → Line Key1(for example)
- Select the wanted Line or Line Key.
- Press  and  key to select the DTMF in the type field.
- Enter the value with the Desired DTMF number
- Press  or Save soft key to save the configuration

To configure the DTMF via Web interface

1. Click Function keys → Line or Line Key.
2. Select the desired Line or Line Key and select DTMF in the Type.
3. Fill the value with the Desired DTMF number.
4. Click the  to save the configuration.






Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	DTMF	Default	123456		Account 1	*04
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	

 
Prefix

If the key is configured as Prefix key, you can set the number prefix (e.g. Before the number plus 9), then you don't input 9, press the key and 9 will display on the LCD interface.


To configure the Prefix via Phone Interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the Prefix in the type field.
4. Enter the value with number that you want to set as prefix
5. Press  or Save soft key to save the configuration

To configure the Prefix via Web interface

1. Click Function key → Line or Line Key.
2. Select the desired Line or Line Key and select Prefix in the Type.
3. Fill the value.
4. Click  to save the configuration.

Then when you press this key, the set value is input directly.

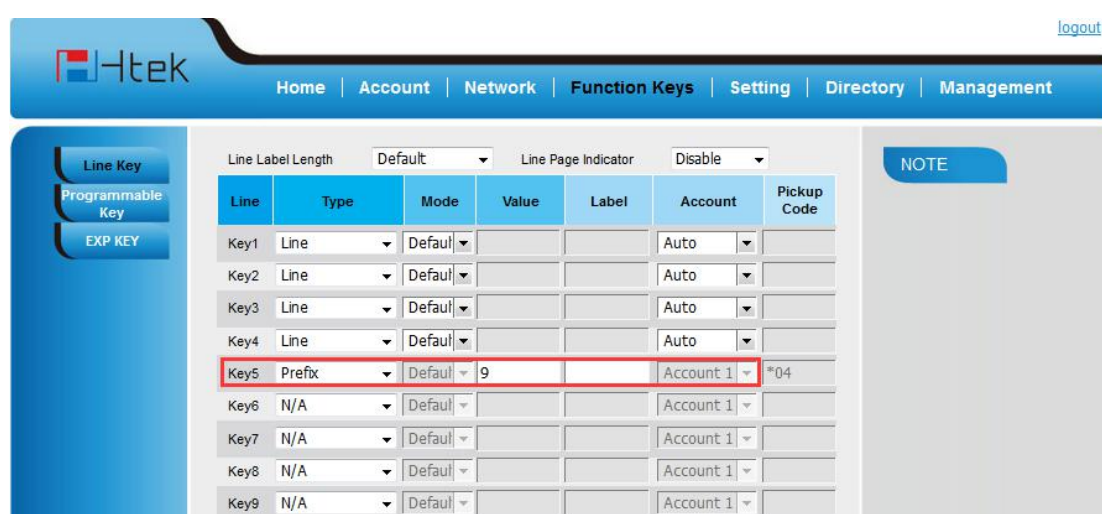




Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	Prefix	Default	9		Account 1	"04
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	


Local Group

When use the Local Group feature, press the key and enter the local Contacts interface quickly.


To configure the Local group via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line Key.
3. Press  and  key to select the Local group in the type field.
4. Press  or Save soft key to save the configuration

To configure the Local Group via Web interface

1. Click Function key → Line Key.
2. Select the desired Key and select Local group in the Type.
3. Click  to save the configuration.

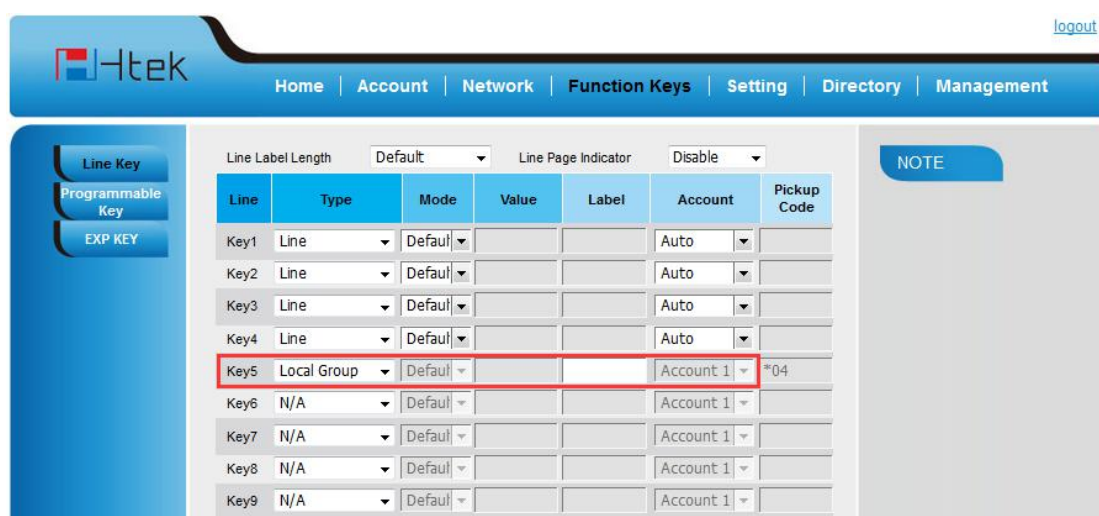


Then you can press the local group key to access the pre-defined contact group in the local directory quickly.




XML Group


When use the XML Group feature, press the key and enter the Remote Contacts interface quickly.

To configure the XML group via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line Key.
3. Press  and  key to select the XML group in the type field.
4. Press  or Save soft key to save the configuration

To configure the XML Group via Web interface

1. Click Function key → Line Key.
2. Select the desired Key and select XML group in the Type.
3. Click  to save the configuration.

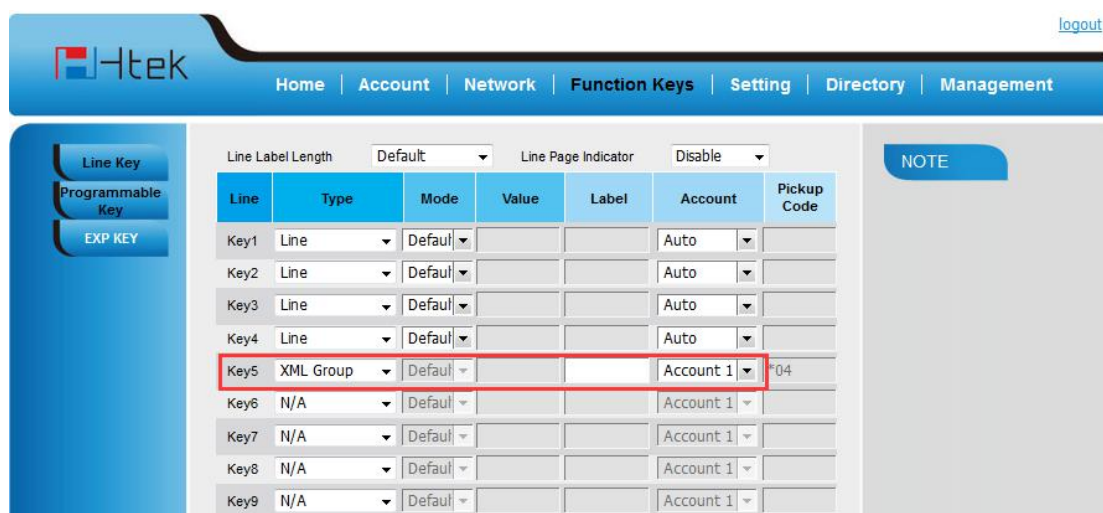




Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	XML Group	Default			Account 1	*04
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	

LDAP


When use the LDAP feature, you can get the LDAP Phonebook directly.


To configure the LDAP via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line Key.
3. Press  and  key to select the LDAP in the type field.
4. Press  or Save soft key to save the configuration

To configure the LDAP via Web interface

1. Click Function key → Line Key.
2. Select the desired Key and select LDAP in the Type.

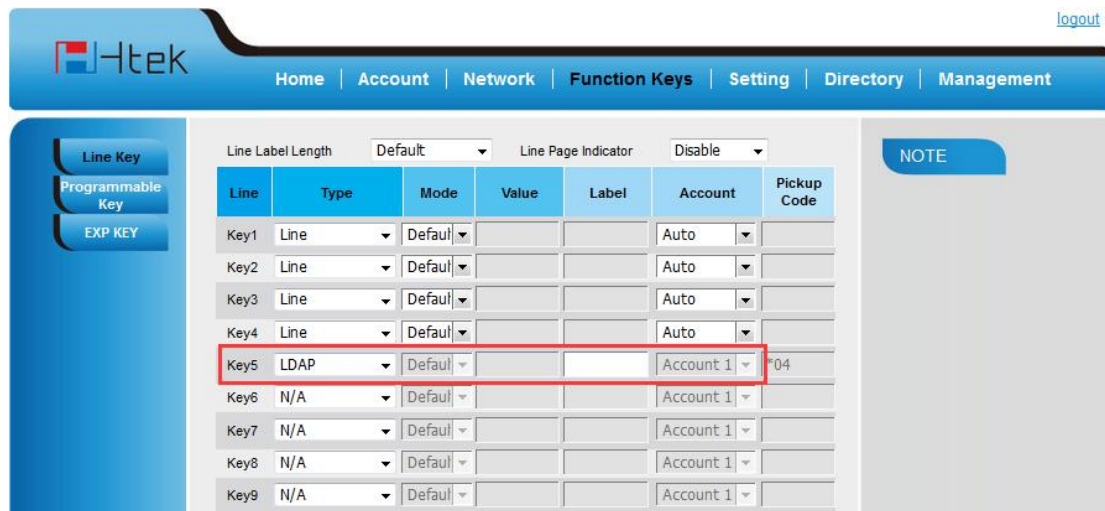


- Click  to save the configuration.



XML Browser


You can use this key feature to access the Xml browser quickly. The Xml browser allows you to create custom services which meet your functional requirements on the server. You can customize practical applications, such as weather report, stock information, Google search, etc.


To configure the XML Browser via Phone Interface

- Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1 (for example)
- Select the wanted Line Key.
- Press  and  key to select the XML Browser in the type field.
- Filled the access URL for xml browser
- Press  or Save soft key to save the configuration

To configure the XML Browser via Web interface

- Click Function key → Line Key.
- Select the desired Key and select xml browser in the Type.

3. Filled the access URL for xml browser (e.g.: <http://192.168.0.240:8080/xmlbrowser/text.xml>)
4. Click  button to save the configuration.

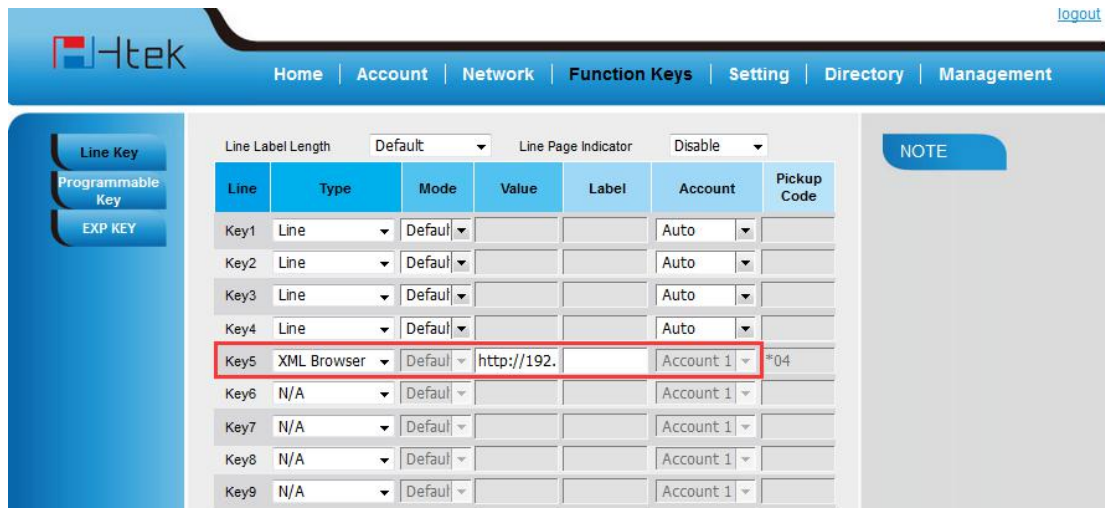

Line Label Length: Default Line Page Indicator: Disable




Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	XML Browser	Default	http://192.		Account 1	*04
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	

NOTE

Broadsoft Group

When use the BroadSoft Group feature, press the key and enter the Broadsoft Contacts interface quickly.

To configure the Broadsoft group via Phone Interface


1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line Key.
3. Press  and  key to select the Broadsoft group in the type field.
4. Press  or Save soft key to save the configuration

To configure the Broadsoft group via Web interface




1. Click Function key → Line Key.
2. Select the desired Key and select Broadsoft group in the Type.

3. Click the  button to save the configuration.


Conference

The Htek IP Phone supports up to 5-way conference. You are allowed to configure the programmable key to be used as a conference key. This key works same as .

To configure the Conference via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line Key.
3. Press  and  key to select the Conference in the type field.
4. Press  or Save soft key to save the configuration

To configure Conference via Web Interface




1. Click Function keys → Line Key.
2. Select the desired Key and select Conference in the Type.
3. Click the  button to save the configuration.

Forward


If the key is configured as Forward key, press this key under the idle status, the IP phone will turn to the Always Forward interface and you can set the Forward to number, then when there is any call to the number will be forwarded to the set number automatically.

To configure the Forward via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line Key.

3. Press  and  key to select the Forward in the type field.
4. Enter the Number that to forward.
5. Press  or Save soft key to save the configuration




To configure Forward via Web Interface

1. Click Function keys → Line Key.
2. Select the desired Key and select Forward in the Type.
3. Enter the Value with the number you want to forward
4. Click the  button to save the configuration.

Transfer


You are able to configure the key as a transfer key to perform the Attended/Semi-Attended Transfer.

To configure the Transfer via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line Key.
3. Press  and  key to select the Transfer in the type field.
4. Enter the Number that transfer to
5. Press  or Save soft key to save the configuration

To configure Transfer via Web Interface




1. Click Function keys → Line Key.
2. Select the desired Key and select Transfer in the Type.

3. Enter the Value with the number that wanted transfer to
4. Click the  button to save the configuration.


Hold

The key can be configured as a hold key. You can use this key to hold and resume a call during the conversation.

To configure the Hold via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line Key.
3. Press  and  key to select the Hold in the type field.
4. Press  or Save soft key to save the configuration

To configure Hold via Web Interface




1. Click Function keys → Line Key.
2. Select the desired Key and select Hold in the Type.
3. Click the  button to save the configuration.

Group Listening


With this feature, when you active a call, you can listen using Handset and Free-speaker, but only can use the handset to speak.

To configure the Group listening via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line Key.

3. Press  and  key to select the group listening in the type field.
4. Press  or Save soft key to save the configuration




To configure Group listening via Web Interface

1. Click Function keys → Line Key.
2. Select the desired Key and select Group listening in the Type.
3. Click  to save the configuration.


DND

If the key is configured as DND key, you are allowed to active the DND function immediately when you press it and the phone is to reject all incoming calls automatically. Press it again to deactivate DND mode.

To configure the DND via Phone Interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line Key.
3. Press  and  key to select the DND in the type field.
4. Press  or Save soft key to save the configuration

To configure DND via Web Interface

1. Click Function keys → Line Key.
2. Select the desired Key and select DND in the Type.
3. Click the  button to save the configuration.

To enable DND feature

Press the DND soft key when the phone is idle status, and then DND icon shown on the LCD.


To disable DND feature

Press the DND soft key again, then there is no DND icon on the LCD.

Redial

If the key is configured as Redial key, you can redial the last placed call from the IP Phone.

To configure Redial via Web Interface

1. Click Function keys → Line key/Line Key
2. Select the desired Key and select redial in the Type.
3. Enter the Label displayed on LCD.
4. Click the  button to save the configuration.


SMS

Send SMS

To send SMS via web Interface

1. Click Setting→SMS
2. Select the account(from which account the SMS sent)
3. Enter the target number
4. Input the content of SMS, and click Send.

[logout](#)



[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

Preference

Features

BLF Settings

Date&Time

Tones

SMS

Action URL

Softkey Layout

TR069

SIP

Account

Number

Message

Account 1

516

how are you?

Send

Cancel

NOTE

SMS Number:

 


Input the phone number you will send message to and input the message's contents.

To send SMS via phone interface:


1. Click Menu→Message→Text Message→Set SMS
2. Enter the contents in the white field.
3. Press the save button
4. Select the account (from which account the SMS sent)
5. Enter the target number (to which account the number sent)
6. Press the Send button.

Set SMS Line Key

To configure the SMS via Phone Interface

1. Press Menu → Features → Function Keys→Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line Key.
3. Press  and  key to select the SMS in the type field.
4. Press  or Save soft key to save the configuration




To configure SMS via Web Interface


1. Click Function keys → Line Key.
2. Select the desired Key and select SMS in the Type.
3. Click  to save the configuration.

Record


With record feature, you can record calls by pressing a record key on the phone.

To configure the record via phone interface


1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the Record.
4. Press  or Save soft key to save the configuration

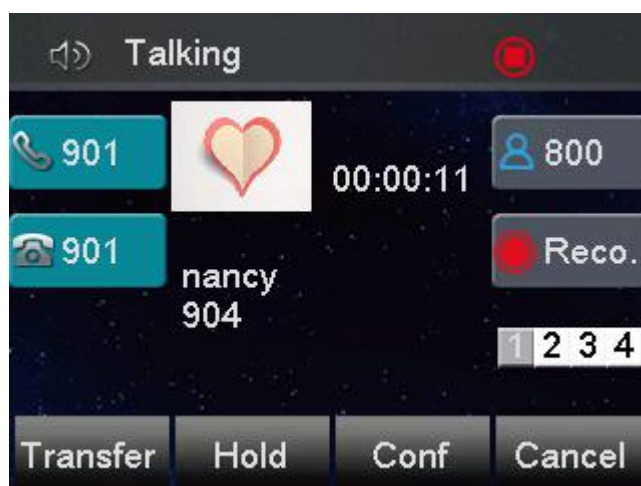

 To configure the record via Web Interface

1. Click Function keys → Line or Line Key.
2. Select the desired Line or Line Key and select Record in the Type.
3. Click the  button to save the configuration.

[logout](#)



[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

Line Key

Programmable Key

EXP KEY

Line Label Length: Default
Line Page Indicator: Disable

Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	Record	Default			Account 1	
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	

NOTE




Note:

Please contact the system administrator whether support this feature or not.


URL Record

The phone sends HTTP URL request to trigger a recording. Contact your system administrator for the predefined URL.

To configure the URL record via phone interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the URL Record.
4. Press  or Save soft key to save the configuration




To configure the record via Web Interface

1. Click Function keys → Line Key.
2. Select the desired Line or Line Key and select URL Record in the Type.
3. Click the  button to save the configuration.


Paging

With this feature, you can call a paging group directly.

To configure the paging via phone interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the Paging.
4. Enter the paging code followed the number.
5. Press  or Save soft key to save the configuration

To configure the Paging via Web interface

1. Click Function keys → Line Key.
2. Select the desired Line Key and select Paging in the Type.
3. Enter the paging code followed the number.
4. Click the  button to save the configuration.

Shared Line

Htek IP Phone supports shared call appearance by Broadsoft and XCast standard. This feature allows members of the SCA group to shared SIP lines and provides status monitoring (idle, active, progressing, hold) of the shared line. When there is an incoming call designated for the SCA group, all of the members of the group will be notified of an incoming call and will be able to answer the call from the phone with the SCA extension registered.






All the users that belong to the same SCA group will be notified by visual indicator when a user seizes the line and places an outgoing call, and all the users of this group will not be able to seize the line until the line goes back to an idle state or when the call is placed on hold (with the exception of when multiple call appearances are enabled on the server side).

In the middle of the conversation, there are two types of hold: Public Hold and Private Hold. When a member of the group places the call on public hold, the other users of the SCA group will be notified of this by the red-flashing button and they will be able to resume the call from their phone by pressing the line button. However, if this call is placed on private-hold, no other member of the SCA group will be able to resume that call.

To enable shared call appearance, the user would need to register the shared line account on the phone. In addition, they would need to navigate to “Account” -> “Advanced” on the webpage and set the line to “Shared Line” and “SIP Server Type”, and configure the line key or Line Key as “line” type with the desired account on webpage or LCD. If the user requires more shared call appearances, the user can configure multiple line keys (Function keys->Line key) to be “line” type associated with the account.


This feature is very useful in the boss and secretary scenario. For example, the secretary can share the boss' extension number on her phone. When there is an incoming call to the extension number of the boss, both the phones of the boss and the secretary will ring simultaneously. Either the boss or the secretary can answer the call. Calls on shared line can be placed on hold or barged in.

To configure the line key as line via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the Line in the type field.
4. Press  and  key to select the Account ID.
5. Enter the Label
6. Enter the Value
7. Press  or Save soft key to save the configuration

To configure the line key as line via Web Interface

1. Click Function keys → Line or Line Key.
2. Select the desired Line or Line Key and select Line in the Type.
3. Enter the Value.

4. Enter the Label.
5. Select the Account ID
6. Click the  button to save the configuration and then restart.




Note:

This feature is not available on all servers. For more information, contact your system administrator.


Public Hold

The key can be configured as a public hold key. During a conversation, all members belonging to that particular SLA group can use this key to hold or resume a call.


To configure the Public hold via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the Public Hold.
4. Press  or Save soft key to save the configuration

To configure public hold via Web Interface

1. Click Function keys → Line Key.
2. Select the desired Key and select public hold in the Type.
3. Click the  button to save the configuration.

[logout](#)



[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

Line Key

Programmable Key

EXP KEY

NOTE

Line Label Length Default




Line Page Indicator Disable

Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	Public Hold	Default			Account 1	
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	


Private Hold

The key can be configured as a private hold key. During a conversation, all members belonging to that particular SLA group can use this key to hold the call, but only the initiator can resume the call.


To configure the Private hold via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the Private Hold.
4. Press  or Save soft key to save the configuration

To configure private hold via Web Interface

1. Click Function keys → Line Key.
2. Select the desired Key and select Private hold in the Type.
3. Click the  button to save the configuration.

[logout](#)



[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

Line Key

Programmable Key

EXP KEY

Line Label Length: Default

Line Page Indicator: Disable




Line	Type	Mode	Value	Label	Account	Pickup Code
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	
Key5	Private Hold	Default			Account 1	
Key6	N/A	Default			Account 1	
Key7	N/A	Default			Account 1	
Key8	N/A	Default			Account 1	
Key9	N/A	Default			Account 1	

NOTE

Share line


Shared line is configured by assigning the same extension number to multiple lines. You can use the shared line feature to share an extension number which is used on two or more IP phones at the same time. An incoming call to that number will cause all phones to ring simultaneously. The incoming call can be answered on one of the phones but not all of them. This feature is very useful in the boss and secretary scenario. For example, the secretary can share the boss' extension number on her phone. When there is an incoming call to the extension number of the boss, both the phones of the boss and the secretary will ring simultaneously. Either the boss or the secretary can answer the call. Calls on shared line can be placed on hold or barged in.

To configure the share line via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the share line.
4. Enter the number in the value field.
5. Select the desired account in the Account field.
6. Press  or Save soft key to save the configuration

To configure the share line feature via web interface:

1. Click Function keys → Line Key.

2. Select the desired Key and select share line in the Type.
3. Enter the number in the value field.
4. Select the desired account from the pull-down list of Account field.
5. Click the  button to save the configuration.

Note:

This feature is not available on all servers. For more information, contact your system administrator.




Hot Desking

Hot Desking originates from the definition of being the temporary physical occupant of a work station or surface by a particular employee. A primary motivation for Hot Desking is cost reduction. This feature is regularly used in places where not all the employees are in the office at the same time, or not in the office for very long at all, which means actual personal offices would be often vacant, consuming valuable space and resources.

You can use Hot Desking on the IP phone to logout the existing accounts and then log in a new account, that is, many users can share the phone resource in different time. To use this feature, you need to configure a Hot Desking key in advance.


This feature is supported on the version 1.0.3.82 or later

To configure the hot desking via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1(for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the hot desking.
4. Enter the display name in the value field.
5. Press  or Save soft key to save the configuration

To configure the hot desking via web interface:

1. Click Function keys → Line Key.

2. Select the desired Key and select hot desking in the Type.
3. Enter the number in the value field.
4. Select the desired account from the pull-down list of Account field.
5. Click the  button to save the configuration.

To use the Hot desking feature on the user interface:

1. Press the Hot desking key when the IP Phone is idle.
2. Enter the Extension number and password



The image shows a 'HotDesking' user interface screen. It has a dark background with a starry pattern. At the top, the title 'HotDesking' is displayed. Below the title, there are two input fields: '1.User Name:' and '2.Password:'. The '1.User Name:' field has a cursor in it. At the bottom of the screen, there are four buttons: 'Cancel', '123', 'Delete', and 'Save'.

3. Click Save softkey

You can see the account information which has changed.




Note:

This feature is not available on all servers. For more information, contact your system administrator.


ACD

ACD feature is often used in offices for customer service, such as call center. The ACD system handles large volumes of incoming calls from callers who have no need to talk to a specific person but who require assistance from any of multiple persons at the earliest opportunity. The ACD feature on the Htek IP Phone allows the ACD system to distribute calls from large volumes of incoming calls to the registered IP phone users. To use this feature, you should configure an ACD key in advance.

To configure the ACD via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the ACD.
4. Enter the label in the label field.
5. Select the desired account in the Account field.
6. Press  or Save soft key to save the configuration

To configure the ACD via web interface:

1. Click Function keys → Line Key.
2. Select the desired Key and select ACD in the Type.
3. Enter the label in the label field.
4. Select the desired account from the pull-down list of Account field.
5. Click the  button to save the configuration.



Note:

This feature is not available on all servers. For more information, contact your system administrator.

Zero Touch


You can use this key feature to configure auto provision and network parameters quickly.
This feature is supported on the version 1.0.3.82 or later

To configure the zero touch via phone interface

1. Press Menu → Features → Function Keys → Line or Line Keys as Function Keys → Line Key1 (for example)
2. Select the wanted Line or Line Key.
3. Press  and  key to select the zero touch

4. Press  or Save soft key to save the configuration

To configure the zero touch via web interface:

1. Click Function keys → Line Key.
2. Select the desired Key and select zero touch in the Type.
3. Click the  button to save the configuration.

To use the zero touch feature on the user interface:

1. Press the zero touch key when the IP Phone is idle.
2. The IP Phone will enter the WAN Port interface, you can change the WAN Type by pressing the Navigation keys.
3. Press the Next softkey to enter Network interface, then you can configure some information.
4. Press the Next softkey again, you can configure auto provision information.
5. When you finish the setting, you can press the OK to accept the changes.

Note:

This feature is not available on all servers. For more information, contact your system administrator.




Multicast Paging

You can use multicast paging to quickly and easily forward out time sensitive announcements to people within the multicast group. You can configure a multicast paging key or a paging list key on the phone, which allows you to send a Real Time Transport Protocol (RTP) stream to the pre-configured multicast address(es) without involving SIP signaling. You can configure the phone to receive an RTP stream from pre-configured multicast listening address(es) without involving SIP signaling. You can specify up to 10 multicast listening addresses.

 
Sending RTP Stream

To configure a multicast paging key via phone interface

1. Press Menu → Feature → line or Line Key → Line Key1 (e.g.)

2. Press  and  or switch key to select the multicast paging in the type field.
3. Enter the multicast IP address and port number (e.g., 224.5.6.20:2000) in the Value field.
4. The valid multicast IP addresses range from 224.0.0.0 to 239.255.255.255.
5. Press  or Save soft key to save the configuration

To configure a multicast paging key via web interface

1. Function keys->line key:
2. Select the desired Key and select multicast paging in the Type.
3. Enter the multicast IP address and port number (e.g., 224.5.6.20:2000) in the Value field.
The valid multicast IP addresses range from 224.0.0.0 to 239.255.255.255.
4. Click the  button to save the configuration.

Sending RTP Stream:

Press the multicast paging key when the phone is idle.

The phone sends RTP to a preconfigured multicast address (IP: Port). Any phone in the local network then listens to the RTP on the preconfigured multicast address (IP:Port). For both sending and receiving of the multicast RTP, there is no SIP signaling involved.

The multicast paging key LED illuminates solid green.

Receiving RTP Stream

You can configure the phone to receive a Real Time Transport Protocol (RTP) stream from the pre-configured multicast address(es) without involving SIP signaling. You can specify up to 10 multicast addresses that the phone listens to on the network.

How the phone handles incoming multicast paging calls depends on Paging Barge and Paging Priority Active parameters configured via web user interface.

Paging Barge

The paging barge parameter defines the priority of the voice call in progress. If the priority of an incoming multicast paging call is lower than that of the active call, it will be ignored automatically. If Disabled is selected from the pull-down list of Paging Barge, the voice call in progress will take precedence over all incoming multicast paging calls.

Valid values in the Paging Barge field:

- 1 to 10: Define the priority of the active call, 1 with the highest priority, 10 with the lowest.
- Disabled: The voice call in progress will take precedence over all incoming paging calls.


Paging Priority Active

The paging priority active parameter decides how the phone handles incoming multicast paging calls when there is already a multicast paging call on the phone. If enabled, the phone will ignore incoming multicast paging calls with lower priorities, otherwise, the phone will answer incoming multicast paging calls automatically and place the previous multicast paging call on hold. If disabled, the phone will automatically ignore all incoming multicast paging calls.


Multicast Codec:


You can only configure the codec by web interface.

To configure multicast codec key via web interface

1. Click Directory ->Multicast Paging:
2. Select the desired codec from the pull-down list of Multicast Codec
3. Click the  button to save the configuration.

To configure multicast listening addresses via web interface:

1. Click Directory->Multicast paging.
2. Select the desired value from the pull-down list of Paging Barge.
3. Select the desired value from the pull-down list of Paging Priority Active.
4. Enter the multicast IP address(es) and port number (e.g., 224.5.6.20:2000) which the phone listens to for incoming RTP multicast in the Listening Address field.
5. Enter the label in the Label field.
6. Click  button to save the configuration.



[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

Directory

Remote Phone Book

Call History

LDAP

Network Directory

MultiCast Paging

Paging Barge:
Paging Priority Active:
Multicast Codec:

NOTE

Index	Listening Address	Label	Multi Priority
IP Address 1	224.5.6.20:2000	2000	1
IP Address 2	<input type="text"/>	<input type="text"/>	2
IP Address 3	<input type="text"/>	<input type="text"/>	3
IP Address 4	<input type="text"/>	<input type="text"/>	4
IP Address 5	<input type="text"/>	<input type="text"/>	5
IP Address 6	<input type="text"/>	<input type="text"/>	6
IP Address 7	<input type="text"/>	<input type="text"/>	7
IP Address 8	<input type="text"/>	<input type="text"/>	8
IP Address 9	<input type="text"/>	<input type="text"/>	9
IP Address 10	<input type="text"/>	<input type="text"/>	10

Note:

The priorities of listening addresses are predefined: 1 with the highest priority, 10 with the lowest. Both the multicast paging sender and receiver's phones play a warning tone when establishing a multicast paging call. Multicast listening addresses are configurable via web interface only.

Upgrade


Factory Reset

To set Factory Reset by phone interface

1. Press Menu → Setting → Advanced Setting(default password: admin)→ Factory Reset
2. Press OK soft key in the warning page.

To set Factory Reset via web interface

1. Click Management → Upgrade
2. Click and then confirm the setting.


[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

[Password](#)
[Upgrade](#)
[Auto Provision](#)
[Configuration](#)
[Trusted CA](#)
[Server CA](#)
[Tools](#)
[Restart](#)
[Reboot](#)

- Image Version

Major Version	IMG-1.0.3.82(2015-04-30 16:06:00)
Minor Version	IMG-1.0.3.86(2015-08-07 15:08:00)
- **Reset To Factory** Reset To Factory
- ROM Firmware Upgrade

No file selected.

NOTE

Image Version:
Show the information of the two system image version .


Reset To Factory :
Reset all the settings of the phone to default configurations.

Restart:
one simple operation for restart the voip application.

Pcap Feature

To use pcap via web interface:

1. Click Management→Tools
2. Click Start and then operation the phone
3. When finish the operation, click stop and then click Export.
4. Then you'll get the Pacp captures.


[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)


[Password](#)
[Upgrade](#)
[Auto Provision](#)
[Configuration](#)
[Trusted CA](#)
[Server CA](#)
[Tools](#)
[Restart](#)
[Reboot](#)


- **Pcap Feature:** Start Stop Export
- Lcd Screen Save Screen

System Log

To download system log via web interface:

1. Click Management→Configuration

2. Click  of the system Log
3. Then you'll get a txt file: syslog.txt.

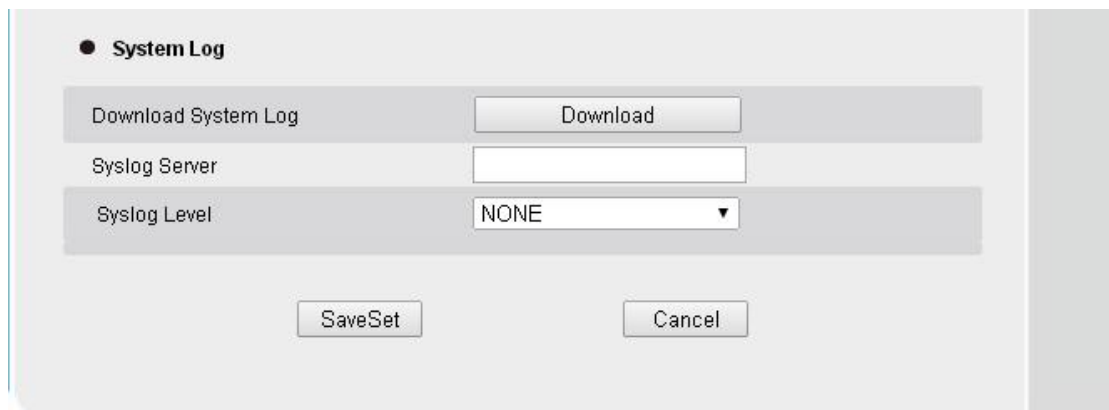The image shows a 'System Log' configuration window. It has a title bar with a radio button and the text 'System Log'. Below the title bar, there are three rows of controls: a 'Download System Log' label with a 'Download' button, a 'Syslog Server' label with a text input field, and a 'Syslog Level' label with a dropdown menu showing 'NONE'. At the bottom, there are 'SaveSet' and 'Cancel' buttons.

Upgrade

To upgrade via HTTP, the “Management”->“auto provision” ->“ Firmware Upgrade”-> “Upgrade Mode” field needs to be set to HTTP, respectively. “Firmware Server Path” needs to be set to a valid URL of a HTTP server, server name can be in either FQDN or IP address format. Here are examples of some valid URL.

 
- e.g. firmware.mycompany.com:5688/Hanlong
- e.g. www.mycompany.com:5688/fm/ Hanlong
- e.g. 218.2.83.110


Instructions for firmware upgrade via HTTP:

- (1) End users can choose to download the free HTTP server from <http://httpd.apache.org/> or use Microsoft IIS web server. Then setup HTTP server.
- (2) Unzip the firmware file and put all of them under the *root/fm* directory of the HTTP server.
- (3) Visiting “HTTP:\\192.168.0.254\\fm\\fw923.rom on localhost by browser” to verify the HTTP Server. If visiting “HTTP: \\192.168.0.254\\fm\\fw923.rom on other computer is no prompt to download fw923.rom file, please check the firewall (Suggest close the firewall).

To configure the server path via web interface:

1. Click Management→Auto provision:
2. Select the upgrade mode in the upgrade mode field
3. Enter the Firmware server path and config server path (192.168.0.254 is HTTP server).
4. Enter the HTTP server’s username and password (optional).

5. Click the  button to save the configuration.
6. Restart the UC923, IP Phone will restart and auto-get firmware files from HTTP server.

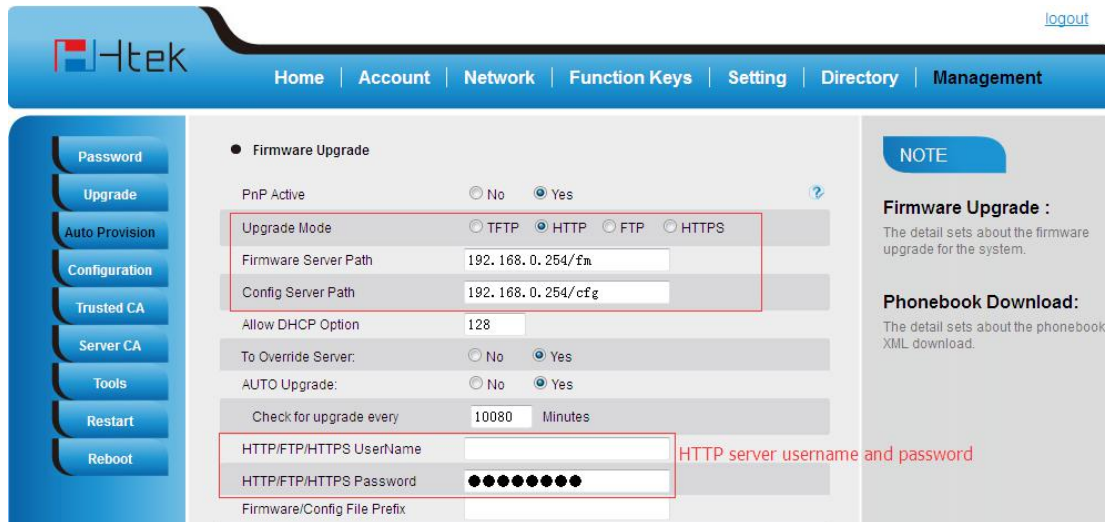


NOTES:

- Htek recommends end-user use the Htek HTTP server. For large companies, we recommend to maintain their own TFTP/HTTP/FTP/HTTPS server for upgrade and provisioning procedures.
- Once a “Firmware Server Path” is set, user needs to update the settings and restart the IP Phone. If the configured firmware server is found and a new code image is available, the UC923 will attempt to retrieve the new image files by downloading them into the UC923’s SDRAM. During this stage, the UC923’s LEDs will blink fastly until the checking/downloading process is completed. Upon verification of checksum, the new code image will then be saved into the Flash. If TFTP/HTTP/FTP/HTTPS fails for any reason (e.g. TFTP/HTTP/FTP/HTTPS server is not responding, there are no code image files available for upgrade, or checksum test fails, etc), the UC923 will stop the TFTP/HTTP/FTP/HTTPS process and simply boot using the existing code image in the flash.
- Firmware upgrade may take as long as 3 to 8 minutes over Internet, or just 1 minutes if it is performed on a LAN. It is recommended to conduct firmware upgrade in a controlled LAN environment if possible. For users who do not have a local firmware upgrade server.
- Htek’s latest firmware is available at <http://www.htek.com> → Support → Firmware Download.
- Oversea users are strongly recommended to download the binary files and upgrade firmware locally in a controlled LAN environment.

To upgrade manually via the Web configuration interface

1. Click Management → Upgrade

2. Click Brower or the blank.

3. Select the firmware (fw923.rom)and then click .

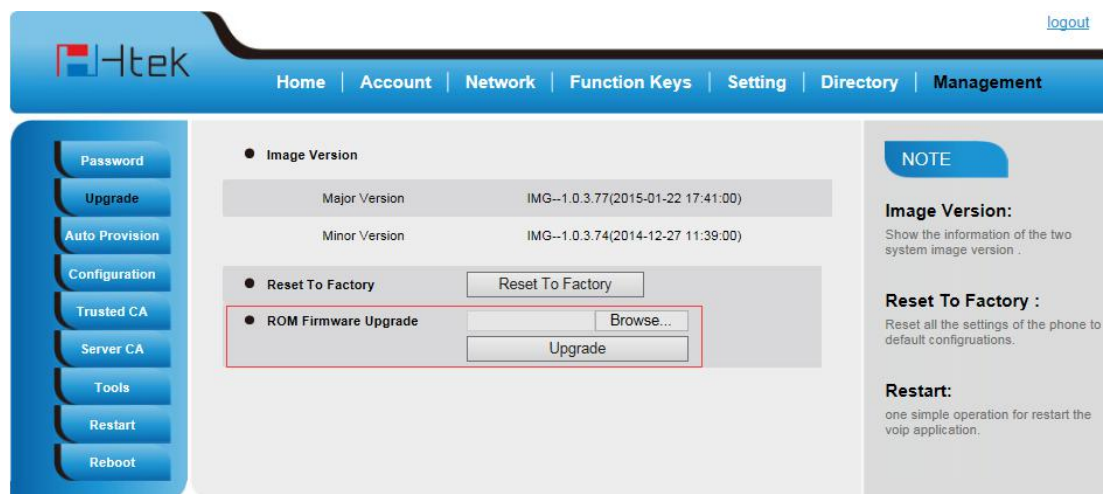


Image Version

Major Version	IMG--1.0.3.77(2015-01-22 17:41:00)
Minor Version	IMG--1.0.3.74(2014-12-27 11:39:00)

Reset To Factory

ROM Firmware Upgrade

NOTE

Image Version:
Show the information of the two system image version .


Reset To Factory :
Reset all the settings of the phone to default configurations.

Restart:
one simple operation for restart the voip application.

Configuration File

To download configuration file:

1. Click Management → Configuration →Download Device Configuration
2. Then you can get a file: cfg.bin or cfg.xml

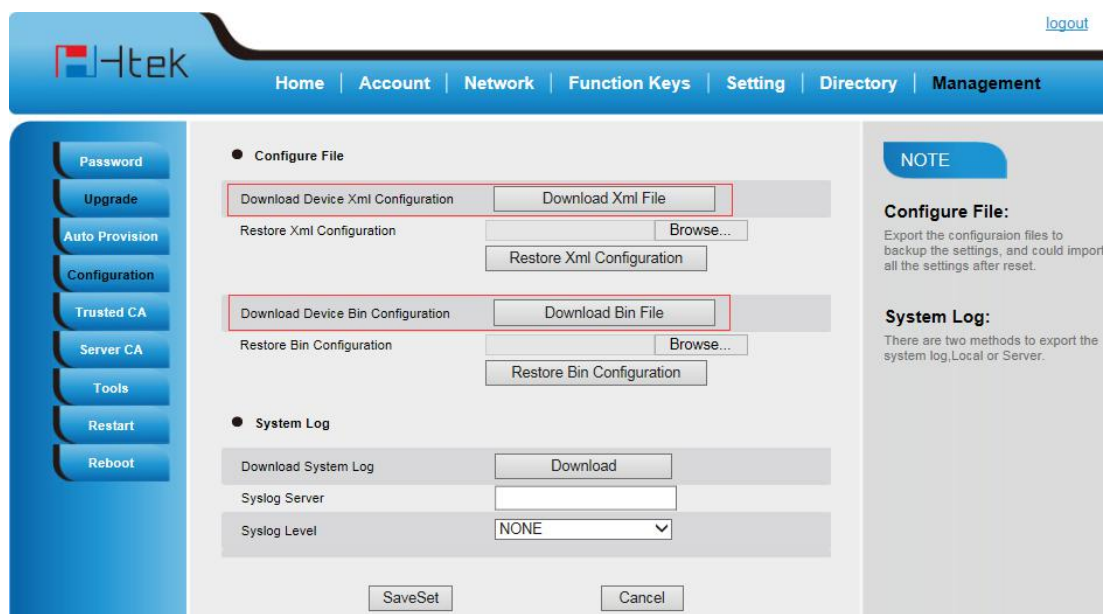

Configure File

Download Device Xml Configuration

Restore Xml Configuration

Download Device Bin Configuration

Restore Bin Configuration

System Log

Download System Log

Syslog Server

Syslog Level

NOTE


Configure File:
Export the configuraion files to backup the settings, and could import all the settings after reset.

System Log:
There are two methods to export the system log,Local or Server.

To Restore a configuration file:

1. Click Management → Configuration → Restore configuration

2. Select the xxx.bin or xxx.xml file, and then Click the **Restore Bin Configuration**, then IP Phone will reboot.

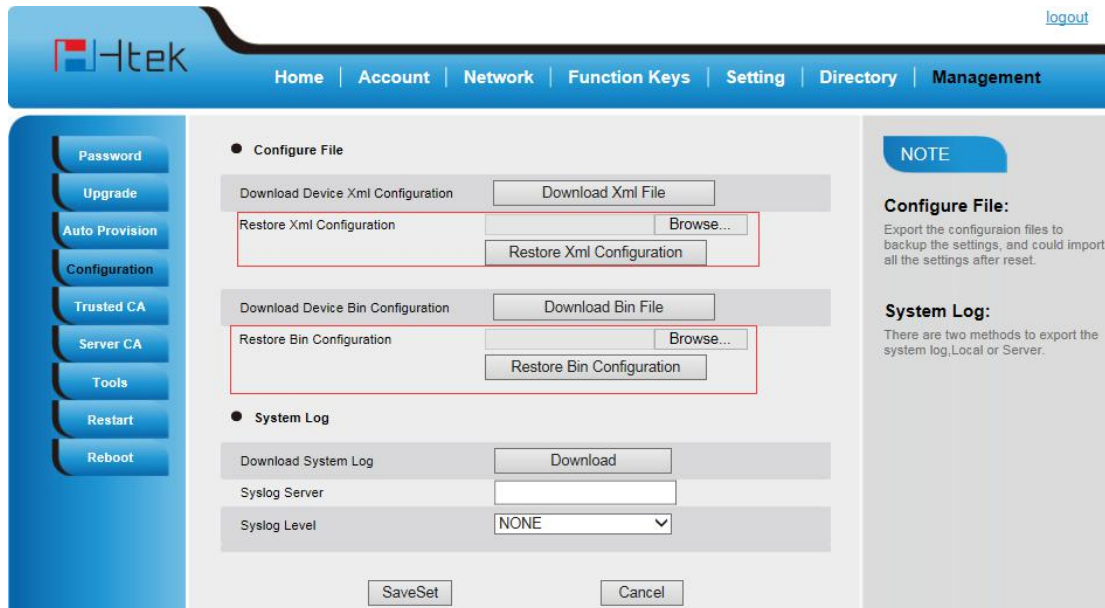

Troubleshooting

Why is the phone LCD screen blank?

1. Ensure your phone is properly plugged into a functional AC outlet.
2. Ensure that the phone isn't plugged into a plug controlled by a switch that is off.
3. If the phone is plugged into a power strip, try plugging it directly into a wall outlet instead.
4. If your phone is powered from PoE, ensure you use a PoE compliant switch or hub, or contact your system administrator for more information.
5. Check that the power LED is on to ensure the phone is powered on.

Why does the phone display “Network Unavailable”?

- Ensure that the Ethernet cable is plugged into the Internet port on the phone and the Ethernet cable is not loose.
- Ensure that the switch or hub in your network is operational.
- Contact your system administrator for more information.

Why can't I get a dial tone?

- Check for any loose connections and that the phone has been installed properly. For the


Installation instructions, refer to [Phone Installation](#).

- Check whether dial tone is present on one of the audio modes.
- Switch between the Handset, Headset (if present) or Hands-Free Speakerphone to check whether dial tone is present for one of the audio modes.
- If the dial tone exists on another audio mode, connect a different handset or headset to isolate the problem.


Where to set the tone?

You can set the tone on web interface:

- Click Setting→Tones
- Define the dial tone, ringing, busy tone...
- For the tones, you can check with your system administrator.
- More Click [Tone Notes](#).

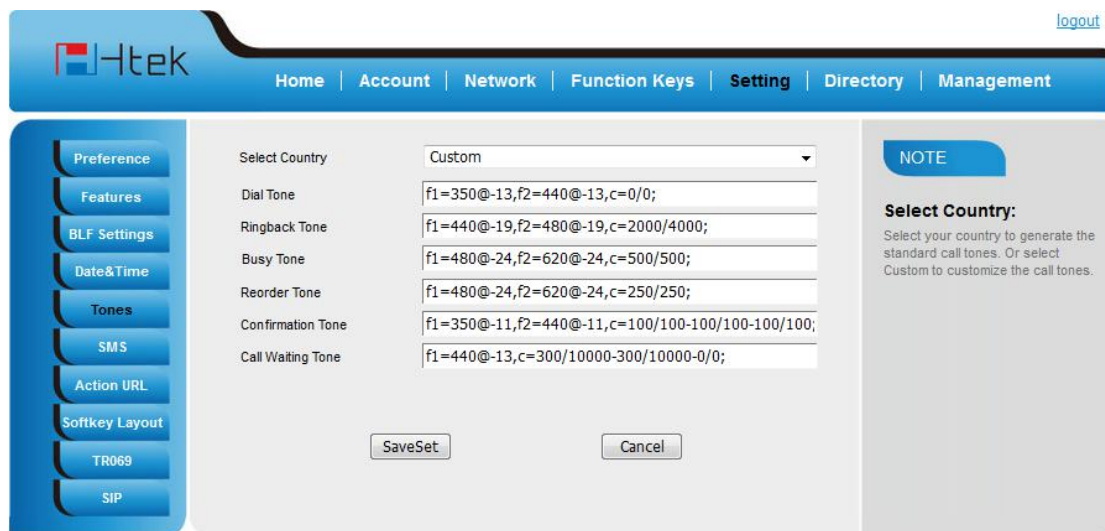


How to download XML Configuration?

- Click Management→Configuration→ 

How to Import Trusted CA certificate?

- Click Management→Trusted CA

[logout](#)



[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

[Password](#)

[Upgrade](#)

[Auto Provision](#)

[Configuration](#)

[Trusted CA](#)

[Server CA](#)

[Tools](#)

[Restart](#)

[Reboot](#)

Index	Issued TO	Issued By	Expiration
1			<input type="checkbox"/>
2			<input type="checkbox"/>
3			<input type="checkbox"/>
4			<input type="checkbox"/>
5			<input type="checkbox"/>
6			<input type="checkbox"/>
7			<input type="checkbox"/>
8			<input type="checkbox"/>
9			<input type="checkbox"/>
10			<input type="checkbox"/>

[Delete](#)

Import Trusted Certificate Files

Trusted Certificates

☒ Default Certificates
☐ Custom Certificates
☐ All Certificates

NOTE


Password:
If you login as an administrator, you can modify admin's password here.

Trusted CA:
you can import TLS certificate file here.

How to Import Server CA certificate?

- Click Management→Server CA

[logout](#)



[Home](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

[Password](#)

[Upgrade](#)

[Auto Provision](#)

[Configuration](#)

[Trusted CA](#)

[Server CA](#)

[Tools](#)

[Restart](#)

[Reboot](#)

Issued TO	Issued By	Expiration

[Delete](#)

Import Server Certificate Files

Device Certificates

☒ Default Certificates
☐ Custom Certificates

NOTE

Password:
If you login as an administrator, you can modify admin's password here.

Trusted CA:
you can import TLS certificate file here.

How to use Vlan?

- For Vlan information, please click [VLAN Note](#)

How to use LLDP?

- For LLDP information, please click [VLAN Note](#)

- VLAN Notes including:
 1. Voice VLAN
 2. Major Benefits of Using VLANs
 3. VLAN discovery method on Htek ip phones
 4. LLDP Feature on Htek IP Phones
 5. Supported TLVS of IP Phones
 6. Configuring LLDP Feature
 7. DHCP VLAN
 8. Open the DHCP VLAN on the Htek IP Phones
 9. VLAN under Bridge Mode
 10. VLAN under NAT Mode

How to Set LCD and Web GUI?

- Click [LCD and Web GUI custom Guide](#)

How to Upgrade via FTP?

- Click [How to Upgrade Note](#)

How to make Ringtone?

- Click [How to Make Ringtone](#)

How to use Open VPN?

- Click [Open VPN note](#)

Provisioning Guide on Free PBX

- Click [Set Auto Provision on FreePBX](#)

Redundancy Server

- Click [_Redundancy Server](#)

How to Use Auto Provision Phonebook?

- Click [About AP Phonebook](#)

All Documents

- Click [Documents Guide](#), you can get all tech files.